

## Sensor head

**(F)EMAX - XXX - XX.X - X - XXX - X - X**

Type

**EMAX** (unguided) / **FEMAX** (guided)

Version

**000** = standard

**001** = 1. special version

Signal cable length

**01,5** = 1,5 m (standard)

deviating lengths on request

Resolution

**2**

Interface

**422** = Standard - RS-422

**A22** = *Optional - addressable RS-422*

**232** = *Optional - RS-232*

**SSI** = *Optional - SSI*

**CAO** = *Optional - CANopen standard*

### Baud rate (RS 232 and RS422)

**0** = 9600 Baud

**standard**

**1** = 19200 Baud

optional (on request)

**2** = 34800 Baud

optional (on request)

### Bitrate (CAN open)

**0** = 10 KBit/s

optional (on request)

**1** = 20 KBit/s

optional (on request)

**2** = 50 KBit/s

optional (on request)

**3** = 125 KBit/s

optional (on request)

**4** = 250 KBit/s

**standard**

**5** = 500 KBit/s

optional (on request)

**6** = 800 KBit/s

optional (on request)

**7** = 1 MBit/s

optional (on request)

### Number of Bits (SSI)

**0** = 25 bit

**standard**

**1** = 32 bit

optional (on request)

Further options

**V** = sealed version IP67

**I** = additional incremental output **A/B**

## Accessories:

### EMAX and FEMAX → Magnetic tape AB20-50-20-2-R-11:

Please order the tape in the desired length, The cover band is included in the delivery.

Attention! Magnetic Tape Length = effective Measuring Length + 0.15 m

Example for 1 m of measuring length: *AB20-50-20-2-R-11 / 1.15 m*

### FEMAX-Rail → FS-1000 (1 m) / FS1500 (1,5 m) / FS-2000 (2 m):

In case of ordering length's > 2 m, please assemble the rail pieces corresponding to the desired measuring length (up to 8 m) and indicate it with the order. The complete magnetic tape (whole length) will be stick into the arranged rails then.