



DS230 / DS240 Series

Safety Monitors for SinCos and Incremental Encoders / Sensors

Product features:

- Monitoring of underspeed, overspeed, standstill and direction of rotation
- SIL3 and PLe certification
- Safety functions equivalent to EN 61800-5-2 (SS1, SS2, SOS, SLS, SDI, SSM, SLI, SBC, STO, SMS)
- Inputs for:
 - 2 SinCos encoders
 - 2 RS422 incremental encoders
 - 2 HTL/PNP incremental encoders, proximity switches or
 - 2 - 4 control signals
- Outputs:
 - 1 relay output 5 ... 36 VDC (NO), (safety related)
 - 1 analog output 4 ... 20 mA, (safety related)
 - 4 HTL control outputs, (safety related)
- Signal splitter:
 - 1 SinCos Splitter Output, (safety related)
 - 1 RS422 Splitter Output, (safety related)
- Mounting to 35 mm top hat rail (according to EN 60715)
- USB interface for simple parametrization by the OS 6.0 operator surface
- Optionally available: display and programming unit BG230 for parametrization and indication

Available Models:

- DS230: includes all inputs, all outputs and signal splitter
- DS236: includes all inputs, all outputs, but no signal splitter
- DS240: 1 SinCos input (SIL3/PLe), all control inputs, all outputs and signal splitter
- DS246: 1 SinCos input (SIL3/PLe), all control inputs, all outputs no signal splitter

Version:	Description:
Ds23001a_oi/mb/07/14	First edition pre series
Ds23003a_oi/sn/ag/06/15	First edition series
Ds230_03b_oi/Oct-15/ag	Diverse adaptations and extensions
Ds230_04a_oi/Dez.-15/af-ag	Adaptations and extensions of parameters
Ds230_04b_oi/af-ag	Parameter description and list removed (separate manual). Extensive changes and extensions. New chapters added.
Ds230_04c_oi/af-ag	Chapter 11. Monitoring Functions supplemented Supplementation in chapters 6.4 / 6.6 / 6.7 / 6.11 New images : 1 x in chapter 8.2 and 2 x in 8.3
Ds230_04d_oi/af-ag	Changes in chapter "Runtime Test" Small corrections in chapter "Monitoring Functions" New chapter "Response times" added
Ds230_04e_oi/af/hk	Various adaptations and modifications Additional chapter for wiring of inputs, outputs, EDM function Extensions and amendments in chapter „Setup“
DS230_04f_oi/sn	Adaptations of safety characteristic data

Legal notices:

All contents included in this manual are protected by the terms of use and copyrights of motrona GmbH. Any reproduction, modification, usage or publication in other electronic and printed media as well as in the internet requires prior written authorization by motrona GmbH.

Important note about this document:

In addition to this manual, the separate parameter description **Ds230_04x_pd** must be used. It contains a detailed description and a list of all parameters for setup and operation.

Further important manuals:

- OS6.0 Operating Manual
- OS6.0 User Installation Manual
- BG230 Operating Manual (optionally)



Table of Contents

1. Safety Instructions and Responsibility	7
1.1. General Safety Instructions	7
1.2. Use according to the intended purpose	7
1.3. Installation	8
1.4. Cleaning, Maintenance and Service Notes	8
2. Introduction	9
3. Available Models	10
4. Block Diagrams and Connections.....	11
4.1. DS230 Block Diagram	11
4.2. DS230 Connections	11
4.3. DS236 Block Diagram	12
4.4. DS236 Connections	12
4.5. DS240 Block Diagram	13
4.6. DS240 Connections	13
4.7. DS246 Block Diagram	14
4.8. DS246 Connections	14
5. Description of Connections	15
5.1. Power Supply	16
5.2. Encoder Supply	17
5.3. SinCos Encoder Inputs	20
5.4. RS422 Encoder Inputs	21
5.5. HTL Encoder Inputs / Control Inputs	22
5.6. SinCos-Splitter-Output	24
5.7. RS422-Splitter-Output	25
5.8. Analog-Output 4 to 20 mA	26
5.9. Control Outputs	27
5.10. Relay Output	28
5.11. DIL Switch	29
5.12. BG230 Operator Interface	30
5.13. USB Interface for the OS6.0 Operator Surface	30
5.14. LEDs / Status Indication	31

6. Operational Modes	32
6.1. Application: 2 SinCos Encoders	32
6.2. Application: 1 SIL3 SinCos Encoder only	33
6.3. Application: 1 SinCos Encoder and 1 HTL Encoder (quadrature)	34
6.4. Application: 1 SinCos Encoder and 1 HTL Encoder (single channel)	35
6.5. Application: 2 Quadrature HTL Encoders	36
6.6. Application: 1 Quadrature Encoder and 1 Single Channel HTL Encoder	37
6.7. Application: 2 Single Channel HTL Encoders	38
6.8. Application: 1 SinCos and 1 RS422 Encoder	39
6.9. Application: 2 RS422 Encoders	40
6.10. Application: 1 RS422 Encoder and 1 quadrature HTL Encoder	41
6.11. Application: 1 RS422 and 1 single channel HTL Encoder	42
7. Commissioning	43
7.1. Cabinet installation	43
7.2. Preparations for Setup	43
7.3. Parameter Setting by PC	44
7.4. Visualization by the BG230 Operator Unit	45
8. Setup	46
8.1. Operational Mode Settings	46
8.2. Direction Settings	46
8.3. Frequency Ratio Settings	47
8.4. Clear Errors	48
8.5. Sampling Time Settings	48
8.6. Wait Time Settings	49
8.7. Setting of F1-F2 Selection	49
8.8. Setting of the Divergence Parameters	50
8.9. Setting of Power-up Delay	51
8.10. Setting of the SinCos Output	51
8.11. Setting of the RS422 Output	51
8.12. Analog Output Settings	52
8.13. Digital Output Settings	52
8.14. Relay Output Settings	52
8.15. Digital Input Settings	53
8.16. Producing an Error	53

9. Completion of the Setup Procedure	54
10. Error Detection	55
10.1. Error Representation.....	55
10.2. Initialization Test	56
10.3. Runtime Test.....	57
10.4. Error Clearing	59
10.5. Error Detection Time.....	59
11. Monitoring Functions.....	60
11.1. Overspeed (Switch Mode = 0)	60
11.2. Underspeed (Switch Mode = 1)	61
11.3. Frequency Band (Switch Mode = 2).....	62
11.4. Standstill (Switch Mode = 3)	63
11.5. Overspeed (Switch Mode = 4)	64
11.6. Underspeed (Switch Mode = 5)	65
11.7. Frequency Band (Switch Mode = 6).....	66
11.8. Frequency > 0 Hz (Switch Mode = 7)	67
11.9. Frequency < 0 Hz (Switch Mode = 8)	68
11.10. Clock Generation for Pulsed Readback (Switch Mode = 9).....	69
11.11. STO/SBC/SS1 by Input (Switch Mode = 10).....	70
11.12. STO/SBC Produced by Situation (Switch Mode = 10)	71
11.13. SS1 Produced by Input (Switch Mode = 10)	71
11.14. SLS Produced by Input (Switch Mode = 11)	72
11.15. SMS (Switch Mode = 12).....	73
11.16. SDI Produced by Input (f > 0 Hz), (Switch Mode = 13).....	74
11.17. SDI Produced by Input (f < 0 Hz) (Switch Mode = 14).....	75
11.18. SSM via Input (Switch Mode = 15).....	76
11.19. SSM via Input (Switch Mode = 16).....	77
11.20. SOS/SLI/SS2 via Input (Switch Mode = 17)	78
11.21. Standstill via Input (Switch Mode = 18)	79
12. Response times	80
12.1. Response Time of the Relay Output	80
12.2. Response Time of the Analog Output.....	80
12.3. Response Time of the Digital Outputs.....	81
12.4. Response Time of the Splitter Output:	81
12.5. Response Time of the Frequency Error Evaluation	82
13. Connection of the Inputs.....	84
13.1. Connection of Unipolar, Un-Clocked Inputs.....	84
13.2. Connection of Unipolar, Clocked Inputs	85
13.3. Connection of Bipolar, Un-Clocked Inputs.....	86

14. Connection of the Outputs	87
15. EDM Function	87
15.1. EDM: 1 Relay, 1 Output, 1 Input (NO).....	88
15.2. EDM: 1 Relay, 1 Output, 1 Input (NC).....	89
15.3. EDM: 2 Relays, 1 Output, 1 Input (NC, NO).....	90
15.4. EDM: 2 Relays, 2 Outputs, 1 Input (NC, NO)	91
15.5. EDM: 2 Relays, 2 Outputs, 2 Inputs (NC).....	92
15.6. EDM: 2 Relays, 2 Outputs, 2 Inputs (NO).....	93
15.7. EDM: 2 Relays, 2 Outputs, 2 Inputs (NO, NC).....	94
16. Technical Specifications.....	95
16.1. Dimensions	97
17. Certificate	98

1. Safety Instructions and Responsibility

1.1. General Safety Instructions

This operation manual is a significant component of the unit and includes important rules and hints about the installation, function and usage. Non-observance can result in damage and/or impairment of the functions to the unit or the machine or even in injury to persons using the equipment!

Please read the following instructions carefully before operating the device and observe all safety and warning instructions! Keep the manual for later use.

A pertinent qualification of the respective staff is a fundamental requirement in order to use these manual. The unit must be installed, configured, commissioned and serviced by a qualified electrician.

Liability exclusion: The manufacturer is not liable for personal injury and/or damage to property and for consequential damage, due to incorrect handling, installation, operation and maintaining. Further claims, due to errors in the operation manual as well as misinterpretations are excluded from liability.

In addition the manufacturer reserves the right to modify the hardware, software or operation manual at any time and without prior notice. Therefore, there might be minor differences between the unit and the descriptions in operation manual.

The raiser respectively positioner is exclusively responsible for the safety of the system and equipment where the unit will be integrated.

During installation, operation or maintenance all general and also all country- and application-specific safety rules and standards must be observed.

If the device is used in processes, where a failure or faulty operation could damage the system or injure persons, appropriate precautions to avoid such consequences must be taken.

1.2. Use according to the intended purpose

The unit is intended exclusively for use in industrial machines, constructions and systems.

Non-conforming usage does not correspond to the provisions and lies within the sole responsibility of the user. The manufacturer is not liable for damages which are arisen through unsuitable and improper use. Please note that device may only be installed in proper form and used in a technically perfect condition in accordance to the technical Specifications. The device is not suitable for operation in explosion-proof areas or areas which are excluded by the EN 61010-1 standard.

1.3. Installation

The device is only allowed to be installed and operated within the permissible temperature range. Please ensure adequate ventilation and avoid all direct contact between the device and hot or aggressive gases and liquids.

Before installation or maintenance, the unit must be disconnected from all voltage-sources. Further it must be ensured that no danger can arise by touching the disconnected voltage-sources.

Devices which are supplied by AC-voltages, must be connected exclusively by switches, respectively circuit-breakers with the low voltage network. The switch or circuit-breaker must be placed as near as possible to the device and further indicated as separator.

Incoming as well as outgoing wires and wires for extra low voltages (ELV) must be separated from dangerous electrical cables (SELV circuits) by using double resp. increased isolation.

All selected wires and isolations must be conforming to the provided voltage- and temperature-ranges. Further all country- and application-specific standards, which are relevant for structure, form and quality of the wires, must be ensured. Indications about the permissible wire cross-sections for wiring are described in the technical specifications.

Before first Start-up it must be ensured that all connections and wires are firmly seated and secured in the screw terminals. All (inclusively unused) terminals must be fastened by turning the relevant screws clockwise up to the stop.

Overvoltage at the connections must be limited to values in accordance to the overvoltage category II.

For placement, wiring, environmental conditions as well as shielding and earthing / grounding of the supply lines the general standards of industrial automation industry and the specific shielding instructions of the manufacturer are valid. Please find all respective hints and rules on www.motrona.com/download.html --> [General EMC Rules for Wiring, Screening and Earthing].

1.4. Cleaning, Maintenance and Service Notes

To clean the front of the unit please use only a slightly damp (not wet!), soft cloth. For the rear no cleaning is necessary. For an unscheduled, individual cleaning of the rear the maintenance staff or assembler is self-responsible.

During normal operation no maintenance is necessary. In case of unexpected problems, failures or malfunctions the device must be shipped for back to the manufacturer for checking, adjustment or reparation. Unauthorized opening and repairing can have negative effects or failures to the protection-measures of the unit.

In case of continuous operation the DS unit must be switched on and off for at least 1 times a year.

2. Introduction

This series of speed monitors is suitable for safety-related monitoring tasks, e.g. over-speed, under-speed, standstill and direction of rotation. This SIL3/PLe certified generation of devices was developed to achieve functional safety by supporting a wide range of sensors and encoders in different combinations.


Due to parallel encoder inputs these devices are perfectly suitable for the retrofitting of existing plants and machines which are using “non-safe” sensors. This offers a great opportunity to save costs for expensive and certified sensors. Also the costs for new installations and adjustments can be reduced significantly by using the existing components and wiring.

Typical examples are centrifuges, cranes, wind power or hauling plants.

Special features:


- Additionally suitable for use with setup operations,
e. g. for manual settings in plants with open protection doors and reduced speed
- All models are safety-related and dually certified according to
EN 61508, EN 62061 / SIL3 and EN ISO 13849-1 Cat. 3 / PLe,
even when using “non-safety-related” standard sensors or encoders
- Generally, the use of 2 sensors / encoders is required because only then SIL3 / PLe can be achieved. The only exception is the use of a SIL3 PLe certified SinCos encoder.
- Wide input frequency range and fast response time
- Very versatile range of possible monitoring functions
- It is recommended to setup the DS unit via the front USB port by using a PC and the OS6.0 operator software.
- The final Safety Integration Level (SIL) results from the selected configuration and from external components connected to the unit.
- The additional display and operating unit BG230 (optional accessory, not included in the delivery) is used to display the encoder frequencies in converted operator units and further for visual monitoring of the DS unit. The BG230 can also be used for a simple configuration as well as for setup tasks.

3. Available Models

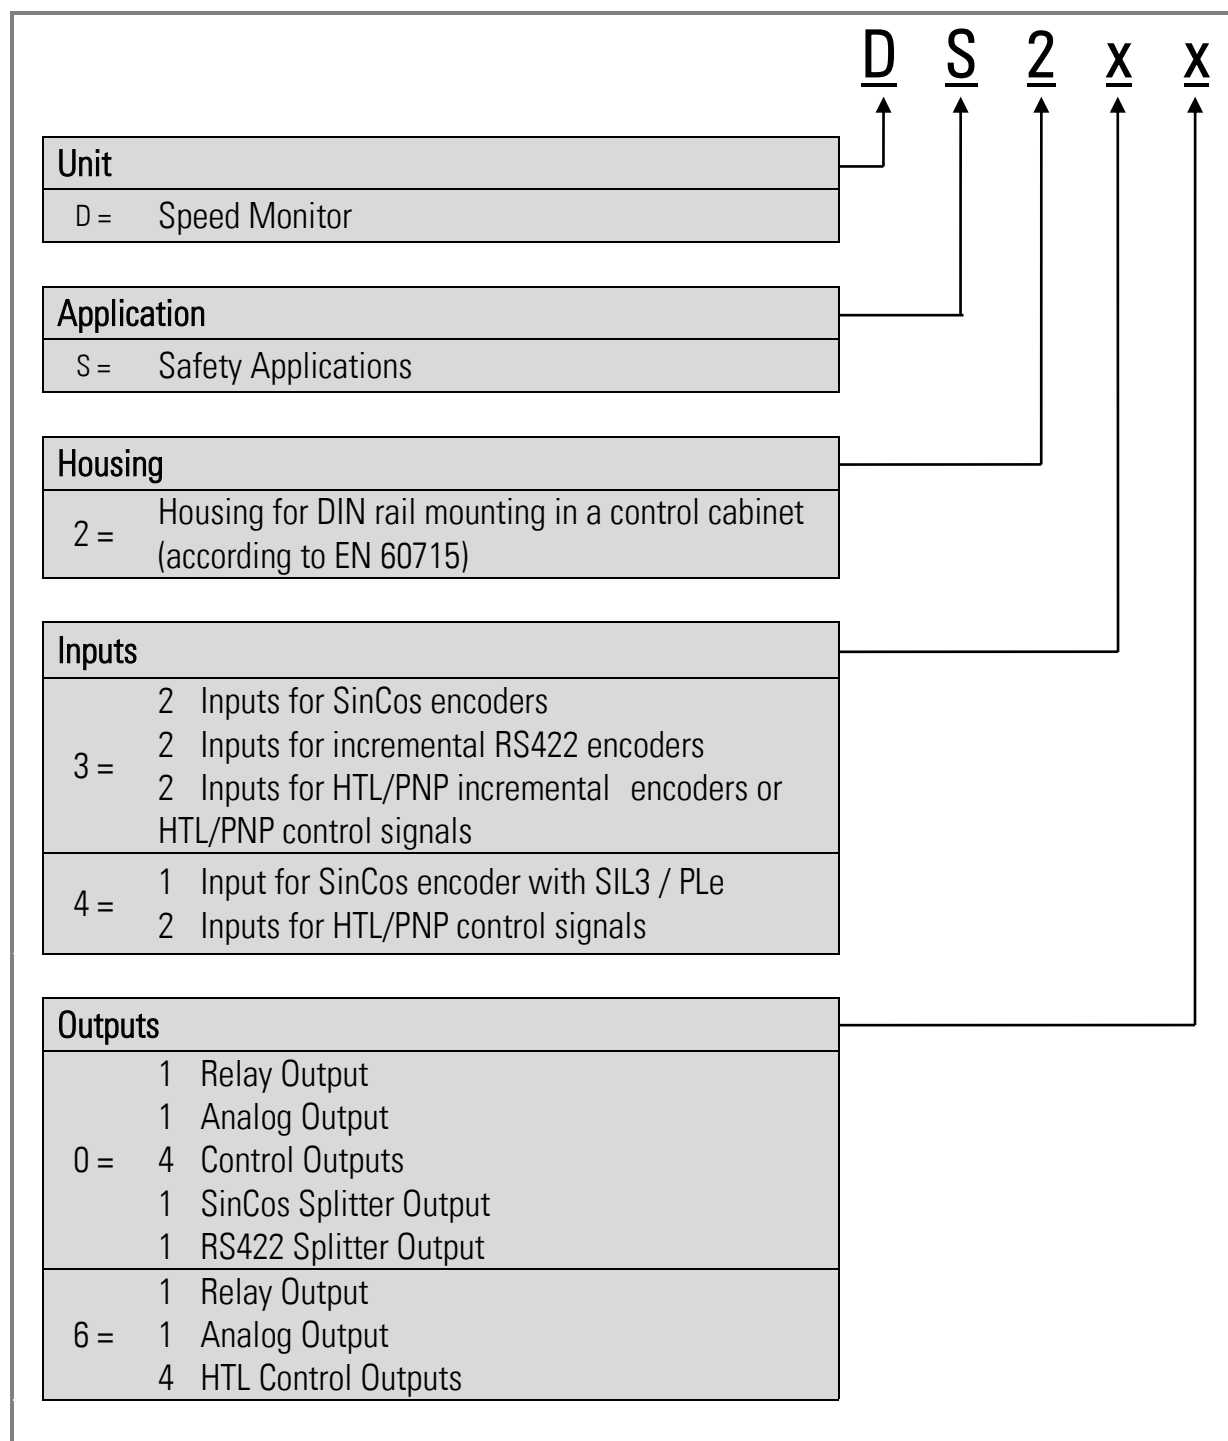


4. Block Diagrams and Connections

4.1. DS230 Block Diagram

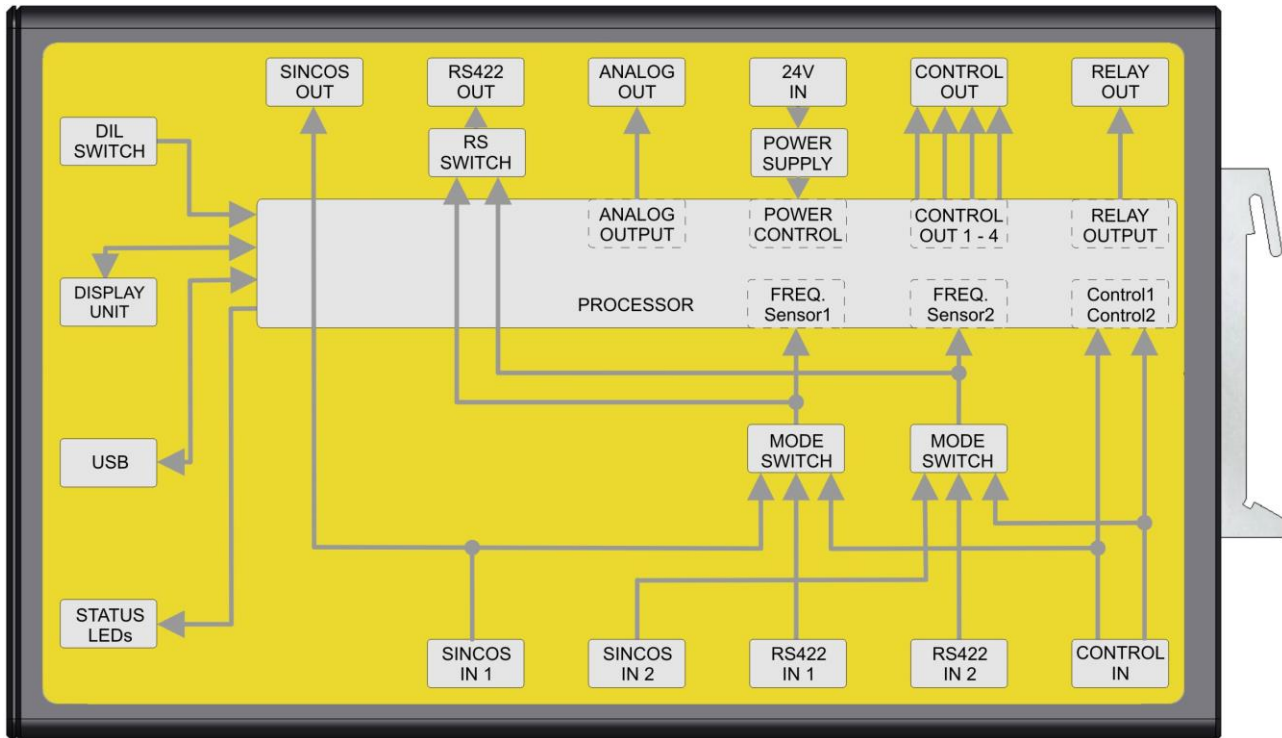


4.2. DS230 Connections

(The figure shows the available ports)

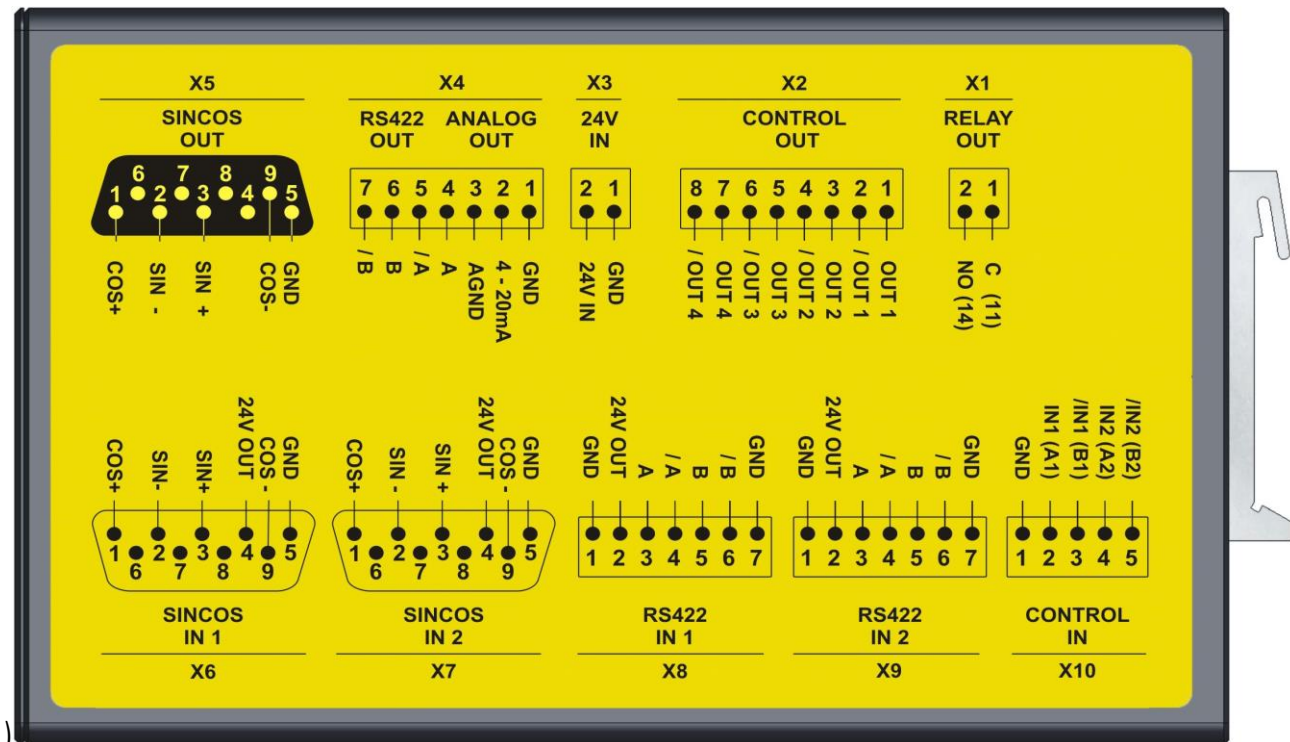


4.3. DS236 Block Diagram

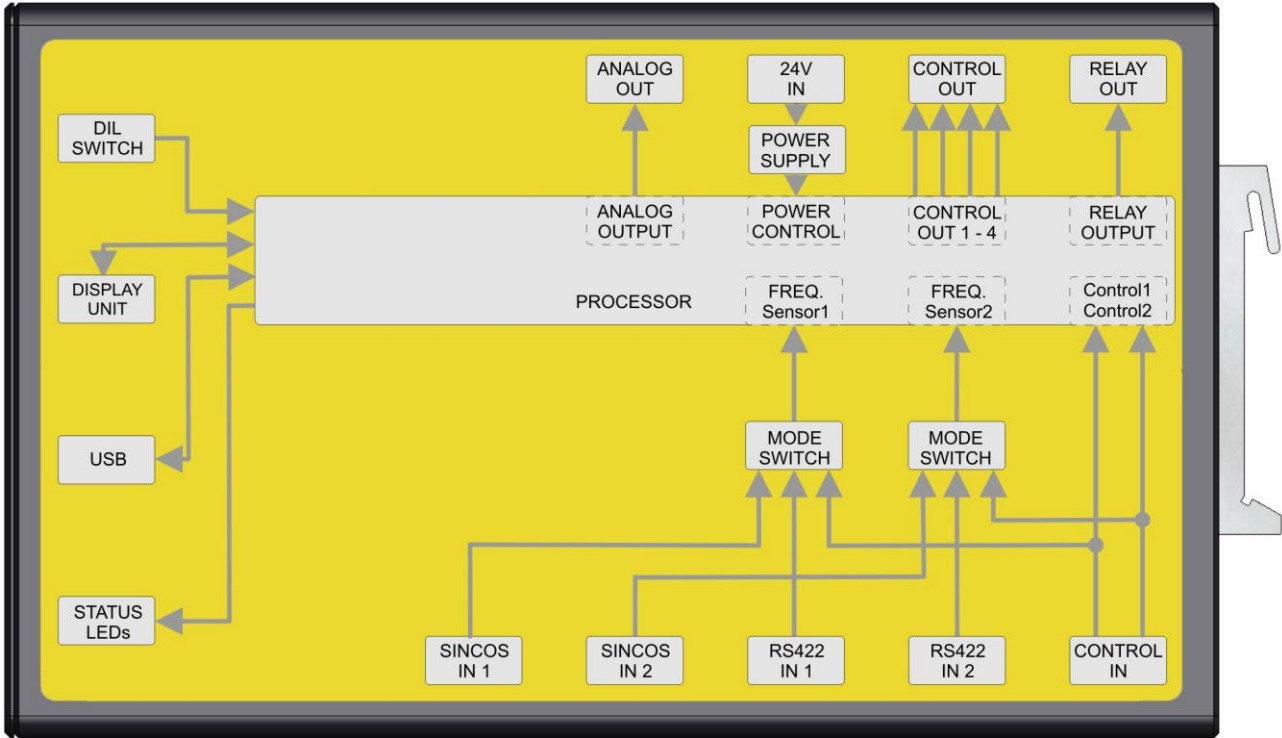


4.4. DS236 Connections

(The figure shows the available ports)

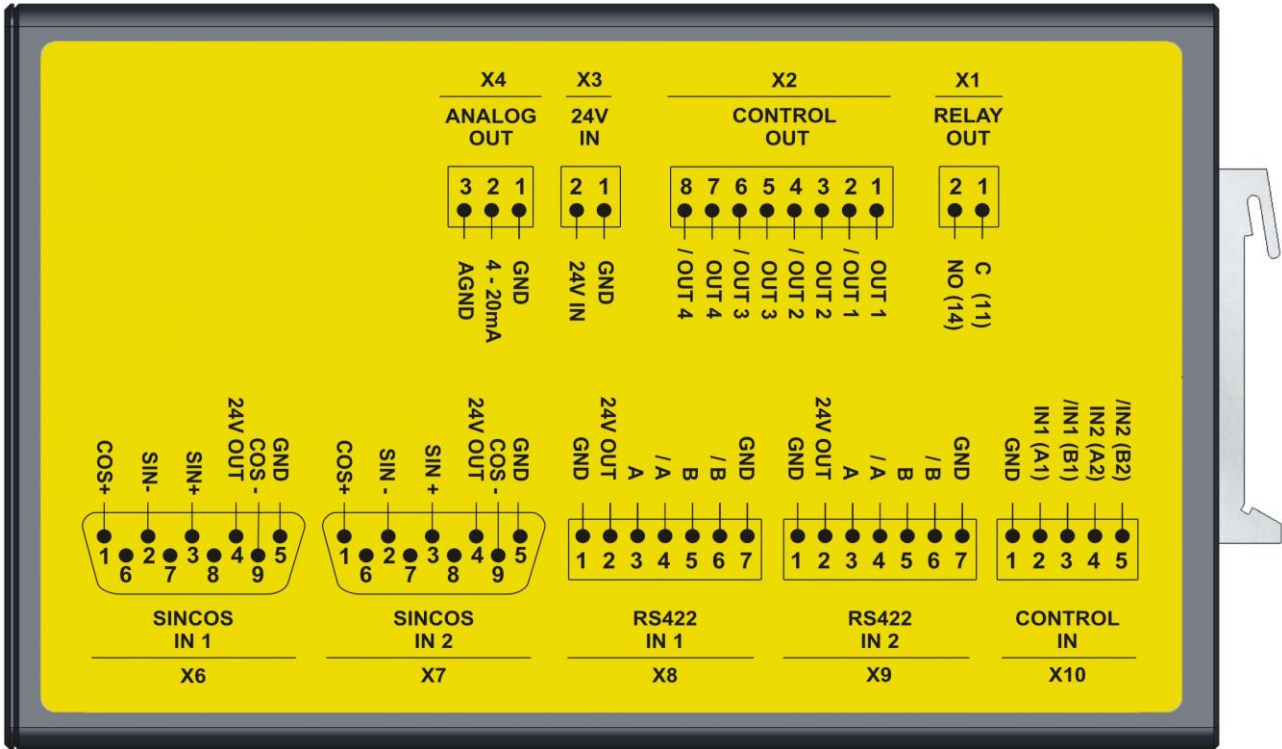


4.5. DS240 Block Diagram

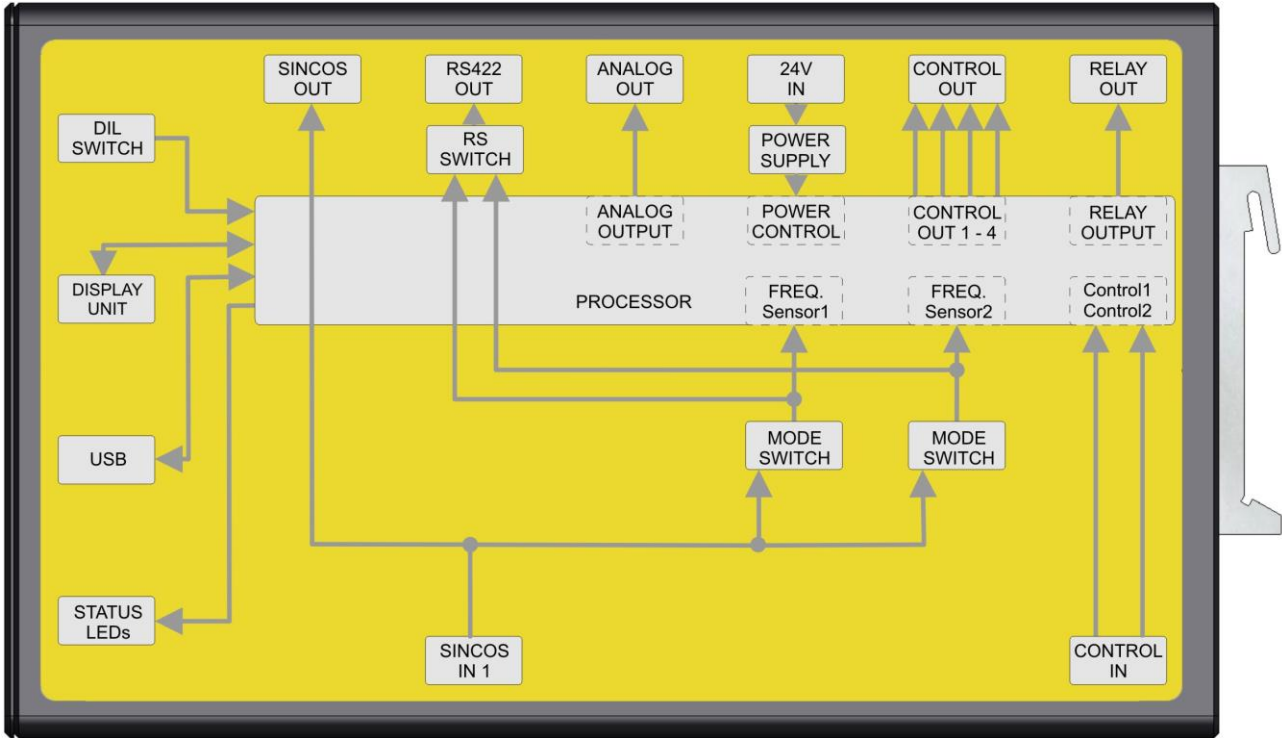


4.6. DS240 Connections

(The figure shows the available ports)

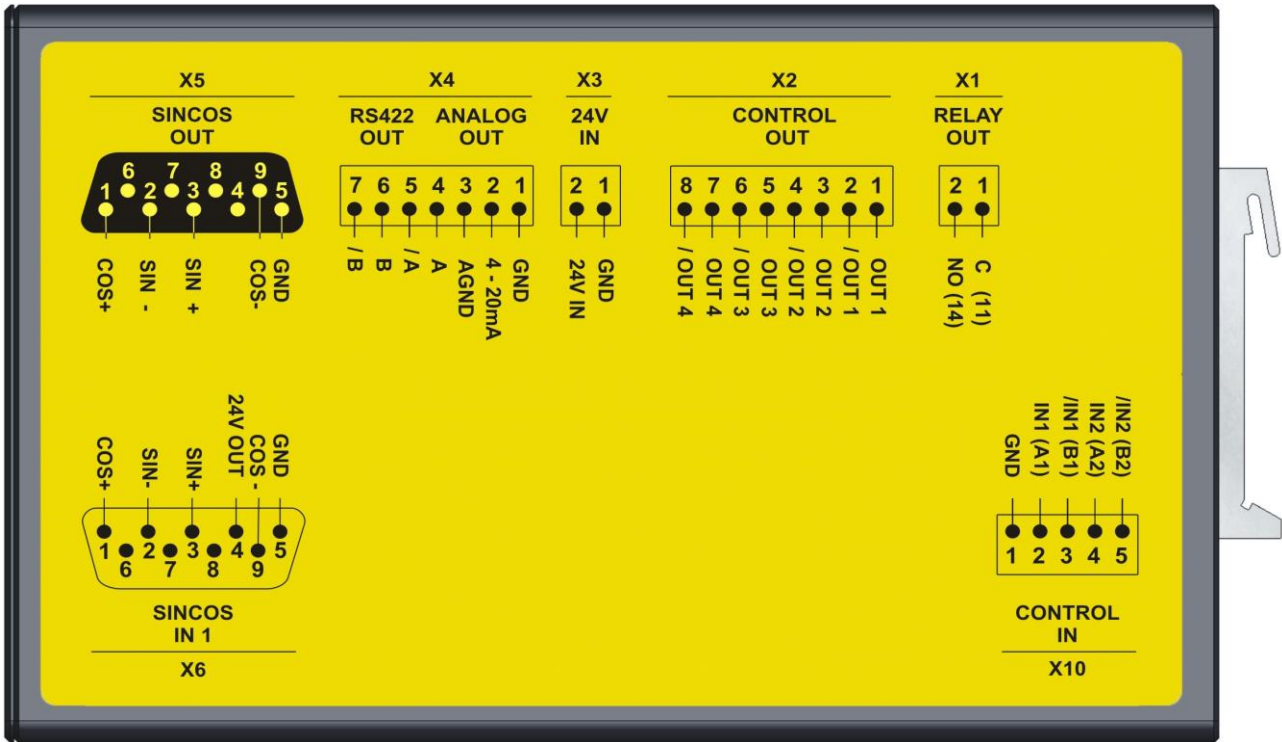


4.7. DS246 Block Diagram

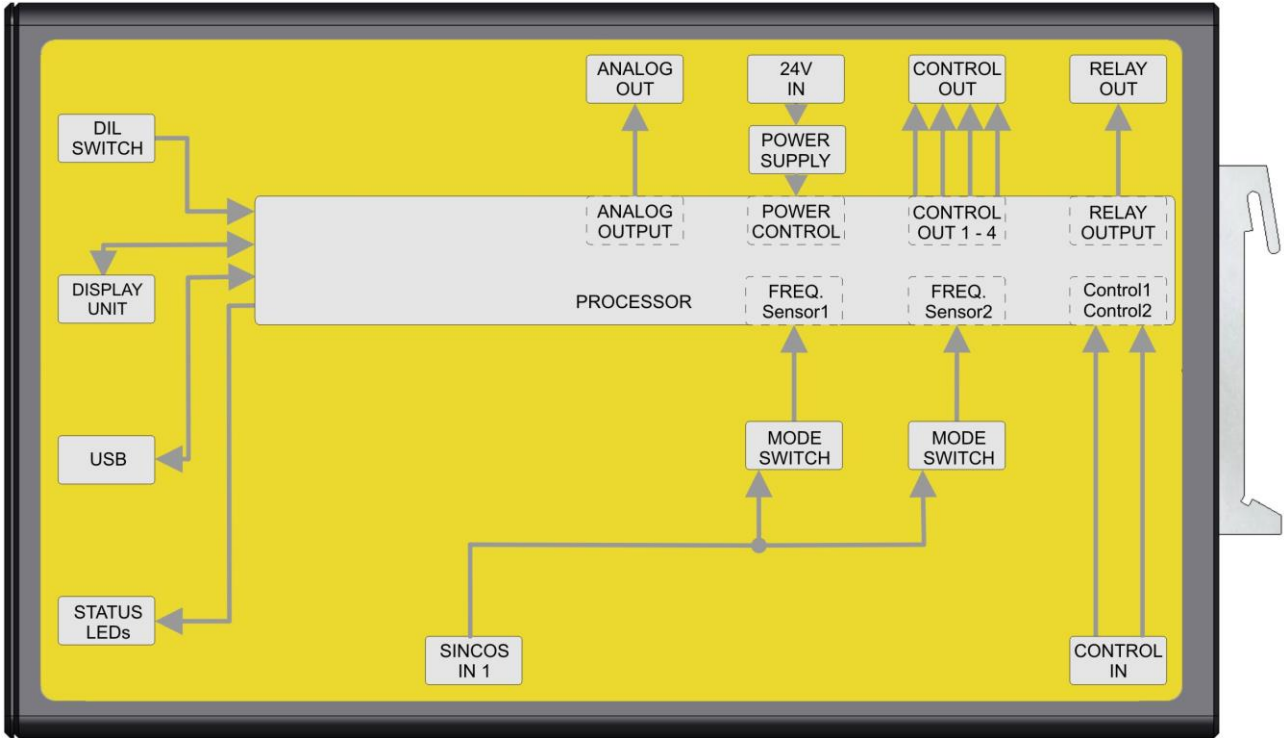

4.8. DS246 Connections

(The figure shows the available ports)

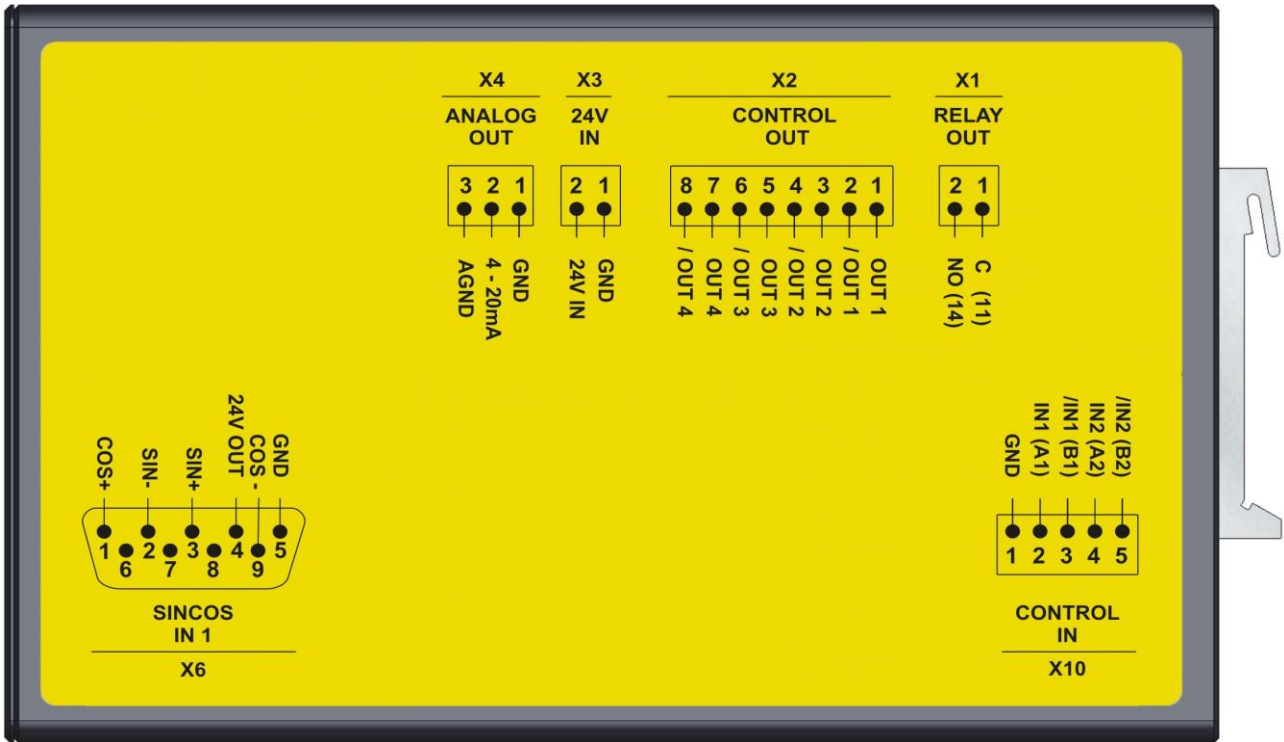

5. Description of Connections

This chapter describes only the electrical connections and their general function.

Name	Description see chapter
X1 RELAY OUT	5.10 Relay Output
X2 CONTROL OUT	5.9 Control Outputs
X3 24V IN	5.1 Power Supply
X4 ANALOG OUT	5.8 Analog-Output 4 to 20 mA
X4 RS 422 OUT	5.7 RS422-Splitter-Output
X5 SINCOS OUT	5.6 SinCos-Splitter-Output
X6 SINCOS IN 1	5.3 SinCos Encoder Inputs
X7 SINCOS IN 2	5.3 SinCos Encoder Inputs
X8 RS422 IN 1	5.4 RS422 Encoder Inputs
X9 RS422 IN 2	5.4 RS422 Encoder Inputs
X10 CONTROL IN	5.5 HTL Encoder Inputs / Control Inputs
X11	5.12 BG230 Operator Interface
X12	5.13 USB Interface for the OS6.0 Operator Surface
S1	5.11 DIL Switch
ERROR - ON	5.14 LEDs / Status Indication



The connection to the outputs is only safe when the follower unit is able to detect the fault status of each output and when the outputs are configured accordingly.



In order to prevent simultaneous damages to the cables by external influences, the encoder resp. sensor lines must be kept physically apart from each other.

5.1. Power Supply

If the unit is connected to a DC power supply network which also supplies further devices or systems, it must be ensured that no voltages ≥ 60 V can occur at the terminals [X3:1] und [X3:2].

If this cannot be ensured, the unit must be supplied by a separate DC power pack, which must not be connected to further devices or systems.

The requirements for both kinds of power supplies are:

- Nominal voltage range from 18 ... 30 VDC
- Ripple $< 10\%$ @ 24 V
- External fuse (2.5 A, medium time lag) required

A separate power pack must cover the following requirements:

- The switch-on current of the unit is not higher than 2.5 A
- The consumption of the unit is approx. 23 W (at permissible load and without short-circuit)

The 18 ... 30 VDC power supply must be connected via the pluggable 2-position screw terminal strip [X3]. The power supply input is protected by an internal reverse polarity protection.




pluggable 2-position screw terminal [X3]




- The DC input must be protected by an external fuse (type and value see technical specifications).
- The DS unit has no internal galvanic isolation, thus all GNDs are interconnected. Please avoid any GND loops to the power supply input [X3].
- Even with use of a SIL3 certified power supply ($U_{\text{FAIL}} < 60$ V), an external fuse must be installed.

5.2. Encoder Supply

The unit offers an auxiliary voltage output for separate supply of the encoders or sensors in use. The encoder supply must be taken directly from the safety monitor, or via relay contact when using an indirect power supply.

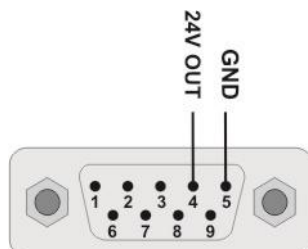

Encoder supply: SinCos inputs [X6] [X7]

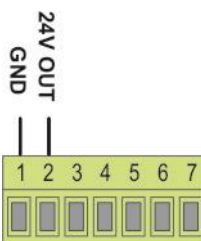

Encoder supply: RS422 inputs [X8] [X9]

HTL encoders or sensors must also be connected to the encoder supply terminals of the RS422 inputs

The maximum load of the encoder supply is 200 mA per channel (Sensor 1 and Sensor 2). The unit provides an auxiliary encoder supply for each sensor channel (HTL encoders will be supplied by the encoder supply of the RS422 inputs). The level of the supply voltage is approximately by 2 V lower than the 18 ... 30 VDC power supply at terminal [X3].

Supply	SinCos inputs	RS422 inputs	HTL inputs
Sensor 1	[X6:4] [X6:5]	[X8:1] [X8:2]	[X8:1] [X8:2]
Sensor 2	[X7:4] [X7:5]	[X9:1] [X9:2]	[X9:1] [X9:2]

When powering up the encoder supply, the maximum input current of the safety unit could be exceeded, depending on the encoders in use. In this case, the encoder supply would not be enabled and an error appears.


In case of such problems, or if another voltage level is required, the encoder supply can be switched on from an external voltage source via remote relay. In this case, it is mandatory to energize the relay from the internal encoder supply of the DS unit.



- In case of a direct encoder supply it is mandatory to operate the encoders with the auxiliary voltage from the unit.
- Indirect encoder supply must in any case be carried out via relay, energized by the auxiliary voltage of the DS unit.


5.2.1. Direct Encoder Supply

With direct encoder supply, the encoder must be connected as shown in the figure below:

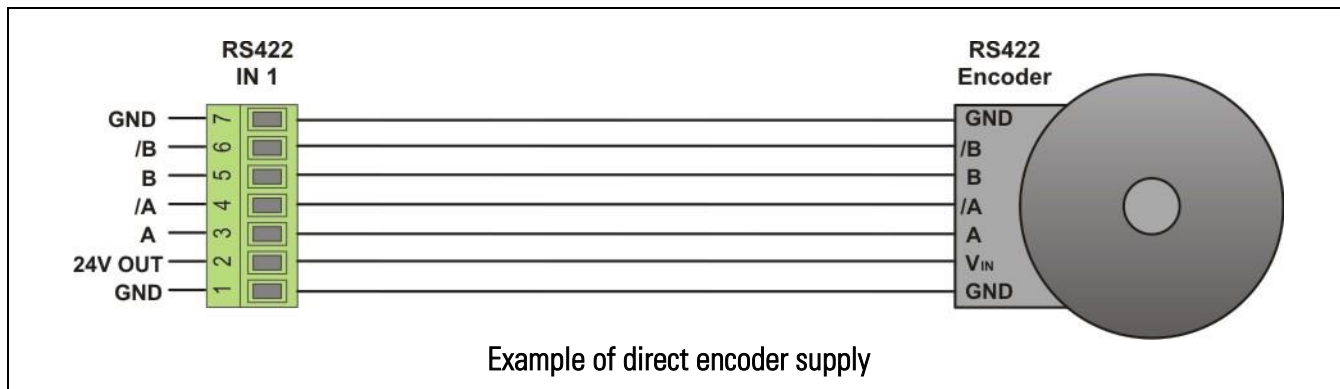


5.2.2. Indirect Encoder Supply

Indirect encoder supply must necessarily, and each separately, be switched on by use of a relay, energized with the auxiliary voltage of the unit. This is necessary, because no encoder signals must be applied to the safety monitor before the unit has successfully completed its initialization and self-test.

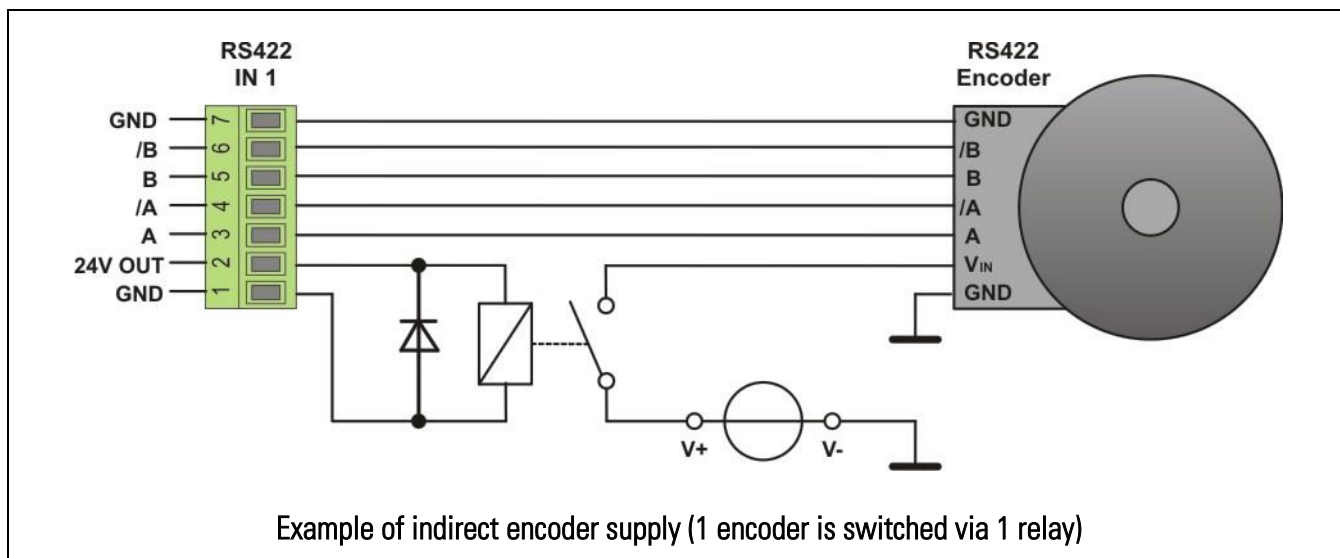

Continuation "External Encoder Supply"

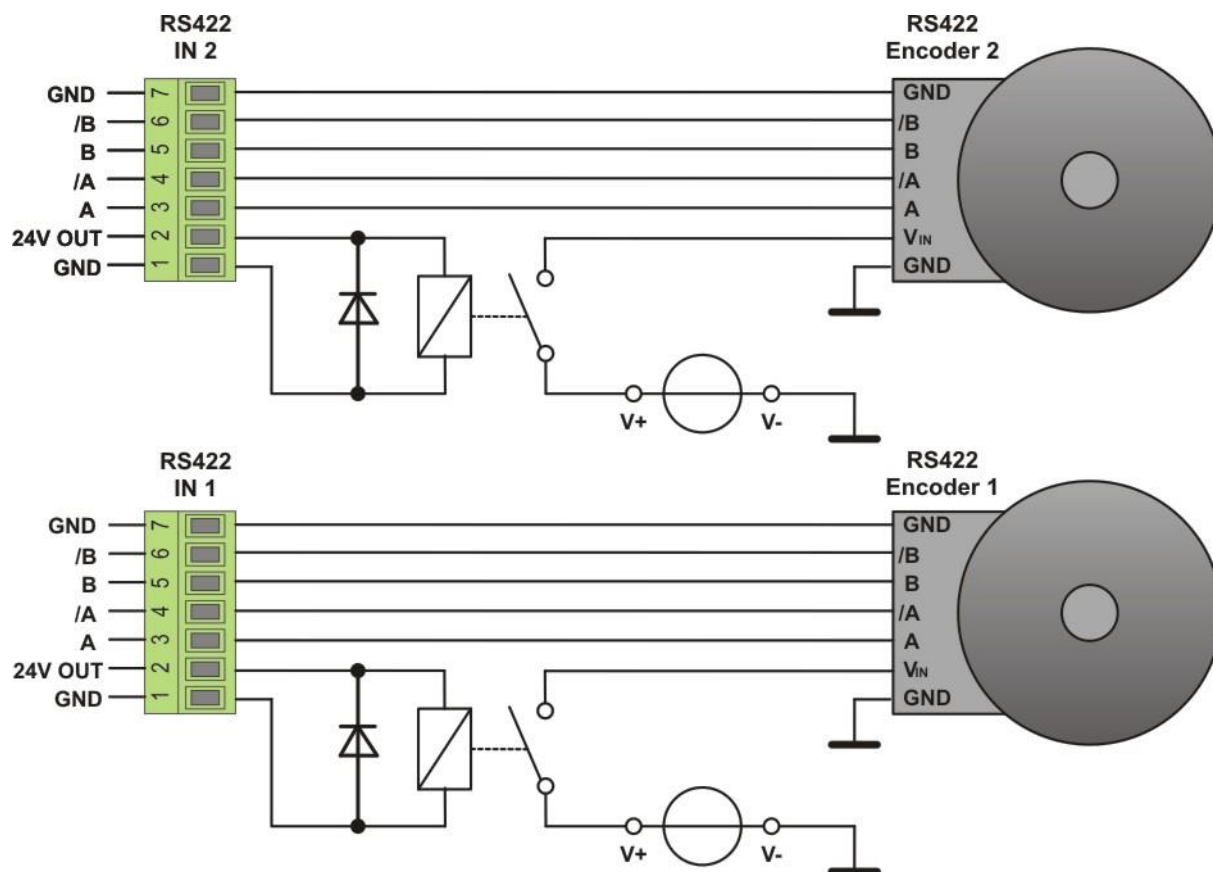

Example of indirect encoder supply (2 encoders are switched via 2 relays)



- Indirect encoder supply must necessarily and each separately be switched on via relay, energized by the auxiliary voltage of the unit.
- In case of indirect supply of both encoders, two independent supply sources and two separate relays must be used.

5.3. SinCos Encoder Inputs

The unit is suitable for operation with SinCos sensors or encoders using differential sine-cosine signal outputs of 1 V_{pp} and 2.5 V DC offset.

- **DS23x:** Parameter "Operational Mode" must be set to 0, 1, 2 or 6. The SinCos encoder can be connected by one of the two or by both 9-pin SUB-D connectors [X6] and [X7].
- **DS24x:** Parameter "Operational Mode" must be set to 0.
Connections use connector [X6] only.


It is mandatory to wire all available signal lines (SIN+, SIN-, COS+ and COS-).

The internal SinCos signal monitor checks the offset range of the signals as well as the Lissajous figure resulting from the signals.

There is no option for evaluating any zero or index pulses.

All input lines are already terminated by internal 120 Ohm load resistors.

The SinCos encoder must use the corresponding encoder supply at pins 4 and 5 of the connector.

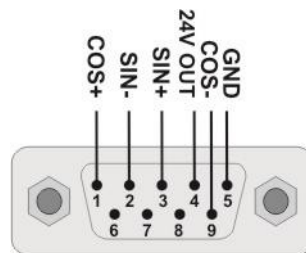

Male SUB-D connectors [X6], [X7]

With models DS23x only:

In following cases you must switch off the SinCos error detection in order to avoid continuous error indications:

- with use of SinCos encoders providing a different DC offset than specified
- with use of encoders providing a sine output and a sine-reference-output instead of two sine and two cosine signals

In these cases the encoders are suitable for frequency evaluation only, but not for signal forwarding, i.e. the SinCos output cannot be used.



5.4. RS422 Encoder Inputs

(DS230 and DS236 only)

If parameter WOperational ModeW is set to 7, 8 or 9, the unit will accept signals from incremental encoders with complementary TTL or differential RS422 levels.


Incremental encoders must be connected by one or both of the pluggable 7-pin screw terminals [X8] and [X9].

The RS422 input channels (A and /A resp. B and /B) are internally terminated by a dynamic terminating circuit (220 pF / 120 Ohm).

It is mandatory to connect up all signal lines (A, /A, B and /B).

There is no option for evaluation of any existing zero pulses (Z / Z).

It is mandatory to supply the RS422 encoder from terminals 1 and 2 of the respective terminal strip.

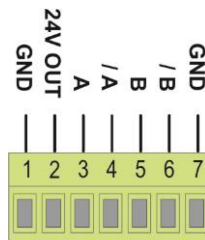

Pluggable 7-position screw terminal [X8], [X9]

5.5. HTL Encoder Inputs / Control Inputs

Screw terminal strip [X10 | CONTROL IN] provides 2 - 4 inputs for signals with HTL level and PNP switching characteristics.

Depending on the setting of parameter "Operational Mode" the control inputs [X10 | CONTROL IN] can be configured as frequency inputs or as control inputs:

Frequency input for HTL encoders (A / B / 90°):

Sensor 1	[X10 CONTROL IN]	incremental HTL encoder	[X10:2] [X10:3]	channel A channel B
Sensor 2	[X10 CONTROL IN]	incremental HTL encoder	[X10:4] [X10:5]	channel A channel B

HTL encoders must be supplied by the encoder supply of the RS422 inputs.

Please observe the permissible frequency ranges (see Technical Specifications).

Frequency input for HTL encoders (A) or a proximity switch:

Sensor 1	[X10 CONTROL IN]	incremental HTL encoder	[X10:2] [X10:3]	channel A unconnected / direction signal
Sensor 2	[X10 CONTROL IN]	incremental HTL encoder	[X10:4] [X10:5]	channel A unconnected / direction signal

The inputs [X10:3] resp. [X10:5] may remain unconnected (internal pull-down) or can be used for a static direction signal. HTL encoders must be supplied by the encoder supply of the RS422 inputs. Please observe the permissible frequency ranges (see Technical Specifications).

Two inverse control inputs for HTL commands:

Input1	[X10 CONTROL IN]	HTL/PNP control signal	[X10:2] [X10:3]	control signal 1 inverse control signal 1
Input2	[X10 CONTROL IN]	HTL/PNP control signal	[X10:4] [X10:5]	control signal 2 inverse control signal 2

Strictly always the inverse signals must be applied to the inverted inputs. Any other signal conditions are illegal and will be detected as an error. Please use the separate parameter description to find more information about the control inputs. The configuration of the inputs will affect the Safety Integration Level (SIL).

Two homogenous control inputs for HTL commands:

Input1	[X10 CONTROL IN]	HTL/PNP control signal	[X10:2] [X10:3]	control signal 1 homogenous control signal 1
Input2	[X10 CONTROL IN]	HTL/PNP control signal	[X10:4] [X10:5]	control signal 2 homogenous control signal 2

Strictly the inverted input must always receive the same signal as the non-inverted input. Any other signal conditions are illegal and will be detected as an error. Please use the separate parameter description to find more information about the control inputs. The configuration of the inputs will affect the Safety Integration Level (SIL).

Four single control inputs HTL commands:


Input1	[X10 CONTROL IN]	HTL/PNP control signal	[X10:2]	control signal 1
Input2	[X10 CONTROL IN]	HTL/PNP control signal	[X10:3]	control signal 2
Input3	[X10 CONTROL IN]	HTL/PNP control signal	[X10:4]	control signal 3
Input4	[X10 CONTROL IN]	HTL/PNP control signal	[X10:5]	control signal 4


Please use the separate parameter description to find more information about the control inputs. The configuration of the inputs will affect the Safety Integration Level (SIL).

One homogenous/inverse control input and two single control inputs for HTL commands:

Input1	[X10 CONTROL IN]	HTL/PNP control signal	[X10:2]	control signal 1
			[X10:3]	homogenous/inverse signal 1
Input2	[X10 CONTROL IN]	HTL/PNP control signal	[X10:4]	control signal 2
Input3	[X10 CONTROL IN]	HTL/PNP control signal	[X10:5]	control signal 3

Strictly always the homogenous or inverse signal must be applied to the inverted input. Any other signal conditions are illegal and will be detected as an error. Please use the separate parameter description to find more information about the control inputs. The configuration of the inputs will affect the Safety Integration Level (SIL).

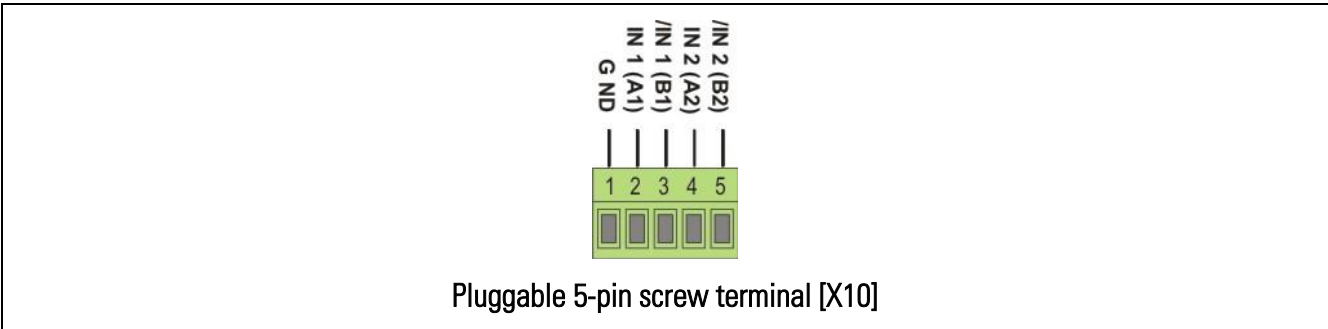



- It does not make sense to configure the unit for connection of 2 HTL encoders simultaneously, since then no more inputs for external commands would be available.
- With DS24x units, all 4 channels can be used as control-inputs for external commands.
- When using a single-channel encoder, the associated second input is not suitable for other functions (e. g. direction signal).
- Transitionally, on some housing prints IN1 ... IN4 can be found as designation for the CONTROL IN signals of terminal X10.
The correspondences of these terms are:
IN1 = IN1, / IN1 = IN2, IN2 = IN3 and / IN2 = IN4.

5.6. SinCos-Splitter-Output

(DS230 and DS240 only)

DS230 and DS240 units provide a safety-related SinCos-Splitter-Output. Depending on the setting of parameter "Operational Mode" (0, 1, 2 or 6), the integrated splitter function allows to reproduce the signal of input terminal [X6 | SINCOS IN1] to the female 9-pin SUB-D connector [X5 | SINCOS OUT].


Thus the encoder signal connected to [X6 | SINCOS IN1] can be processed by a further target device.

The signal delay time between SinCos input and SinCos output is approx. 200 ns.

The channels SIN+ and SIN- resp. COS+ and COS- must be terminated by 120 Ohm load resistors on site of the target device.

In case of errors, the DC-offset of the SinCos output will be shifted in order to signalize the error condition to the target device.

The connection to the SinCos splitter output is only safe, when the follower unit includes a SinCos monitoring system which can detect offset errors.

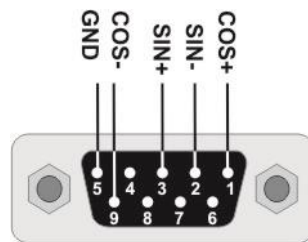

Female SUB-D Connector [X5]



- It is mandatory to terminate the SIN+ and SIN- resp. COS+ and COS- channels by a 120 Ohm resistor on the target device.
- SinCos input signals must consist of two sine-shaped and two cosine-shaped signal pairs.
- On the output site the DC offset value is typically 2.5 V, fully independent of the input offset.

5.7. RS422-Splitter-Output

(DS230 and DS240 only)

DS230 and DS240 units provide a safety-related RS422-Splitter-Output.

The monitor evaluates two frequency channels (Sensor 1 and Sensor 2), which are determined by "Operational Mode".

The splitter-output allows reproducing the input frequency of Sensor 1 or Sensor 2.


Regardless of the input signal (SinCos or HTL), the output [X4 | RS422 OUT] always delivers incremental RS422 square-wave signals.

The signal delay between the RS422 input and the RS422 output is approx. 600 ns.

In case of an error, no more incremental signals will be available at the RS422 output (Tri-State, internally with 1 kOhm pull-down resistors).

Connections to the RS422 Splitter output are only safe if the following device is capable to detect the error state of the monitor.

SinCos input signals are reproduced as 1:1 square wave output.

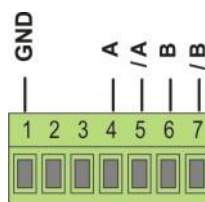

Pluggable 7-pin screw terminal [X4]

Screw terminal [X4] provides 7 connections:

[X4 ANALOG OUT]	analog output	[X4:1-3]
[X4 RS422 OUT]	RS422 output	[X4:4-7]

5.8. Analog-Output 4 to 20 mA


A safety-related analog output is available at terminal strip [X4]. The current output is freely scalable by setting parameters "Analog Start" and "Analog End". It delivers an output signal, which is proportional to one of the two input frequencies. Where the analog output is not used, terminals [X4:2] and [X4:3] must be bridged. An open analog output (e.g. wire fracture) will produce an error status.

During normal operation, the output moves in a proportional range between 4 and 20 mA.
In case of errors, the analog output delivers 0 mA.

The connection to the analog output is only safe if the follower unit is capable to detect the error state of the safety monitor.

With versions DS230 / DS240, screw terminal [X4] provides 7 connections:

[X4 ANALOG OUT]	analog output	[X4:2-3]
[X4 RS422 OUT]	RS422 output	[X4:4-7]

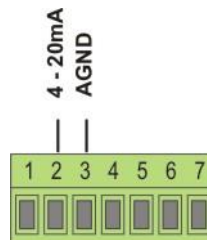

Pluggable 7-position screw terminal [X4] at DS230/DS240

With unit versions DS236 / DS246, screw terminal [X4] provides only 3 connections:

[X4 ANALOG OUT]	analog output	[X4:2-3]
[X4 RS422 OUT]	not available!	



Pluggable 3-position screw terminal [X4] at DS236/DS246



- In case of an unused analog output [X4:2] and [X4:3] must be bridged.
- An open analog output (e.g. wire fracture) will produce an error status.

5.9. Control Outputs

Four inverse/homogeneous HTL control outputs are available at the screw terminal [X2 | CONTROL OUT].


The switching points and switching conditions can be programmed by parameters.

In HIGH state, the output level is approximately 2 V lower than the supply voltage at terminal [X3 | 24V IN]. The outputs are short-circuit proof push-pull outputs. When switching inductive loads, additional external suppression measures are recommended.

In case of errors all outputs go to LOW state (no more inversion).


Connections to the analog output are only safe if the target device is able to detect the error state of the safety monitor.

The output configuration will affect the Safety Integrity Level (SIL).

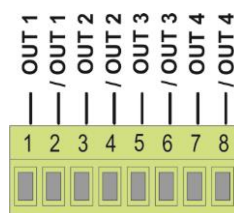

Pluggable 8-position screw terminal [X2]


Wiring example:

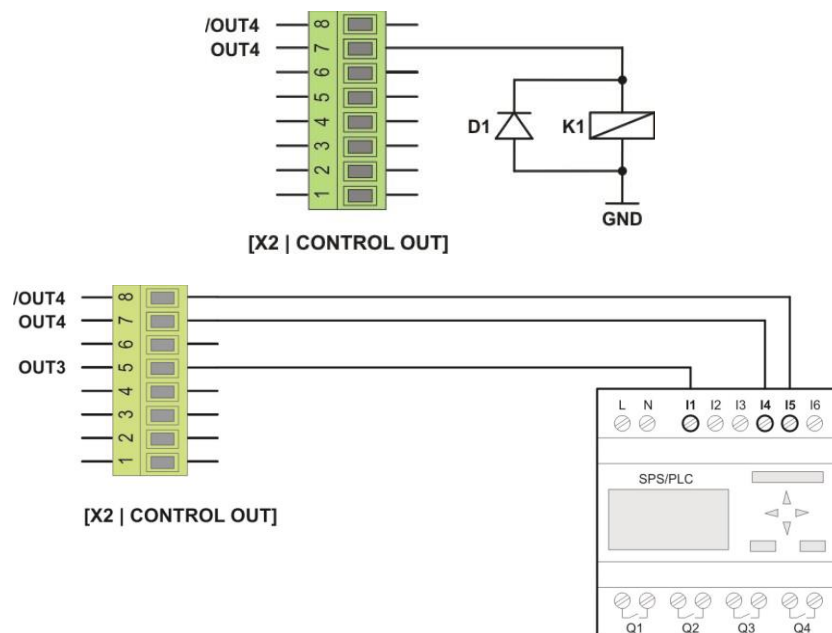


5.10. Relay Output

The safety-related relay output consists of two independent relays with forcibly guided contacts. The normally open contacts of the two relays (NO) are internally connected in series. This series-relay-contact is accessible by the 2-pin screw terminal [X1 | RELAY OUT], for integration into a Safety Circuit.

- The contacts are only closed during normal and disturbance-free operation. They will open to a safety state in case of errors or when the programmed switching condition occurs.
- In the de-energized state of the unit the contacts are also open.
- Switching points and switching conditions can be set by the corresponding parameters.
- An internal, forcibly guided opener of the relay is used to monitor the relay status by the unit itself.
- In case of an error the contact will change to the open and safe switching state.



Pluggable 2-position screw terminal [X1]

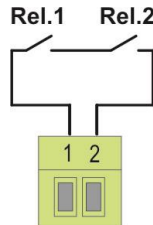

Internal connection [X1]



- The operator is responsible to ensure a safe state of all relevant parts and components of the equipment, whenever the relay contact is open.
- The target unit must be able to evaluate edges, in order to determine dynamical conditions of the relay output, too.
- With frequencies close to the switching point, relay bouncing may occur in consequence of variation of the frequency measurement. To prevent this, a hysteresis should be set.
- If also short overshoots of the switching point should be detected, a lock function should be set to the output.

5.11. DIL Switch

A 3-position DIL switch [S1] is located at the front of the unit
(only accessible when no display and programming unit BG230 is connected).



3-pos DIL switch [S1]

The DIL switch is used to set the operation state of the monitor:

DIL1	DIL3	Status	LED
ON	ON	Normal Operation	Off (lights up permanently at error state)
ON	OFF	Programming Mode	Flashes slowly (lights up permanently at error state)
OFF	ON	Factory Settings	Flashes slowly (lights up permanently at error state)
OFF	OFF	Factory Settings	Flashes slowly (lights up permanently at error state)

DIL2	Status	Operational readiness
ON	Normal Operation	Ready for operation approx. 2 s after power up
OFF	Self-Test Message	Ready for operation approx. 8 s after power up



- The Programming Mode (DIL switch) is used for Start-up only
- All DIL switch sliders must be set to „ON“ after Start-up
- After Start-up the DIL switch sliders should be protected against manipulation (e. g. by covering with an adhesive tape)
- Normal operation is only permitted when the yellow LED is permanently off
- The safety function of the unit cannot be guaranteed before the commissioning has been completed.

5.12. BG230 Operator Interface

On the front site the unit provides a serial interface for communication with BG230 operator units (optional accessory), allowing display and parameter setting.



8-pin female connector [X11]

The BG230 unit and the safety monitor are connected by plugging the BG230 directly onto the female 8-pin connector [X11] at the front.

This operator unit is intended for display of the encoder signals (in user units) and for visual monitoring of the DS unit. Although parameters can be set or changed by using the BG230, it is recommended to use the OS6.0 PC software for Start-up and commissioning purpose.



The female connector [X11] is reserved for exclusive use with a BG230 unit.

5.13. USB Interface for the OS6.0 Operator Surface

For communication between the unit and a PC or a superordinate controller, a virtual COM port is accessible at the USB connector. A standard USB-cable with a Type B connector is used for connection. This USB cable is available as an option. The USB port serves for PC setup of the DS monitors.



USB type B

A separate manual is available describing the installation procedure of the USB driver (see page 2).

5.14. LEDs / Status Indication

Two status LEDs are located on the front of the unit.

The green one is marked as [ON] and the yellow one as [ERROR].



Status LEDs

The green status LED uses the following conditions:

Green LED	Status
OFF	Power off (no power supply voltage)
ON	Power on (power supply voltage ok)


The yellow status LED uses the following conditions:

Yellow LED	Status
OFF	Normal operation, self-test successfully completed, no error messages
ON	During the self-test or with error state
Flashes slowly	Factory Settings or Programming Mode

6. Operational Modes

6.1. Application: 2 SinCos Encoders

Device	DS23x		
Operational Mode	0		
Sensor 1	[X6 SINCOS IN 1]	SinCos encoder	SIN+, SIN-, COS+, COS-
Sensor 2	[X7 SINCOS IN 2]	SinCos encoder	SIN+, SIN-, COS+, COS-
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	2 - 4 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

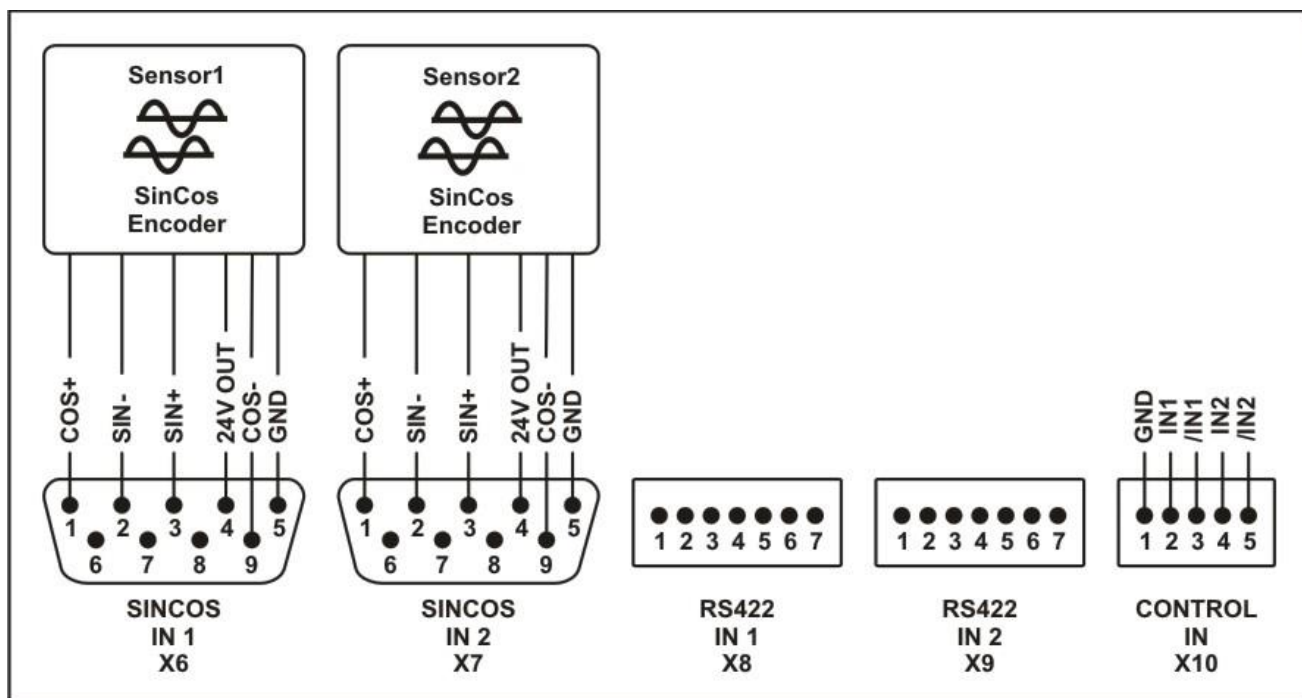


This mode is used to evaluate a dual channel system equipped with two SinCos sensors /encoders.



- With DS230 models this mode can be used to reproduce the input frequency of [X6 | SINCOS IN1] to the splitter output [X5 | SINCOS OUT].
- 2 - 4 inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.2. Application: 1 SIL3 SinCos Encoder only

Device	DS24x		
Operational Mode	0		
Sensor 1	[X6 SINCOS IN 1]	SIL3 SinCos encoder	SIN+, SIN-, COS+, COS-
Sensor 2	Sensor 1 and Sensor 2 are bridged internally		
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	2 - 4 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

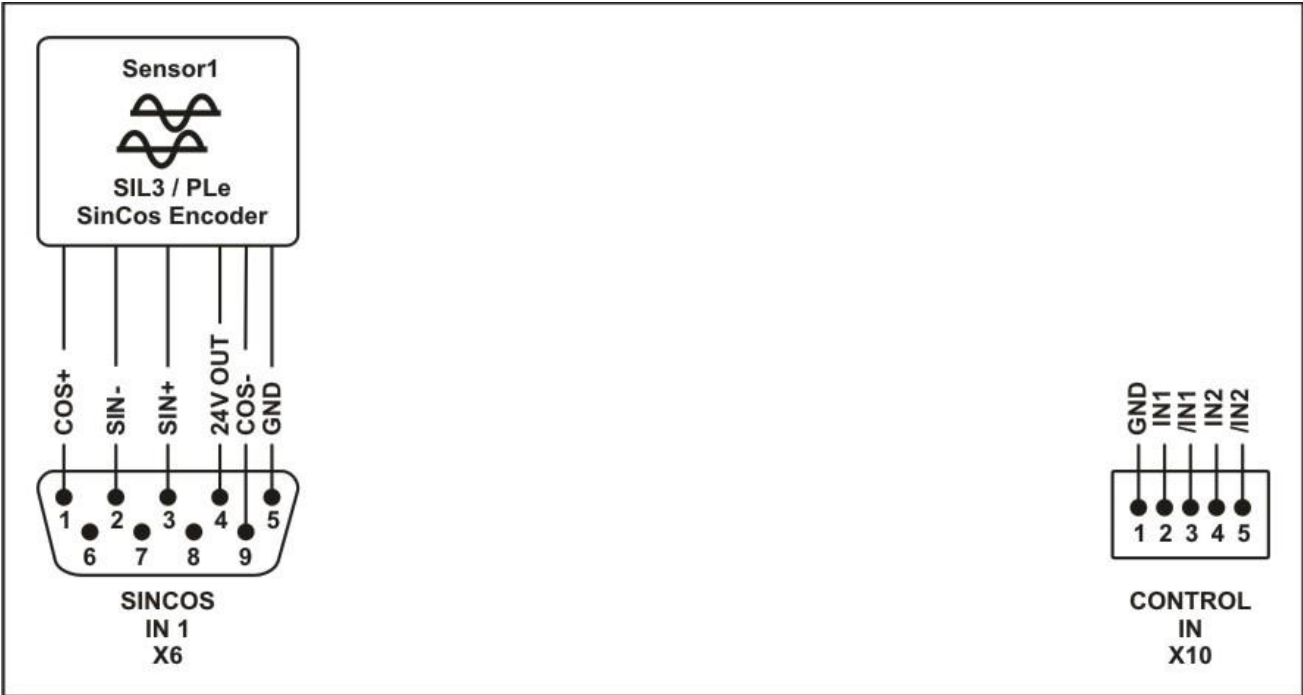


This mode is exclusively used for connection of a SIL3-certified or a PLe-certified SinCos sensor / encoder.



- With DS230 models, this mode can be used to reproduce the input frequency of [X6 | SINCOS IN1] to the splitter output [X5 | SINCOS OUT].
- 2 - 4 inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.3. Application: 1 SinCos Encoder and 1 HTL Encoder (quadrature)

Device	DS23x		
Operational Mode	1		
Sensor 1	[X6 SINCOS IN 1]	SinCos encoder	SIN+, SIN-, COS+, COS-
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, B, 90°
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	1 - 2 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

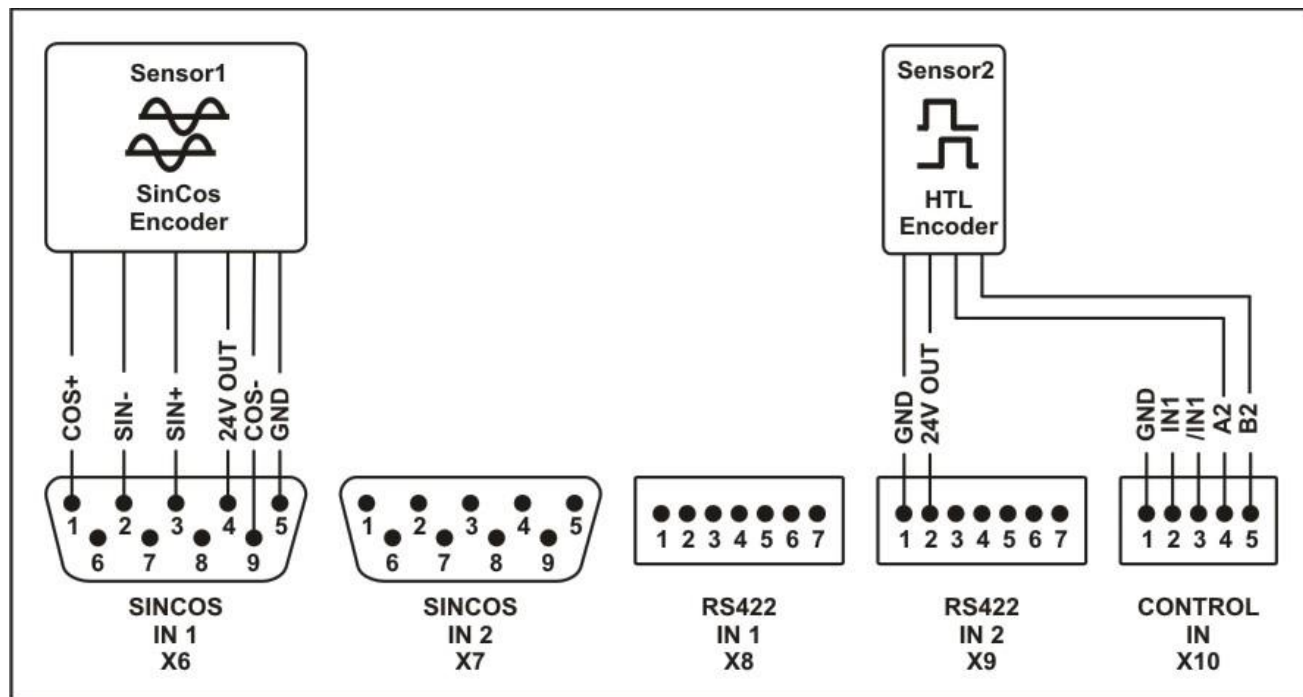


This mode allows evaluation of a dual channel system, equipped with a combination of one SinCos encoder and one incremental quadrature HTL encoder.



- With DS230 models this mode can be used to reproduce the input frequency of [X6 | SINCOS IN1] to the splitter output [X5 | SINCOS OUT].
- 1 - 2 inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.4. Application: 1 SinCos Encoder and 1 HTL Encoder (single channel)

Device	DS23x		
Operational Mode	2		
Sensor 1	[X6 SINCOS IN 1]	SinCos encoder	SIN+, SIN-, COS+, COS-
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, single channel
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	1 - 2 available
Safety Level	Speed → SIL3 / PLe achievable (see below) Direction → SIL3 / PLe* achievable (see below) Standstill → SIL3 / PLe* achievable (see below). With single channel encoders, jitter around an edge can be misinterpreted as a frequency.		

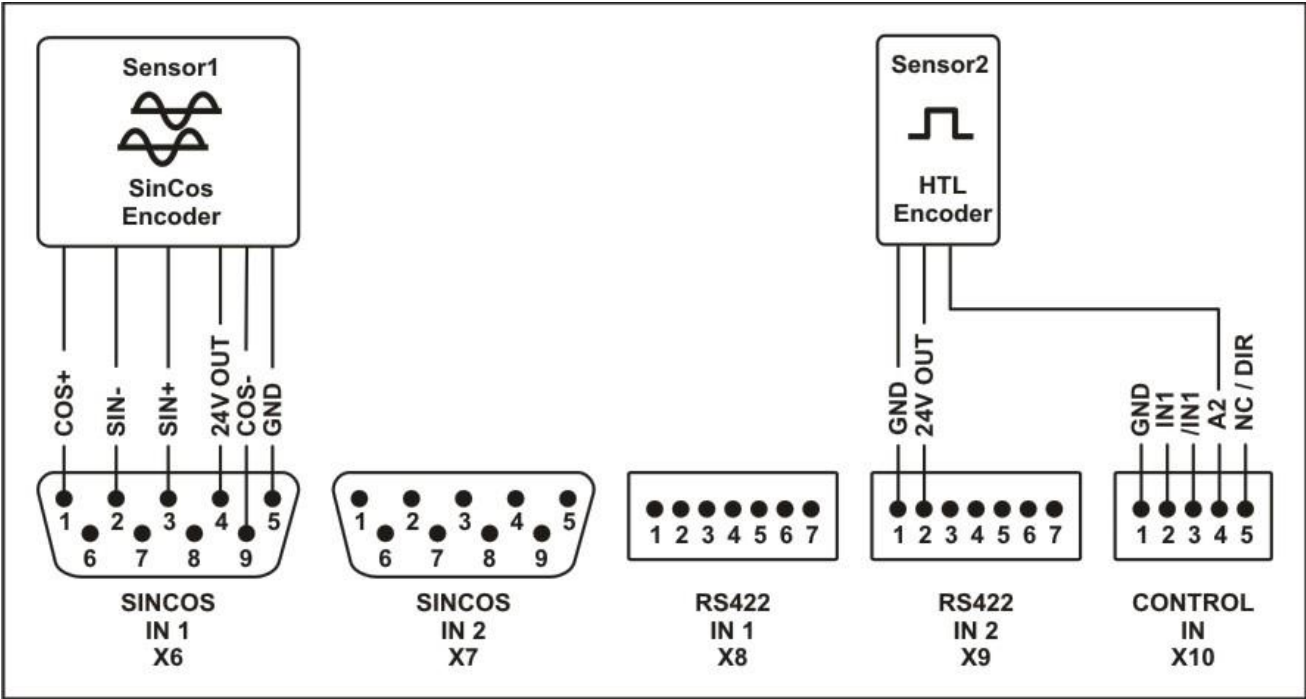


This mode allows evaluation of a dual channel system, equipped with a combination of one SinCos encoder and one incremental single channel HTL encoder.

- With DS230 models this mode can be used to reproduce the input frequency of [X6 | SINCOS IN1] to the splitter output [X5 | SINCOS OUT].
- 1 - 2 inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

*) To achieve a safety level with this configuration, the user must be sure that the equipment will physically be able to rotate or move in one direction only (no reversals!). This could e.g. be ensured by use of a self-locking gearbox.

6.5. Application: 2 Quadrature HTL Encoders

Device	DS23x			
Operational Mode	3			
Sensor 1	[X10 CONTROL IN]	Incremental HTL encoder	A, B, 90°	
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, B, 90°	
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signals	not available	
Safety Level	Speed	→ SIL3 / PLe achievable (see below)		
	Direction	→ SIL3 / PLe achievable (see below)		
	Standstill	→ SIL3 / PLe achievable (see below)		

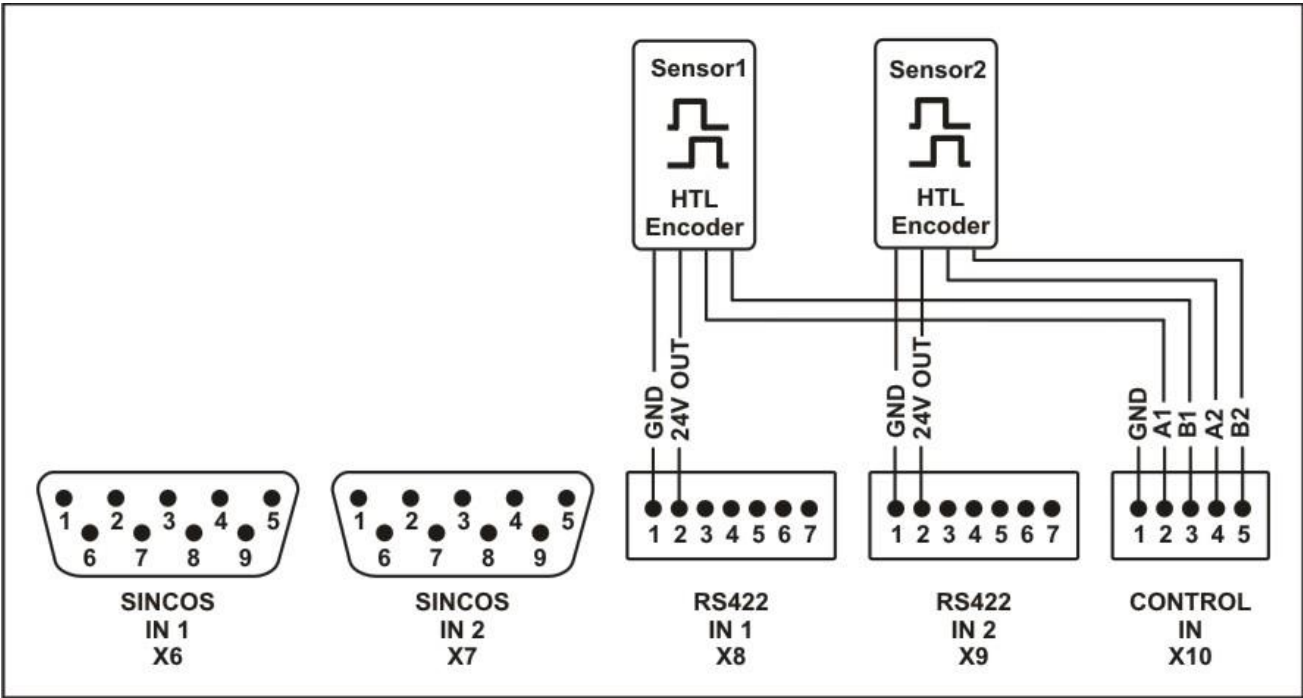


This mode allows evaluation of a dual channel system, equipped with two incremental dual channel HTL encoders.

- No inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.6. Application: 1 Quadrature Encoder and 1 Single Channel HTL Encoder

Device	DS23x			
Operational Mode	4			
Sensor 1	[X10 CONTROL IN]	Incremental HTL encoder	A, B, 90°	
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, single channel	
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	not available	
Safety Level	Speed → SIL3 / PLe achievable (see below)			
	Direction → SIL3 / PLe* achievable (see below)			
	Standstill → SIL3 / PLe* achievable (see below).			
	With single channel encoders, jitter around an edge can be misinterpreted as a frequency.			

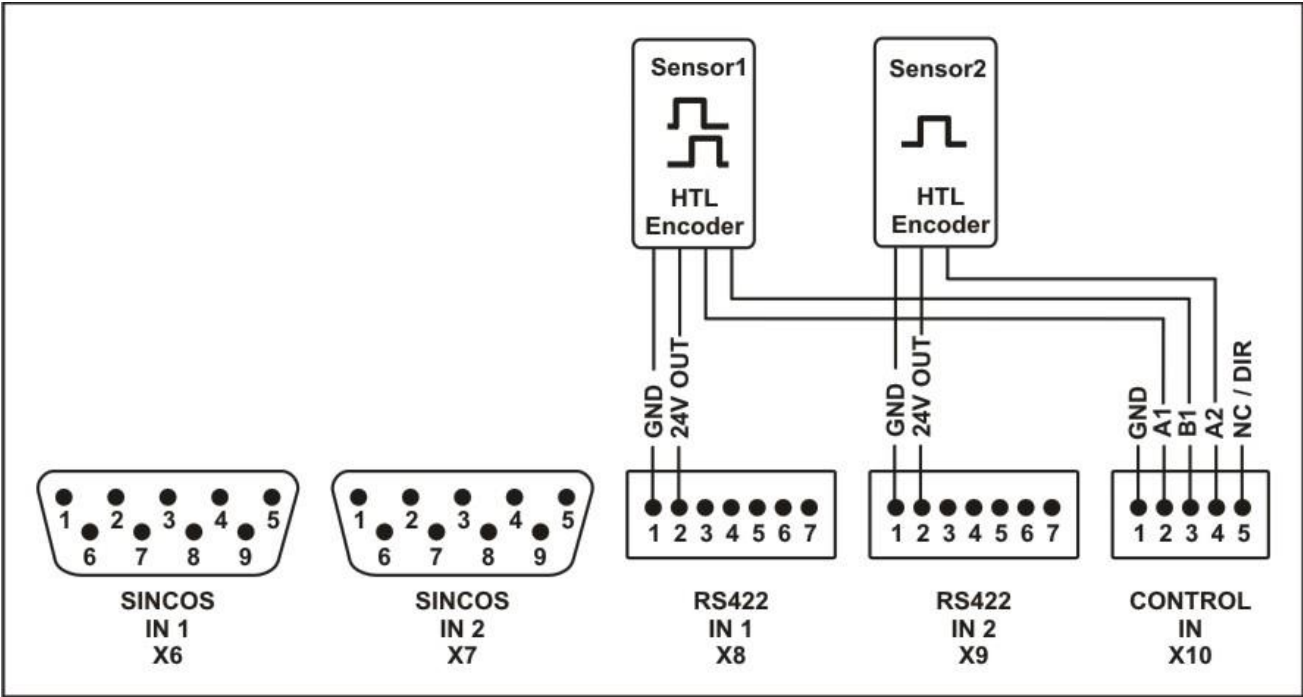


This mode allows evaluation of a dual channel system, equipped with a combination of one incremental quadrature HTL encoder and one single channel HTL encoder.

- No inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.


*) To achieve a safety level with this configuration, the user must be sure that the equipment will physically be able to rotate or move in one direction only (no reversals!). This could e.g. be ensured by use of a self-locking gearbox.

6.7. Application: 2 Single Channel HTL Encoders


Device	DS23x			
Operational Mode	5			
Sensor 1	[X10 CONTROL IN]	Incremental HTL encoder	A, single channel	
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, single channel	
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	not available	
Safety Level	Speed → SIL3 / PLe achievable (see below)			
	Direction → SIL3 / PLe* achievable (see below)			
	Standstill → SIL3 / PLe* achievable (see below).			
	With single channel encoders, jitter around an edge can be misinterpreted as a frequency			

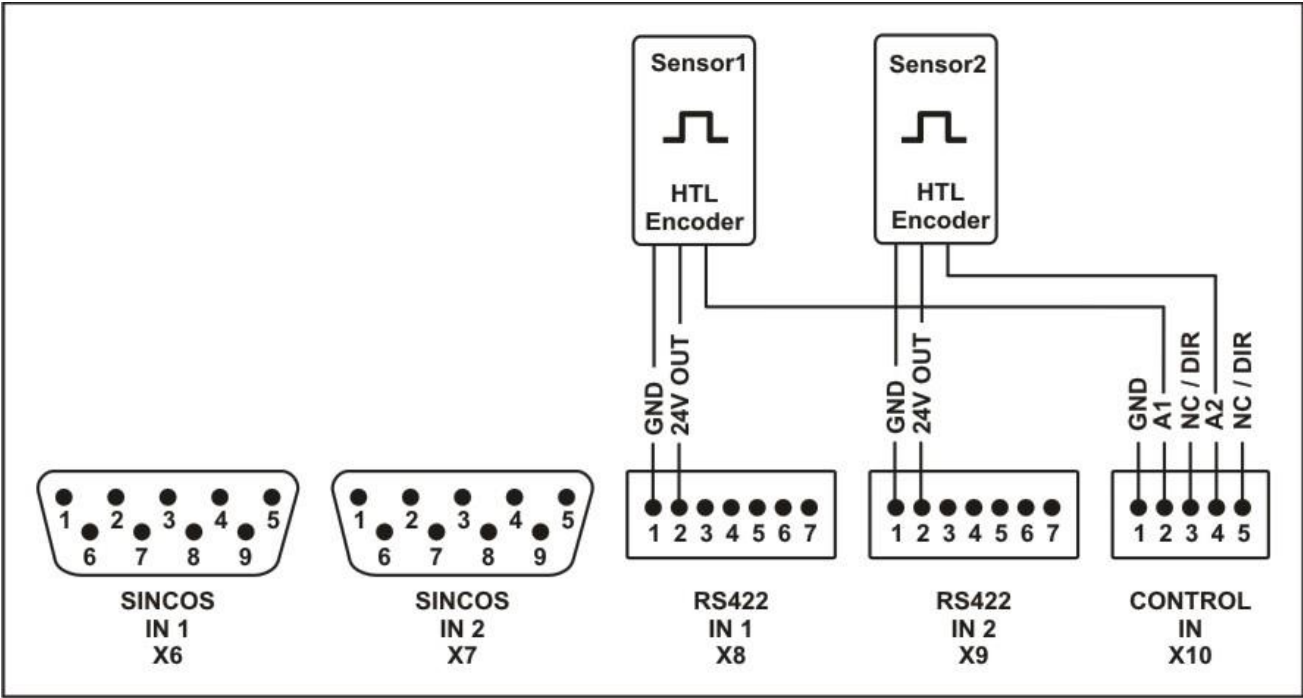

This mode allows evaluation of a dual channel system, equipped with two single-channel HTL encoders.




- No inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.



*) To achieve a safety level with this configuration, the user must be sure that the equipment will physically be able to rotate or move in one direction only (no reversals!). This could e.g. be ensured by use of a self-locking gearbox.

6.8. Application: 1 SinCos and 1 RS422 Encoder

Device	DS23x		
Operational Mode	6		
Sensor 1	[X6 SINCOS IN 1]	Incremental HTL encoder	SIN+, SIN-, COS+, COS-
Sensor 2	[X9 RS422 IN 2]	Incremental HTL encoder	A, /A, B, /B
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	2 - 4 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

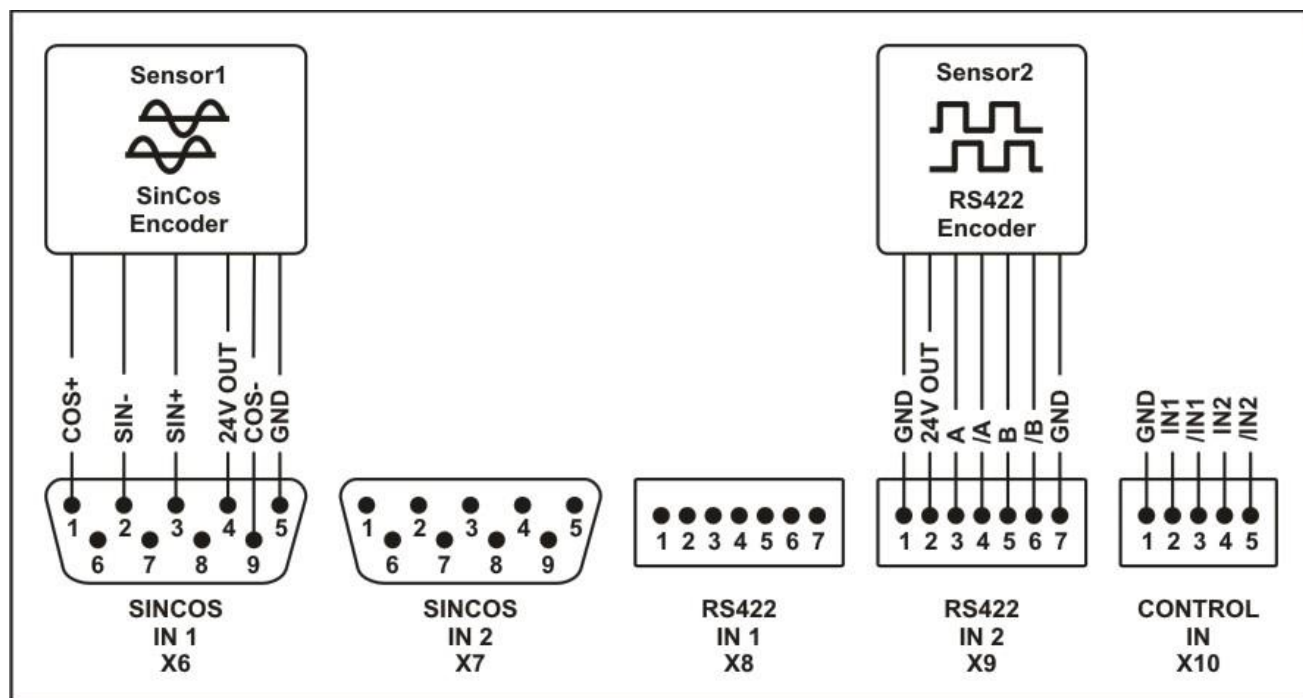


This mode allows evaluation of a dual channel system, equipped with a combination of one SinCos encoder and one RS422/TTL encoder.




- With a DS230 model this mode can be used to reproduce the input frequency of [X6 | SINCOS IN1] to the splitter output [X5 | SINCOS OUT].
- 2 - 4 inputs for control signals are available at terminal [X10 | CONTROL IN].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.9. Application: 2 RS422 Encoders

Device	DS23x		
Operational Mode	7		
Sensor 1	[X8 RS422 IN 1]	Incremental HTL encoder	A, /A, B, /B
Sensor 2	[X9 RS422 IN 2]	Incremental HTL encoder	A, /A, B, /B
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signals	2 - 4 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

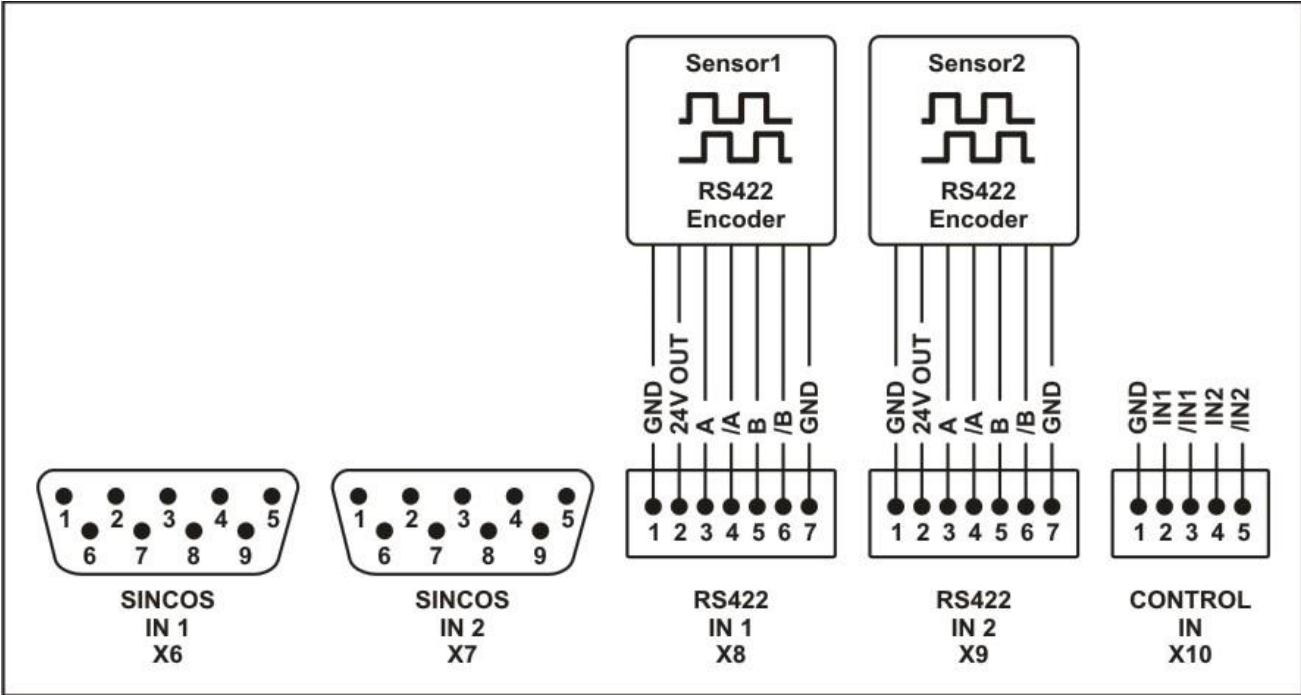


This mode (with DS23x models only) allows evaluation of a dual channel system, equipped with two identical RS422/TTL incremental encoders.




- 2 - 4 inputs for control signals are available at terminal block [X10 | (CONTROL IN)].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.10. Application: 1 RS422 Encoder and 1 quadrature HTL Encoder

Device	DS23x		
Operational Mode	8		
Sensor 1	[X8 RS422 IN 1]	Incremental RS422 / TTL encoder	A, /A, B, /B
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, B, 90°
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	1 - 2 available
Safety Level	Speed	→ SIL3 / PLe achievable (see below)	
	Direction	→ SIL3 / PLe achievable (see below)	
	Standstill	→ SIL3 / PLe achievable (see below)	

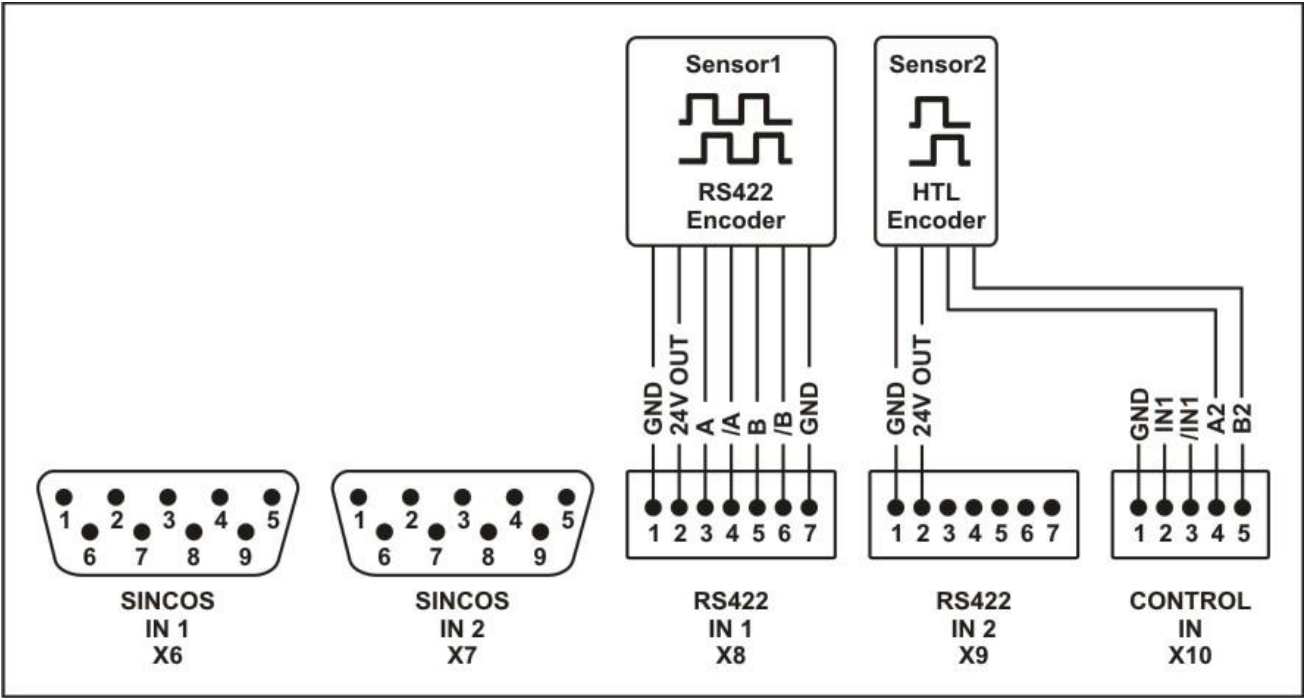


This mode is used for evaluation of a dual channel system, equipped with an incremental RS422/TTL encoder and a dual channel HTL encoder.




- 1 - 2 inputs for control signals are available at terminal block [X10 | (CONTROL IN)].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.

6.11. Application: 1 RS422 and 1 single channel HTL Encoder


Device	DS23x		
Operational Mode	9		
Sensor 1	[X8 RS422 IN 1]	Incremental RS422 / TTL encoder	A, /A, B, /B
Sensor 2	[X10 CONTROL IN]	Incremental HTL encoder	A, single channel
Control Inputs	[X10 CONTROL IN]	HTL/PNP control signal	1 - 2 available
Safety Level	Speed → SIL3 / PLe achievable (see below) Direction → SIL3 / PLe* achievable (see below) Standstill → SIL3 / PLe* achievable (see below). With single channel encoders, jitter around an edge can be misinterpreted as a frequency		

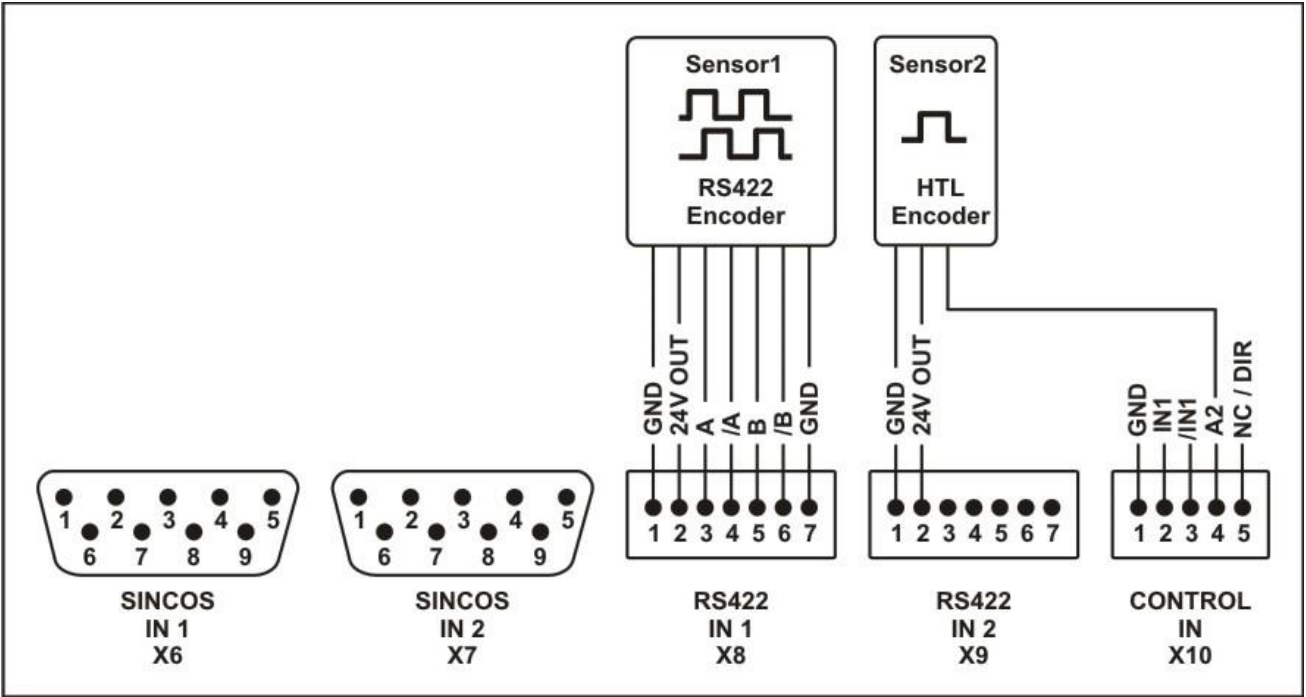

This mode (applicable with DS23x models only) is used for evaluation of a dual channel system, equipped with an incremental RS422/TTL encoder and a single-channel HTL encoder.



- 1 - 2 inputs for control signals are available at terminal block [X10 | (CONTROL IN)].
- The final Safety Integrity Level (SIL) depends on the selected configuration and on external components connected to the unit.



*) To achieve a safety level with this configuration, the user must be sure that the equipment will physically be able to rotate or move in one direction only (no reversals!). This could e.g. be ensured by use of a self-locking gearbox.

7. Commissioning

7.1. Cabinet installation

1. The unit must be in a mechanically and technically perfect condition.
2. The unit must be snapped onto a 35 mm DIN rail (according to EN 60715) by using the clip at the rear.
3. It must be ensured that the permissible environmental conditions of the specification are met accordingly.
4. All wirings must be executed in accordance with the general provisions for wiring (see www.motrona.com).
5. To choose and to connect the power supply unit, please refer to the section **Power Supply**.
6. To choose and to connect the encoders, please refer to sections **Encoder Supply**, **SinCos Encoder Inputs**, **RS422 Encoder Inputs** and **HTL Encoder Inputs**.
7. When control inputs, digital inputs or external relays are used, please note that the configuration will take part in the final Safety Integrity Level (SIL).
8. Analog output, digital outputs as well as the splitter output are only safe, if the follower unit is capable to detect and evaluate the error states of the monitor.
9. The relay contacts at terminal [X1] must be integrated into the safety circuit.



- In order to prevent simultaneous damages to the cables by external influences, the encoder lines or sensor lines must be kept physically separate from one another.
 - Installation, commissioning and maintenance must only be performed by qualified personnel.
 - In order to prevent manipulations, the machine as well as the equipment must be protected from unauthorized access.
 - The machine must be securely mounted and be ready to operate.
 - The safety function of the unit cannot be guaranteed before the commissioning resp. parametrization procedure has been fully completed.
 - Before commissioning and parametrization, the risk situation of the system must be analyzed and all precautions must be taken accordingly.
- These are fundamental measures to protect persons and machinery.

7.2. Preparations for Setup

In order to put the DS monitor into operation or to change settings and Parameters, the following measures must be taken:

- Connect the unit to a power supply source
- Set the DIL switch sliders 1, 2 ON and 3 to OFF (Programming Mode)
- Install the OS6.0 operating software properly on a PC and start the program
- Connect the unit to the OS6.0 operator surface via the USB port (alternatively you are free to use a BG230 operator interface).

7.3. Parameter Setting by PC

For parameterization of the safety monitor by PC, the operator software OS6.0 is used. This software is included in delivery on CD and is also available for download from www.motrana.com. After successful installation of the operator software of and the USB driver (see page 2) the PC can be connected to the safety monitor via USB cable.

When starting the software, the following screen appears:



Parametrization via PC

All functions of the operator software OS6.0 are described in a separate manual (see page 2).

7.4. Visualization by the BG230 Operator Unit

Visualization as well as configuration of the safety device also can be done with use of the Display- and Programming Module Type BG230. This optional operator unit is primarily used for visualization and diagnosis without PC, but can also be used for parameter setting. The module can be simply plugging onto the front of the DS unit.

However it is recommended to use preferably the OS6.0 PC software for the commissioning and parametrization procedure.



Operator Module BG230

All functions of the BG230 programming- and display module are described in a separate manual (see page 2).

8. Setup

In order to ensure proper functionality, the parameters must be set appropriate values. This section describes the most important parameters, which have to be set or checked in either case.


8.1. Operational Mode Settings

The setting of parameter "Operational Mode" is determined by the types of encoders in use, and by the respective connections. Encoder wirings and resulting mode settings are described in chapter **Operational Modes**.

No.	Parameter	Remark
000	Operational Mode	DS24x = 0, DS23x see chapter Operational Modes

With DS24x models, this parameter value must be left to default setting = 0.


8.2. Direction Settings

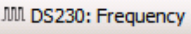In order to define the directions, the machine must move resp. turn in its working direction. As a first step,  must be selected from the button bar of the operator screen.

The corresponding frequencies of Sensor 1 and Sensor 2 will then be indicated in the Monitor field. In case of negative frequency values, the direction must be changed by using the associated "Direction" register in the parameter field of the corresponding sensor menu.

No.	Parameter	Remark
013	Direction1	DS24x = 0 or 1, DS23x = X, positive frequency
020	Direction2	DS24x = 0 or 1, DS23x = X, positive frequency

With DS24x models, both parameter values must have equal setting (Direction1 = Direction2).

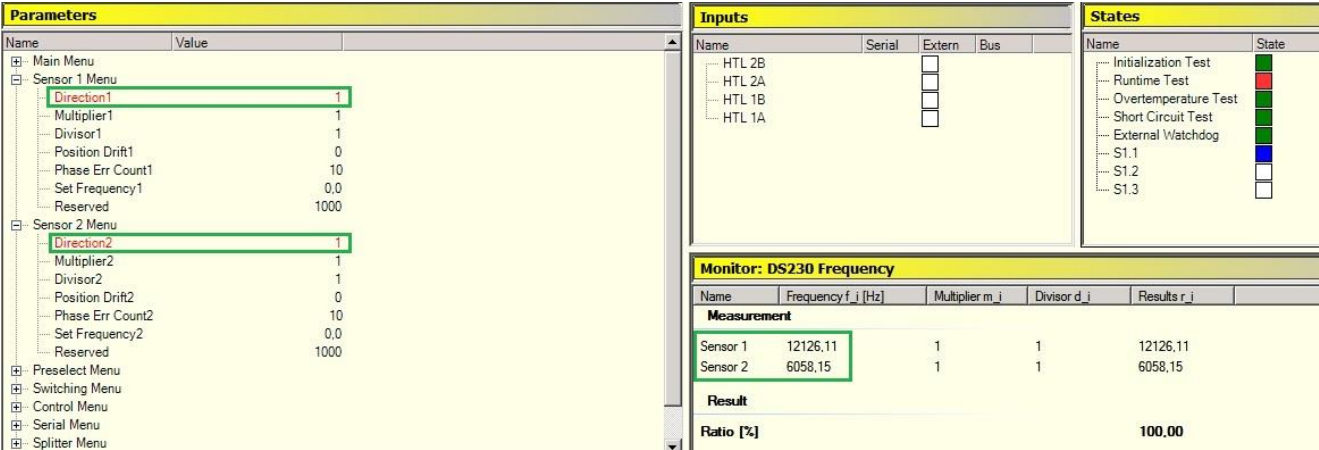

The screenshot displays the operator interface with four main panels:

- Parameters:** A tree view on the left shows the 'Sensor 1 Menu' and 'Sensor 2 Menu'. Under 'Sensor 1 Menu', 'Direction1' is highlighted with a value of 1. Under 'Sensor 2 Menu', 'Direction2' is highlighted with a value of 1. Other parameters like Multiplier, Divisor, and Set Frequency are also visible.
- Inputs:** A table showing input signals: HTL 2B, HTL 2A, HTL 1B, and HTL 1A, each with checkboxes for Serial, Extern, and Bus connections.
- States:** A list of system states with corresponding status indicators: Initialization Test (green), Runtime Test (red), Overtemperature Test (green), Short Circuit Test (green), External Watchdog (blue), S1.1 (blue), S1.2 (blue), and S1.3 (blue).
- Monitor: DS230 Frequency:** A table showing real-time frequency measurements.

Name	Frequency f _j [Hz]	Multiplier m _j	Divisor d _j	Results r _j
Sensor 1	12126,11	1	1	12126,11
Sensor 2	6058,15	1	1	6058,15

 Below this, a 'Result' section shows 'Ratio [%]' as 100,00.

8.3. Frequency Ratio Settings

When using two sensors with different number of impulses, or in case of mechanical gear transmission ratio between both encoders, the higher one of the two frequencies must be adjusted to the lower one by corresponding setting of the scaling factors. Accurately calculated values are better than experimental results.

No.	Parameter	Remark
014	Multiplier1	DS24x = 1, DS23x Ratio = 0
015	Divisor1	DS24x = 1, DS23x Ratio = 0
021	Multiplier2	DS24x = 1, DS23x Ratio = 0
022	Divisor2	DS24x = 1, DS23x Ratio = 0

With DS24x models, both parameters must be left to default = 1.

The screenshot shows the 'Parameters' window with 'Multiplier1' and 'Divisor1' set to 1, and 'Multiplier2' and 'Divisor2' set to 1. The 'Inputs' window shows HTL 2B, HTL 2A, HTL 1B, and HTL 1A. The 'States' window shows various test results. The 'Monitor: DS230 Frequency' window displays the following data:

Name	Frequency f _j [Hz]	Multiplier m _j	Divisor d _j	Results r _j
Sensor 1	12126,11	1	1	12126,11
Sensor 2	6058,15	1	1	6058,15

The 'Result' section shows a 'Ratio [%]' of 100,00.

In the example shown above, frequency 2 is by factor 0.0994 lower than frequency 1. For alignment of both frequencies, "Multiplier1" can be set to 994 and "Divisor1" to 10.000.

The screenshot shows the 'Parameters' window with 'Multiplier1' set to 994 and 'Divisor1' set to 10. 'Multiplier2' and 'Divisor2' remain at 1. The 'Inputs' window is the same. The 'States' window is the same. The 'Monitor: DS230 Frequency' window displays the following data:

Name	Frequency f _j [Hz]	Multiplier m _j	Divisor d _j	Results r _j
Sensor 1	12133,51	1	2	6066,76
Sensor 2	6058,15	1	1	6058,15

The 'Result' section shows a 'Ratio [%]' of 0,14.

By this scaling procedure of frequency 1, internally both calculated frequencies are approximately equal and the calculated frequency ratio is close to 0.


8.4. Clear Errors

After parameter “Operational Mode” has been set correctly, the machine will move in working direction, with positive frequency indication of both, Sensor 1 and Sensor 2. Due to the frequency ratio setting, both frequencies are equal now, since the higher frequency has been scaled down to the lower frequency.

At this time, the indication boxes “Runtime Test” and “Initialization Test” in the **State** field can be set to green (green = no error, red = error). For this purpose, the following sequence of operations regarding parameter “Error Stimulation” must be observed:


- Set “Error Stimulation” to 2 and press 
- Set “Error Stimulation” back to 1 and press again 

Now, all **State** boxes, except the DIL switch States (S1.1, S1.2, S1.3) should light green.

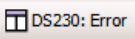In case a runtime error should be triggered again, please press  of the button bar to find out more details about this error.

More information about errors can be found in the chapters **Runtime Test** and **Initialization Test**.

8.5. Sampling Time Settings

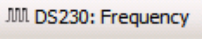All **State** boxes (except DIL switch States S1.x) light green at this time. Now please select  in the button bar. We must determine the operating range of the unit, comprising the frequency range from the lowest switching point to the highest switching point:

1. Find out, which of the sensor frequencies shows the highest instability and fluctuation.
2. Move through the frequency range and find out the point of maximum fluctuating. In general this will be around the lowest switching point (underspeed or frequency band).
3. The frequency can be smoothed by use of parameter “Sampling Time”.
Higher settings result in smoother running, but increase the response time and the fault detection time.
4. Only exceptionally you should set the Sampling Time to smoothen frequencies below the lower switch point setting (underspeed or frequency band).
5. The Sampling Time setting may also affect the signal variation on the analog output.

No.	Parameter	Remark
001	Sampling Time	Control of frequency fluctuation

8.6. Wait Time Settings

The Wait Time parameter defines the frequency below which all frequencies will be taken as zero. Setting of e.g. 1.0 second will result in zeroizing all frequencies lower than 1 Hz. In this context it must be clarified whether the application requires a standstill- or drift-monitoring or not.

1. Where the application does not require any standstill or direction or drift control, you are free to set Standstill Time with regard of the expected minimum frequency and the required response time only.
2. Where the application uses standstill control, please observe also possible jitter during standstill and adjust Wait Time correspondingly.
3. Where the application uses forward/reverse direction control, also possible jitter should be considered while the system holds in closed loop position control.

No.	Parameter	Remark
002	Wait Time	Adjust the zero balancing window

8.7. Setting of F1-F2 Selection

When the original frequency of sensor 1 is higher than the original frequency of sensor 2, please set parameter F1-F2-Selection to 0, otherwise please set to 1. In general the higher frequency should be the more stable one, and should therefore be used to set the switching points.

No.	Parameter	Remark
003	F1-F2 Selection	When $F1 > F2$, setting F1-F2 Selection = 0 (F1 selected). When $F2 > F1$, setting F1-F2 Selection = 1 (F2 selected).

8.8. Setting of the Divergence Parameters

These parameters set the maximum permissible frequency deviation between sensor 1 and sensor 2, based on percentaged values of Div Calculation. Parameter Div. Switch %-f defines the frequency threshold below which deviations are taken as absolute values, and above which deviations are taken as percentage. When the absolute difference of frequencies exceeds the setting of Div. f-Value below the threshold setting, a frequency error will be triggered. When the percentaged difference exceeds the setting of Div. %-Value above the threshold setting, also a frequency error will be triggered. Parameter Div. Filter provides an option for suppression of short-duration errors.

1. The facility of setting a frequency threshold provides suppression of possible frequency errors caused by jerking in the startup phase.
2. The threshold setting must be below the lower switchpoint setting (underspeed or frequency band).
3. It is an individual issue of the actual application to fix the deviation values under normal operating speed and under startup conditions that should trigger a frequency error signal.
4. Where no standstill nor drift nor direction control is needed, the frequency threshold can also serve as trigger threshold for error activation, by increasing the setting of Div. f-Value correspondingly (see 3.)
5. Where the application uses standstill control, possible jitter during closed-loop standstill should be observed to adjust Div. f-Value correspondingly.
6. Where forward/reverse direction control is used, please also observe possible jitter during standstill for best setting of Div. f-Value.

No.	Parameter	Remarks
004	Div. Switch %-f	Frequency threshold
005	Div. %-Value	Percentage of frequency deviation above the Div.Switch %.
006	Div. f-Value	Absolute frequency deviation (Hz) below the Div. Switch %-f threshold
007	Div. Calculation	0
008	Div. Filter	Filter (OFF = 0, MEDIUM = 5, HIGH = 10)



Divergence parameters are relevant even with the DS24xx models, since also with only one SIL3 encoder the frequency is splitted into two channels, where asynchronism during changes of the frequency may cause frequency divergence.

8.9. Setting of Power-up Delay

After initialization, Power-up Delay defines a retardation time before the unit takes the normal control state.

1. During this delay time, the unit will not take care of any errors
2. The delay is important to allow the encoder signals to stabilize after power up.
3. In case of indirect encoder connection, the retardation must also include the switching time of the relays.
4. In case of different power-up times of the parts and components of the installation, adaption to the DS2xx unit can be achieved by the retardation time settings.

No.	Parameter	Remarks
003	F1-F2 Selection	When F1 > F2, setting F1-F2 Selection = 0 (F1 selected). When F2 > F1, setting F1-F2 Selection = 1 (F2 selected).

8.10. Setting of the SinCos Output

There are no settings available for the SinCos output. At any time the signals of SinCos Input 1 [X6] will be routed to the output.

With models DS2x6, no SinCos output is available.

8.11. Setting of the RS422 Output

The output delivers the signals from Sensor 1 or Sensor 2 (regardless of the input configuration).

Depending on the Operational Mode setting, the converted signals of a SinCos or of a HTL encoder will be forwarded.

No.	Parameter	Remark
098	RS Selector	Sensor 1 to output = 0, Sensor 2 to output = 1

With models DS2x6, no RS422 output is available.

8.12. Analog Output Settings

In case of an unused analog output the output terminals must be bridged. The parameters "Analog Start" and "Analog End" are related to the frequency which is selected by the "F1-F2 Selection" register. The "Analog Gain" setting should be changed only in exceptional cases (e.g. for limitation of the upper current value). The "Analog Offset" parameter serves for fine adjustment.

1. Fluctuation of the analog output signal can be reduced by corresponding setting of Sampling Time.
2. With very small span (between Analog Start and Analog End) the analog output signal can become stepped due to the low frequency resolution.
3. Analog Start and Analog End operate under control of F1-F2 Selection.

Nr.	Parameter	Remark
078	Analog Start	Input frequency to produce output of 4 mA
079	Analog End	Input frequency to produce output of 20 mA
080	Analog Gain	100 : fixed setting, change only in exceptional cases
081	Analog Offset	0 : fine adjustment

8.13. Digital Output Settings

The configuration of the outputs will affect the Safety Integrity Level (SIL).

1. Switching points are affected by the F1-F2 Selection setting
2. Output fluttering caused by unstable frequencies must be eliminated by corresponding setting of a hysteresis.
3. No hysteresis setting is required with self-sustaining outputs.

No.	Parameter	Remark
027 - 041	Preselect Menu	Setting of the tripping points
043 - 080	Switching Menu	Configuration of the outputs

8.14. Relay Output Settings

The relay contacts must be embedded into the safety circuit.

1. Switching points are affected by the F1-F2 Selection setting
2. Output fluttering caused by unstable frequencies must be eliminated by corresponding setting of a hysteresis.
3. No hysteresis setting is required with self-sustaining outputs.
4. It is mandatory to assign the most important and essential of all safety functions to the relay output.

No.	Parameter	Remark
027 - 041	Preselect Menu	Setting of the tripping points
043 - 080	Switching Menu	Configuration of the outputs

8.15. Digital Input Settings




The configuration of the inputs will affect the Safety Integrity Level (SIL).

1. With 2-pole inputs please observe possible difference with regard of the transition times
2. With 1-pole clocked inputs the static triggering characteristics (low/high) should be adapted to the dedicated command according to safety requirements.

No.	Parameter	Remark
081 - 090	Control Menu	Configuration if the inputs

8.16. Producing an Error

After setting of all relevant parameters an error can be produced for testing purpose. This conduces to force the DS2xx outputs into the error state and to check function and behavior of the follower units.

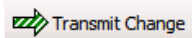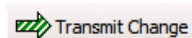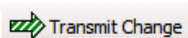- Set parameter „Error Stimulation“ to 0 and activate 
- The error state is set now.
- Set parameter „Error Stimulation“ to 2 and activate 
- Set parameter „Error Stimulation“ to 1 again and activate 
- The error state is released again

While in Error State, the safety monitor acts as follows:

- The analog output signal is set to 0 mA
- The relay contact is open
- Both channels of the digital outputs are in LOW state
- The offset of the SinCos output is displaced
- All channels of the RS422 output are in LOW state.

It is important to check for proper detection of these error indications on site of the target units connected to the monitor.

9. Completion of the Setup Procedure

Finally, all application-specific parameters should once more be reviewed for correctness and plausibility. The safety-relevant relay output falls back to its open state when an error occurs or when the programmed switching condition occurs. Of course the contact is also open in powerless state of the unit. It is mandatory to check the safety behavior of the monitor and all connected follower units carefully.

The following items must be verified:



- plausibility and correctness of encoder signals
- sense of rotation and proper scaling of the encoder frequencies
- plausibility of the frequencies themselves
- correct settings of all necessary parameters
- plausibility of the parameter settings
- SinCos output signals with regard to frequency and error behavior
- RS422 output signals with regard to frequency and error behavior
- analog output signal under operation and error conditions
- scaling of the analog output with respect to the frequency range
- digital outputs and relay output as for error comportment
- switching points with regard to correct comportment
- response times and related parameter settings
- inputs regarding proper function and comportment

It is on the responsibility of the operator to ensure that all relevant parts of the whole installation pass over to a safe state as soon as the relay contact of the safety monitor opens.

After commissioning, the Programming Mode of the unit must be left by setting slider 3 of the DIL switch back to its ON position. Please observe that for normal operation of the monitor always all 3 sliders of the DIL switch must be set to ON.



- Programming Mode (DIL switch setting) must only be used for Start-up
- Set all DIL switch positions to ON after Start-up
- Protect the DIL switch against later manipulation after conclusion of the Start-up procedure (e. g. by covering with adhesive tape)
- Normal operation is only permitted while the yellow LED is permanently OFF

10. Error Detection

In order to ensure a maximum of operational safety and reliability, the Safety Monitors are equipped with several and profound monitoring-functions. This monitoring allows immediate recognition and messaging of possible failures and malfunctions.



In case of errors:

- the relay contact switches to its open (safety) condition (interruption of the safety circuit)
- the analog output (with DS236 and DS246 units) sets to 0 mA (which is out of the regular operating range of 4 ... 20 mA)
- all digital outputs are set to LOW.
No more inversion between OUTx and /OUTx
(Attention in case of homogenous configuration!)
- no more incremental signals are available at the RS422 output (Tri-State with pulldown cut off)
- the DC-offset of the SinCos output will be shifted (which signals an error to the target unit)

The following types of error recognition are distinguished:

- Initialization Test Error
- Runtime Test Error

Both error types are described in detail on the following pages.

10.1. Error Representation

Error Representation	Reference
Front LED's	Yellow LED lights continuously
BG230 Operator Unit	The bottom line displays the error when the BG230 is not in the programming mode
Operator surface OS6.0	Initialization Test = red (State field) Runtime Test = red (State field)

10.2. Initialization Test

These self-monitoring tests are processed automatically when switching the unit on.

Error code BG230	Error OS6.0 operator software	Instruction
H' 0000 0001	ADC Error	Internal error
H' 0000 0002	I2C Error	Internal error
H' 0000 0004	OTH Error	Check the BG230 power supply or the encoder supply (or internal error)
H' 0000 0008	SCI Error	Internal error
H' 0000 0010	DIO Error	Check the digital outputs for short circuit resp. other errors (or internal error)
H' 0000 0020	GPI Error	Check the connections of the digital inputs and the input configuration (or internal error)
H' 0000 0040	CAP Error	Internal error
H' 0000 0080	SPI Error	Check the connections of the analog output (or internal error)
H' 0000 0100	QEP Error	Check the separation or disconnection of the encoder supply at Self-Test (or internal error)
H' 0000 0200	SCO Error	Check the connections of the SinCos output (or internal error)
H' 0000 0400	CPU Error	Internal error
H' 0000 0800	RAM Error	Internal error
H' 0000 1000	WDO Error	Internal error



For all error messages, the following applies:

Switch the unit OFF and ON again.

If the error message continues, please contact the manufacturer of the unit.

10.3. Runtime Test

These internal monitoring procedures run automatically and continuously in the background:

Error code BG230	Error Message on PC (Operator Software OS6.0)	Instruction
H' 0000 0001	SIN/COS Channel 1 Error	SinCos Encoder 1 signals at [X6] incorrect (Offset/Phase) or internal error
H' 0000 0002	SIN/COS Channel 2 Error	SinCos Encoder 2 signals at [X7] incorrect (Offset/Phase) or internal error
H' 0000 0004	External Supply Channel 1 Error	Encoder Supply 1: short circuit resp. faulty circuit at [X6] or [X8] or internal error
H' 0000 0008	External Supply Channel 2 Error	Encoder Supply 2: short circuit resp. faulty circuit at [X7] or [X9] or internal error
H' 0000 0010	External Supply BG Error	BG230 Power Supply: short circuit resp. faulty circuit at [X11] or internal error
H' 0000 0020	External Supply BG Status Error	BG230 Power Supply: short circuit resp. faulty circuit at [X11] or internal error
H' 0000 0040	External Supply GV Status Error	Encoder Supply: short circuit resp. faulty circuit or internal error
H' 0000 0080	External Supply Short Circuit Error	Encoder Supply: short circuit resp. faulty circuit internal error
H' 0000 0100	Temperature Error	Impermissible high temperature or internal error
H' 0000 0200	Readback Digital Output Error	Digital outputs [X2]: short circuit resp. faulty circuit or internal error
H' 0000 0400	Sequence Analog Output Error	Open analog output (mA) or internal error
H' 0000 0800	Readback Relay Output Error	Relay control error, contact readback error or internal error
H' 0000 1000	Readback Analog Output Error	Open analog output (mA), overheating or internal error
H' 0000 2000	GPI Error	Illegal transition state at the inputs
H' 0000 4000	Sequence DAC Output Error	Open analog output (mA), overheating or internal error
H' 0000 8000	DAC Output Error	Open analog output (mA), overheating or internal error
H' 0001 0000	Phase Channel 1 Error	Illegal signal change at Encoder 1
H' 0002 0000	Phase Channel 2 Error	Illegal signal change at Encoder 2
H' 0004 0000	Frequency Error	Frequency error $F1 \neq F2$
H' 0008 0000	Drift Error 1	Drift error at Encoder 1
H' 0010 0000	Drift Error 2	Drift error at Encoder 2
H' 0020 0000	ESM Error	Internal error

Continuation „Runtime Test“:

Error code BG230	Error Message on PC (Operator Software OS6.0)	Instruction
H' 0040 0000	External RB Error	Setting or resetting of the external relay faulty or internal error
H' 0080 0000	Wrong Parameter Error Simulation	Parameter "Error Simulation" \neq 1 while DIL-switch setting „Normal Operation“
H' 0100 0000	Register Error	Internal error
H' 0200 0000	RTI/QEP Cycle Error	
H' 0400 0000	External Clock Error	
H' 0800 0000	Wrong Parameter Setting	Frequency too high with regard to "Sampling Time" setting (Overflow)
H' 1000 0000	ADC Error	Internal error
H' 2000 0000	I2C Error	
H' 4000 0000	Initialization Test Error	An initialization test error has been detected (see chapter Initialization Test)



With all error messages, the following applies:


Switch the unit OFF and ON again. If the error message continues, please contact the manufacturer of the unit.

10.4. Error Clearing

Error states can generally be cleared by switching power off and on again (after the cause of the error has been removed). During commissioning only, errors can also be cleared as described under chapter **Setup / Clearing Errors**.

10.5. Error Detection Time

Basically it is not possible to specify an accurate error detection time, since times depend on many factors and error reasons. For example it makes a difference in time to detect either a SinCos error or an analog error. For simplification however we can assume that errors are recognized after a time of 85 ms plus the tripping time. As an exception of this, detection of frequency errors could also take longer, since these times are related to the input frequency and to parameter settings. Typical respond times for various outputs and for frequency errors can be found in chapter **Response Times**.

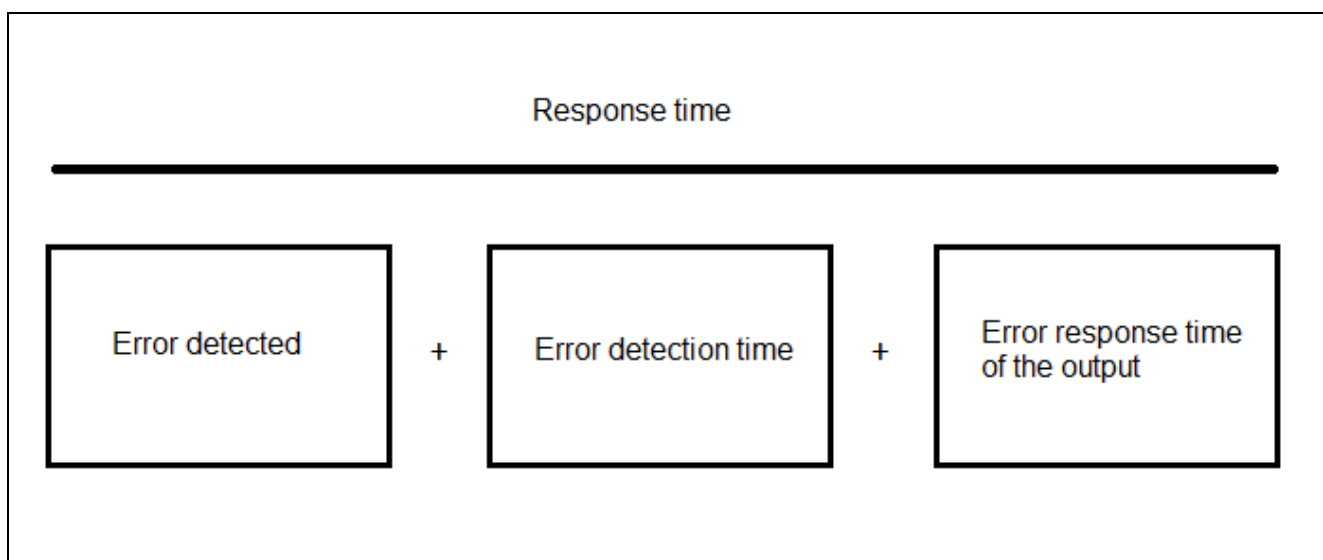

The error detection time depends (amongst others) on the following factors:

- type of error
- parameter settings
- external events and actions
- internal events and actions
- respond time of the output

11. Monitoring Functions


The monitoring functions are used to set the properties of digital outputs and relay output.

11.1. Overspeed (Switch Mode = 0)

With parameter setting "Switch Mode" = 0, the frequency is monitored for overspeed.

The function is always active and independent of the direction of rotation. The switching point for overspeed is always at Frequency = Preselect (no matter if with or without hysteresis).

Relevant Parameters	Remark
Switch Mode XXXX	= 0
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	hysteresis
Lock Output	lock function
Output Mode	homogenous or inverse output configuration (affects the Safety Integrity Level SIL)
Preselect XXX.L/H	switching point
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

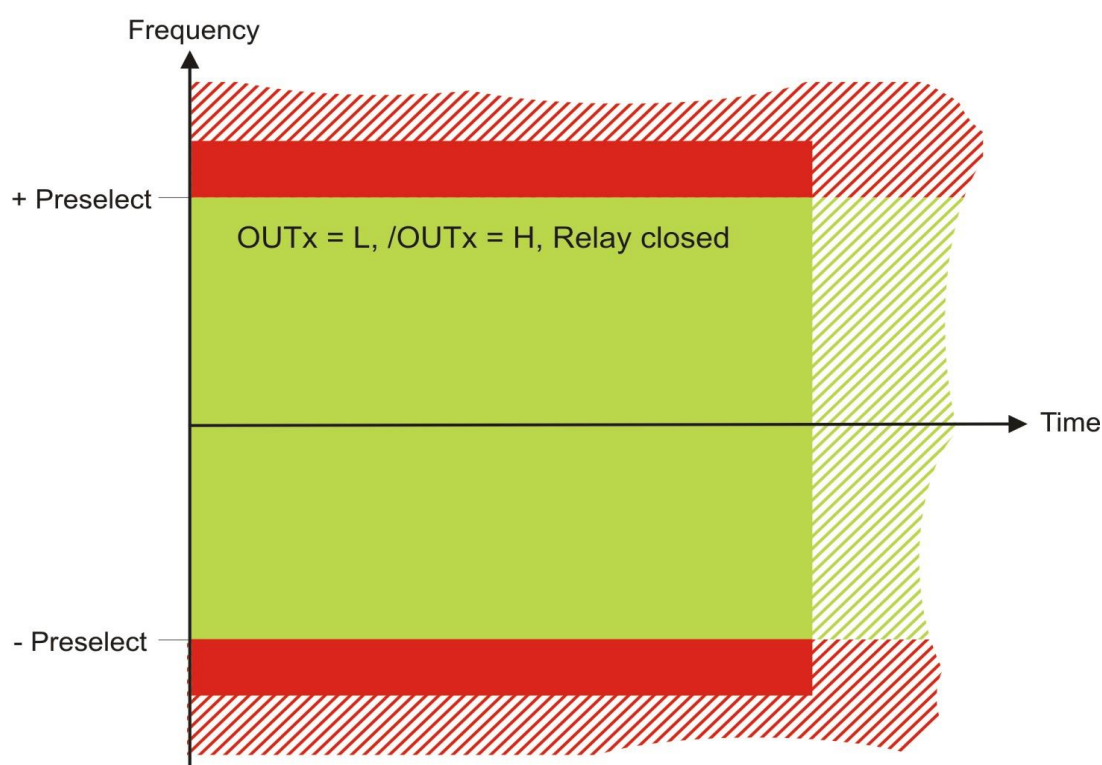

Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	When commutation is active only


Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, frequencies $|f| \geq 1000$ Hz are detected as overspeed. The overspeed output will be cleared with frequencies $|f| < 900$ Hz.

11.2. Underspeed (Switch Mode = 1)

With parameter setting "Switch Mode" = 1, the frequency is monitored for underspeed. The function is always active and independent of the direction of rotation. The switching point for underspeed is always at Frequency = Preselect (no matter if with or without hysteresis).

Relevant Parameters	Remark
Switch Mode XXXX	= 1
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	hysteresis
Startup Mode	type of start-up-delay
Startup Output	assignment of the outputs for start-up delay
Lock Output	lock function
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

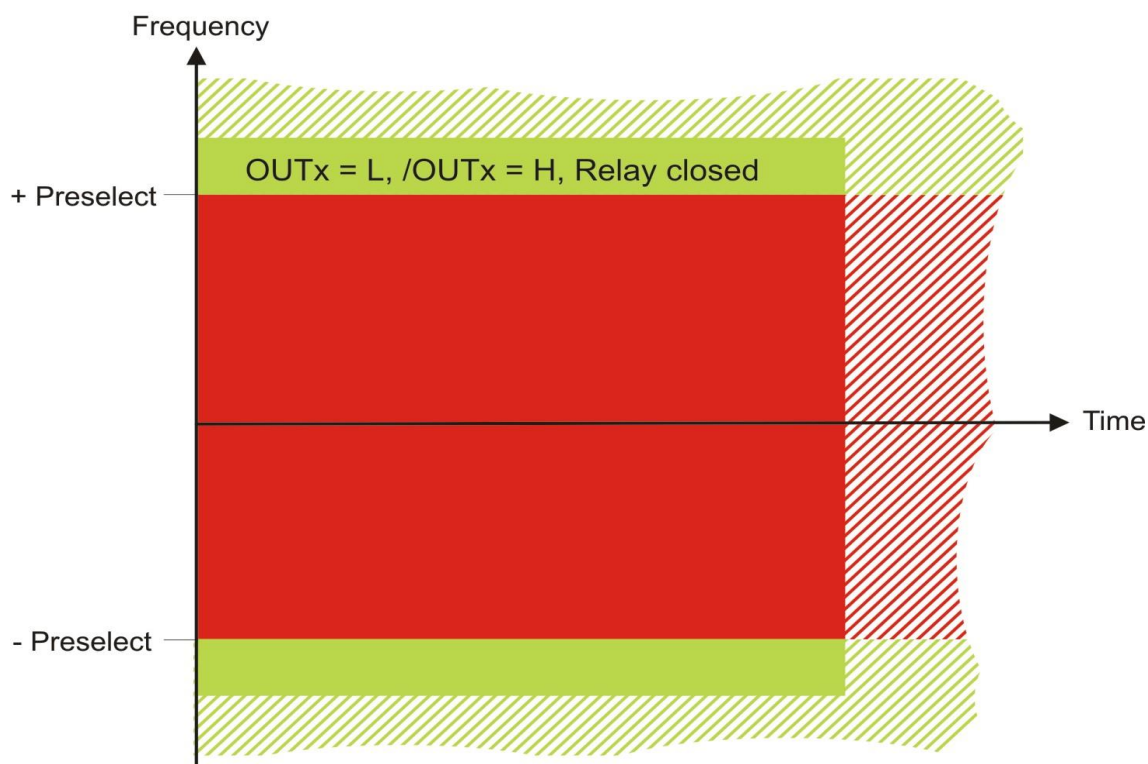

Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	When commutation is active only


Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, frequencies $|f| < 1000$ Hz are detected as underspeed. The underspeed output will be cleared with frequencies $|f| > 1100$ Hz.

11.3. Frequency Band (Switch Mode = 2)

With parameter setting "Switch Mode" = 2, the frequency is monitored within a frequency band. The function is always active and independent of the direction of rotation. The switching points of the band are located at Preselect +/- Hysteresis.

Relevant Parameters	Remark
Switch Mode XXXX	= 2
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	+/- range (center)
Startup Mode	type of start-up delay
Startup Output	output assignment for start-up delay
Lock Output	lock function
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	center
IN function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

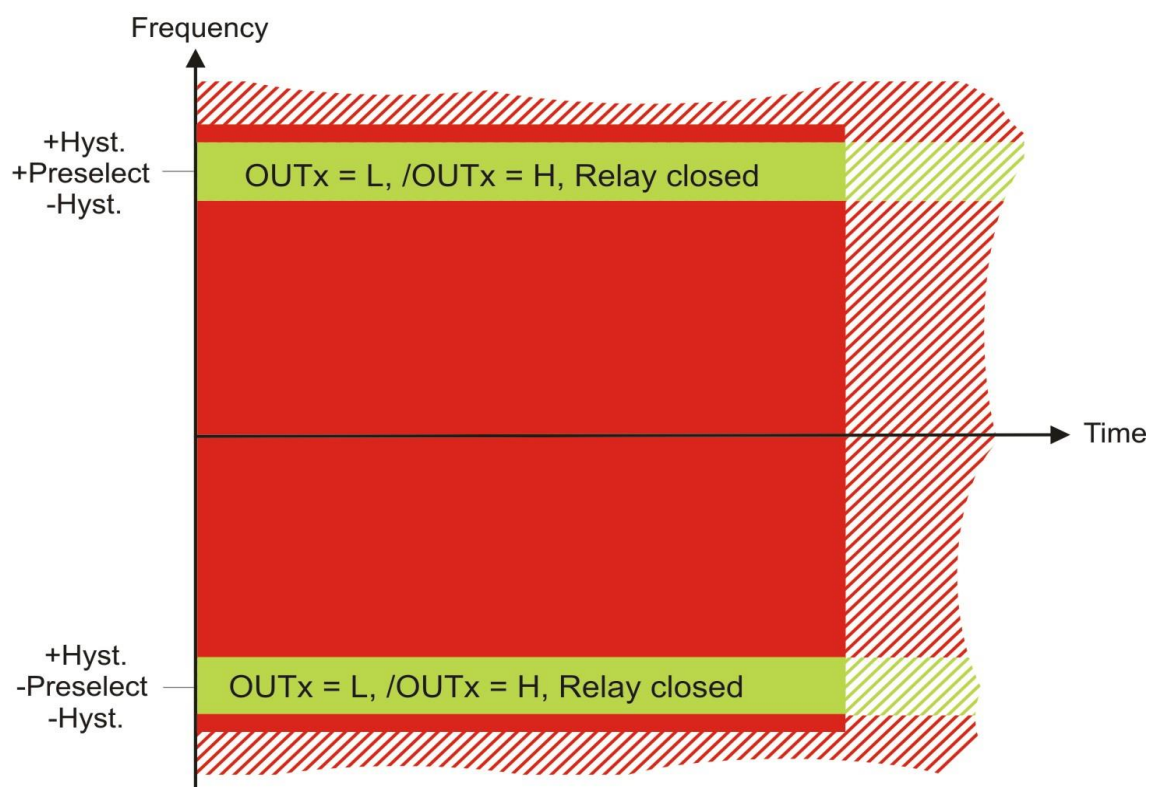


Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	when commutation is active only

Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, frequencies $|f| < 900$ Hz are detected as underspeed and frequencies $|f| > 1100$ Hz as overspeed.

11.4. Standstill (Switch Mode = 3)

With parameter setting "Switch Mode" = 3, the frequency is monitored for standstill. The function is always active. The output is set after detection of frequency 0 Hz and expiration of the standstill time. When a frequency different from zero is detected, the output will be reset. Parameter "Wait Time" determines the threshold under which a frequency is taken as zero.

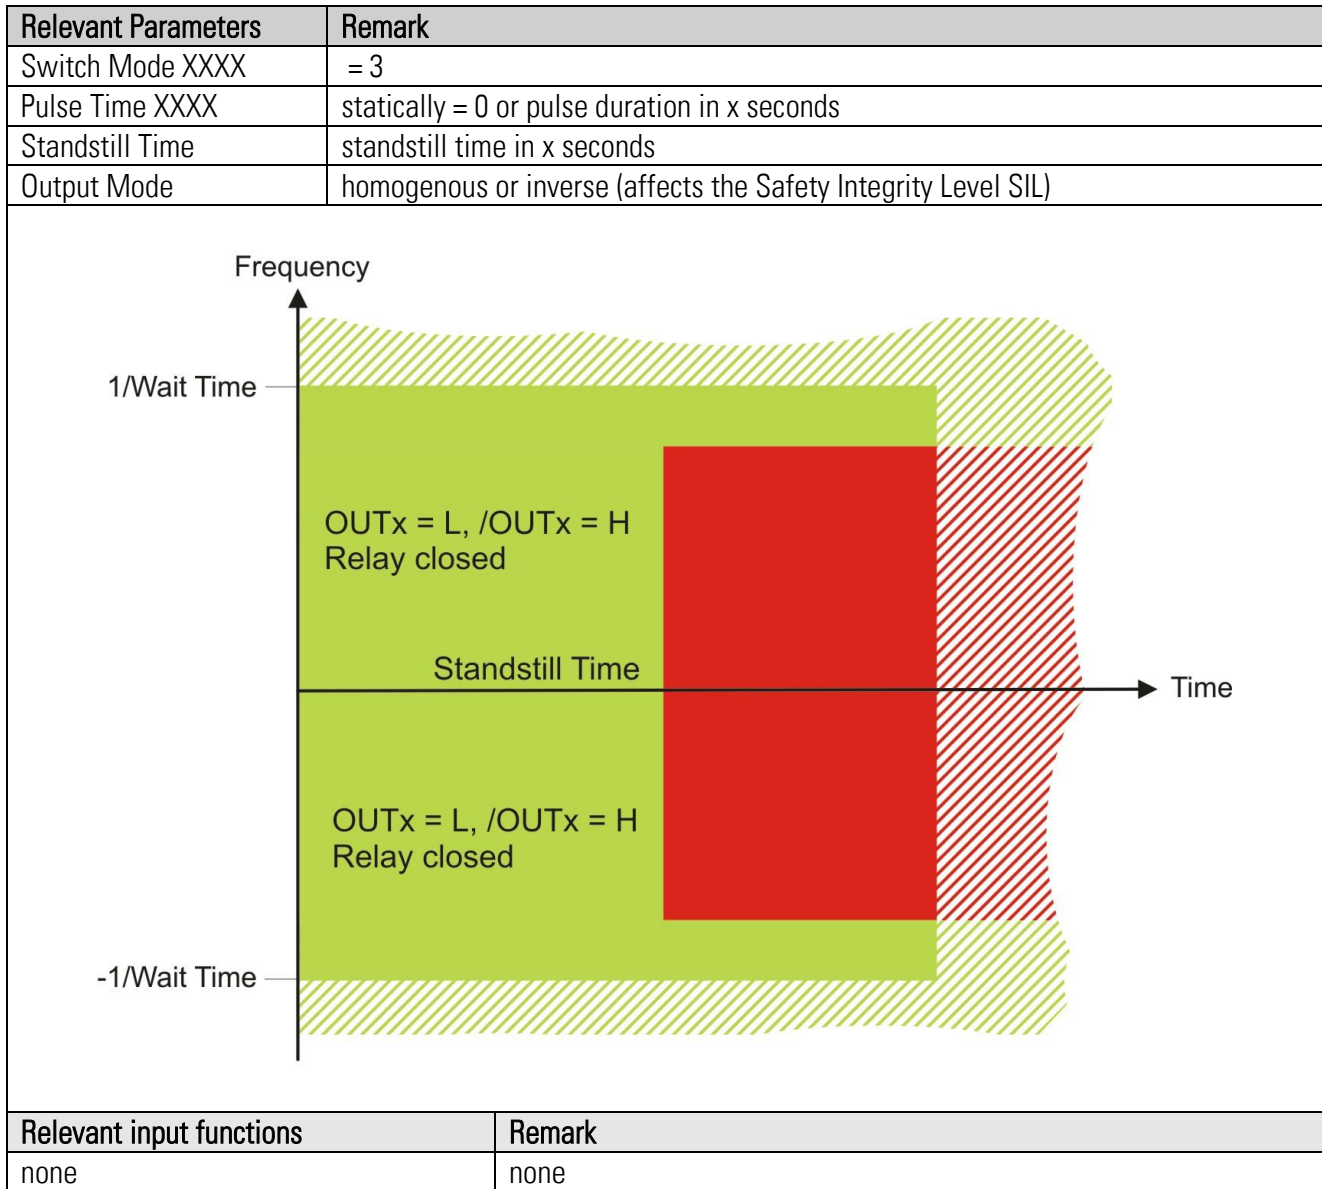

Example:


With a Wait Time setting of 0.01 seconds, all frequencies < 100 Hz will be taken as zero ($f = 0$).

The expiration of Standstill Time starts as soon both channels report 0 Hz. When this time has expired and both frequencies are still 0 Hz, the standstill output will be set. As soon one of the two frequencies becomes different from zero again, the standstill output will be reset.

11.5. Overspeed (Switch Mode = 4)

With parameter setting "Switch Mode" = 4, the frequency is monitored for overspeed. The function is always active and considers the direction of rotation. The switching point for overspeed is always at Frequency = Preselect (no matter if with or without hysteresis).

Relevant Parameters	Remark
Switch Mode XXXX	= 4
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	hysteresis
Lock Output	lock function
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

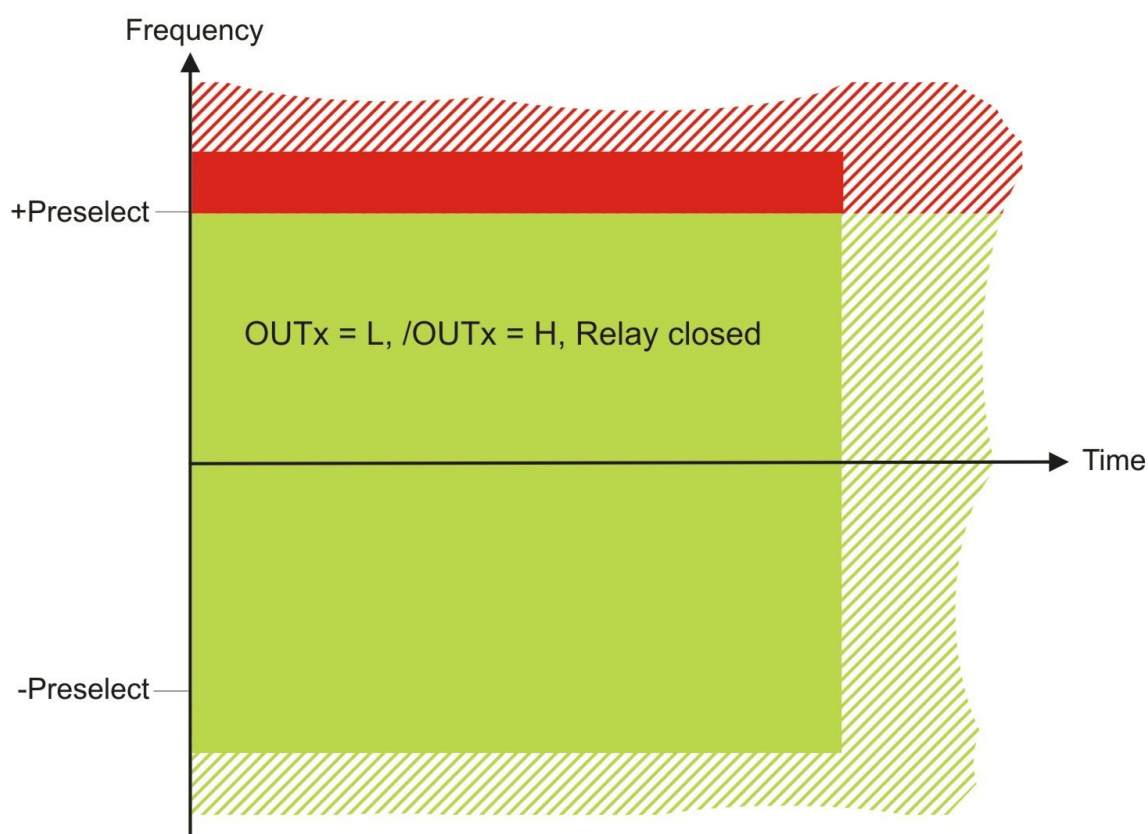

Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	when commutation is active only


Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, Frequencies $f \geq 1000$ Hz are declared as overspeed. The overspeed output will be cleared with frequencies $f < 900$ Hz.

11.6. Underspeed (Switch Mode = 5)

With parameter setting "Switch Mode" = 5, the frequency is monitored for underspeed. The function is always active and considers the direction of rotation. The switching point for underspeed is always at Frequency = Preselect (no matter if with or without hysteresis).

Relevant Parameters	Remark
Switch Mode XXXX	= 5
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	hysteresis
Startup Mode	type of start-up delay
Startup Output	output assignment for start-up delay
Lock Output	lock function
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

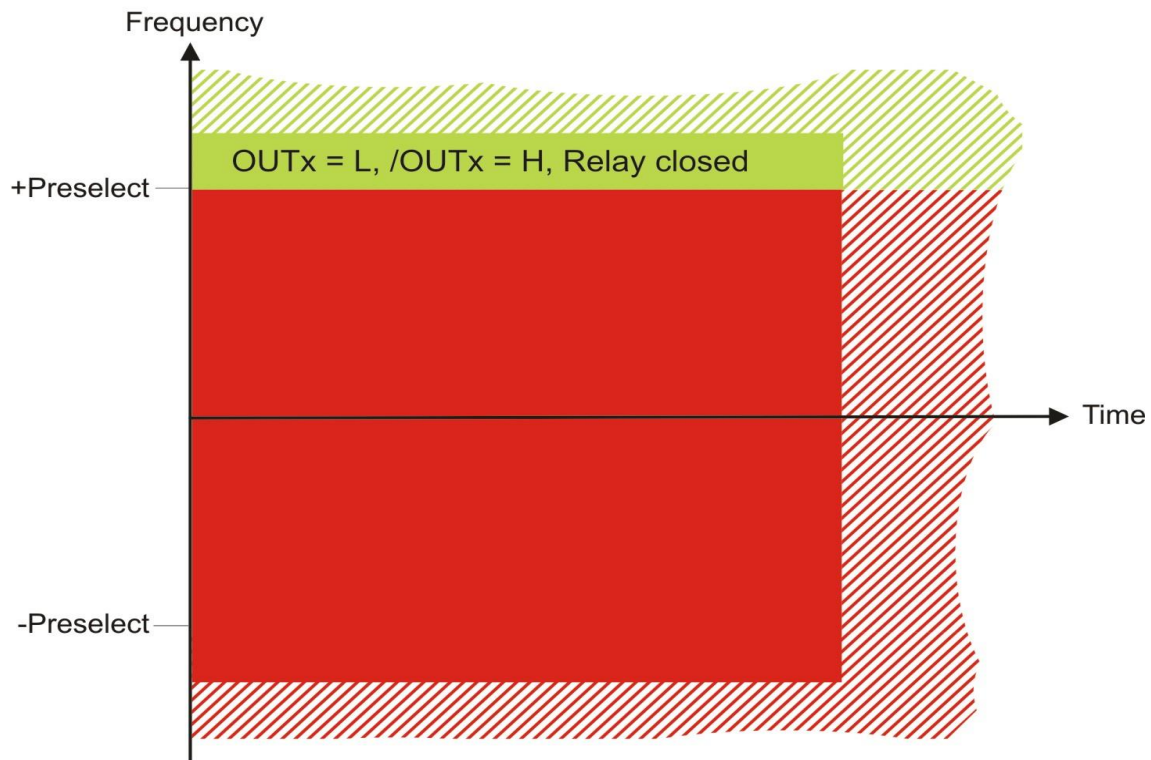

Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	when commutation is active only


Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, frequencies $f < 1000$ Hz are declared as underspeed. The underspeed output will be cleared with frequencies $f > 1100$ Hz.

11.7. Frequency Band (Switch Mode = 6)

With parameter setting "Switch Mode" = 6, the frequency is monitored within a frequency band. The function is always active. The switching positions inside the frequency band are at Preselect +/- Hysteresis.

Relevant Parameters	Remark
Switch Mode XXXX	= 6
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Hysteresis XXXX	+/- range (center)
Startup Mode	type of start-up delay
Startup Output	output assignment for start-up delay
Lock Output	lock function
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	center
IN function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

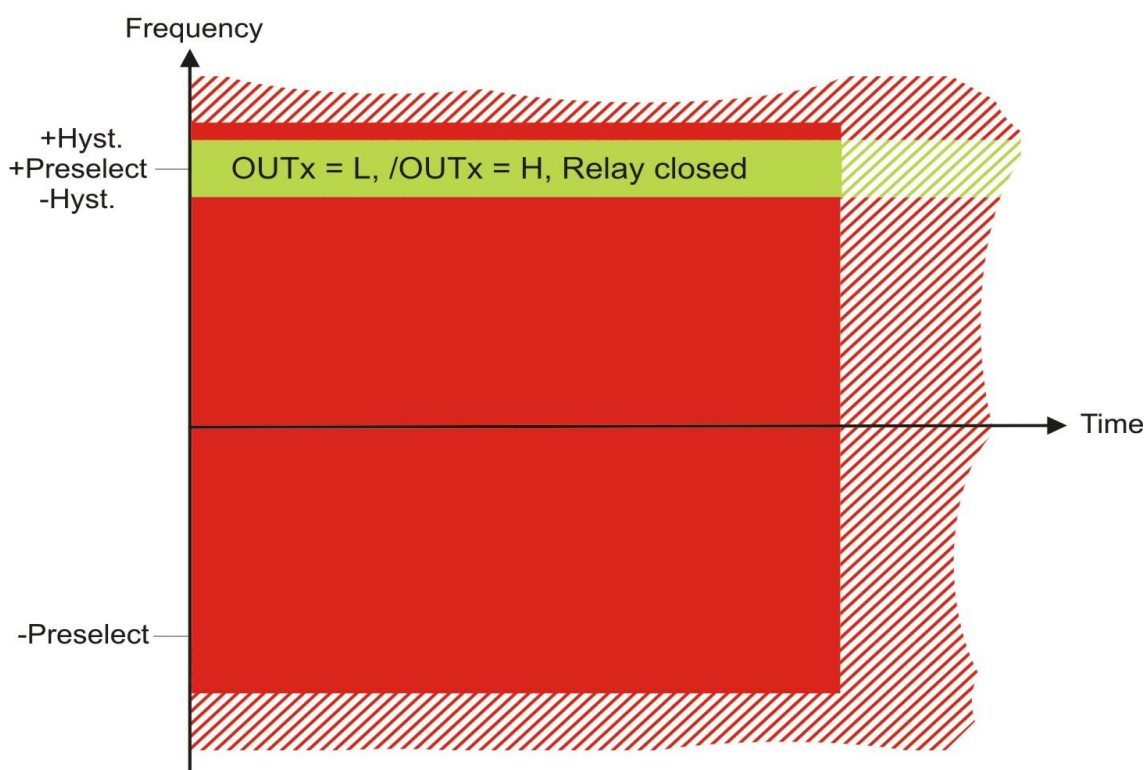

Relevant input functions	Remark
Clear lock function (function: 1-6)	when lock function is active only
Toggle switching points (function: 13)	when commutation is active only


Example:

With Preselect = 1000.0 Hz and Hysteresis = 10 %, frequencies $f < 900$ Hz are declared as underspeed and frequencies $f > 1100$ Hz as overspeed.

11.8. Frequency > 0 Hz (Switch Mode = 7)

With parameter setting "Switch Mode" = 7, the direction of the frequency is monitored. The function is always active. With positive frequencies ($f > 0$ Hz), the output is set to ON. The output will reset with negative frequencies ($f < 0$ Hz) or with standstill ($f = 0$ Hz) after expiration of the Standstill Time.

Relevant Parameters	Remark
Switch Mode XXXX	= 7
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Standstill Time	standstill time in seconds
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)

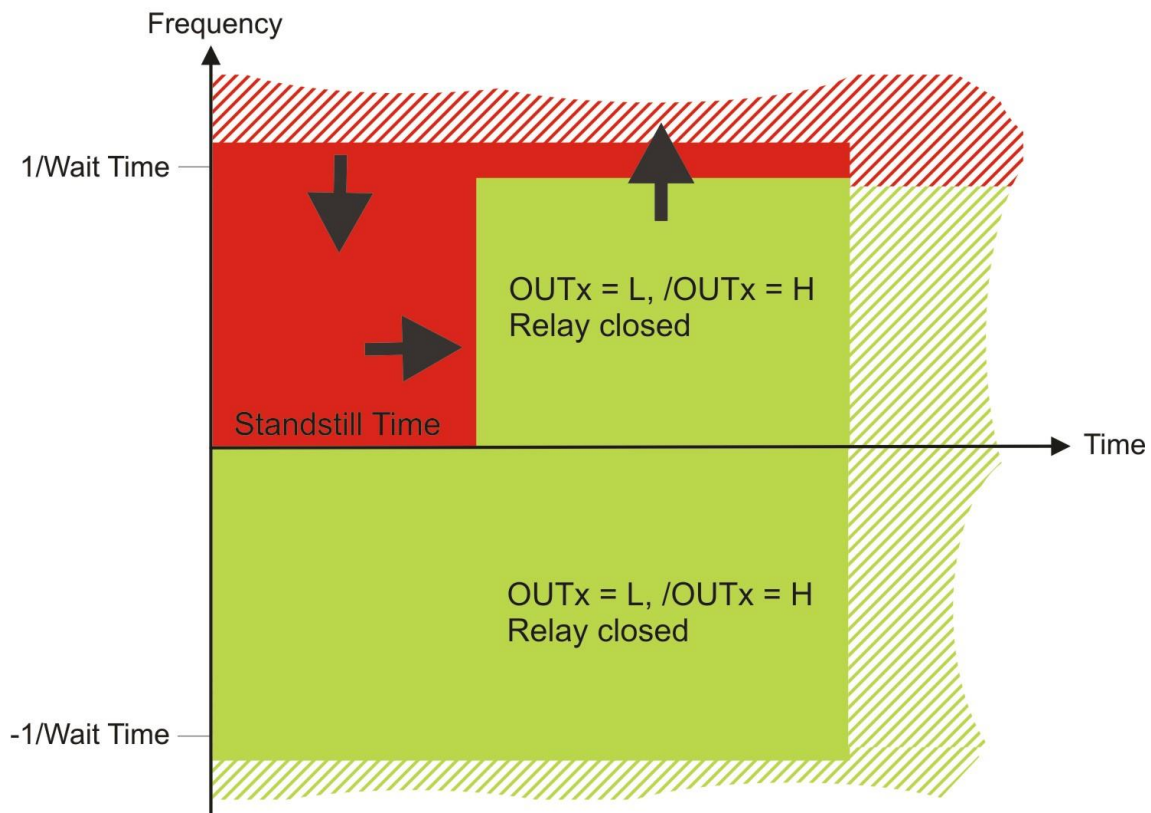

Relevant input functions	Remark
none	none


Example:

The transition from a negative to a positive frequency will cause an immediate change of the output state. Only in case of a transition from a positive frequency to zero, the output will not change before Standstill Time has elapsed.

11.9. Frequency < 0 Hz (Switch Mode = 8)

With parameter setting "Switch Mode" = 8, the direction of the frequency is monitored. The function is always active. With negative frequencies ($f < 0$ Hz), the output is set to ON. The output will reset with positive frequencies ($f > 0$ Hz) or with standstill ($f = 0$ Hz) after expiration of the Standstill Time.

Relevant Parameters	Remark
Switch Mode XXXX	= 8
Pulse Time XXXX	statically = 0 or pulse duration in x seconds
Standstill Time	standstill time in seconds
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)

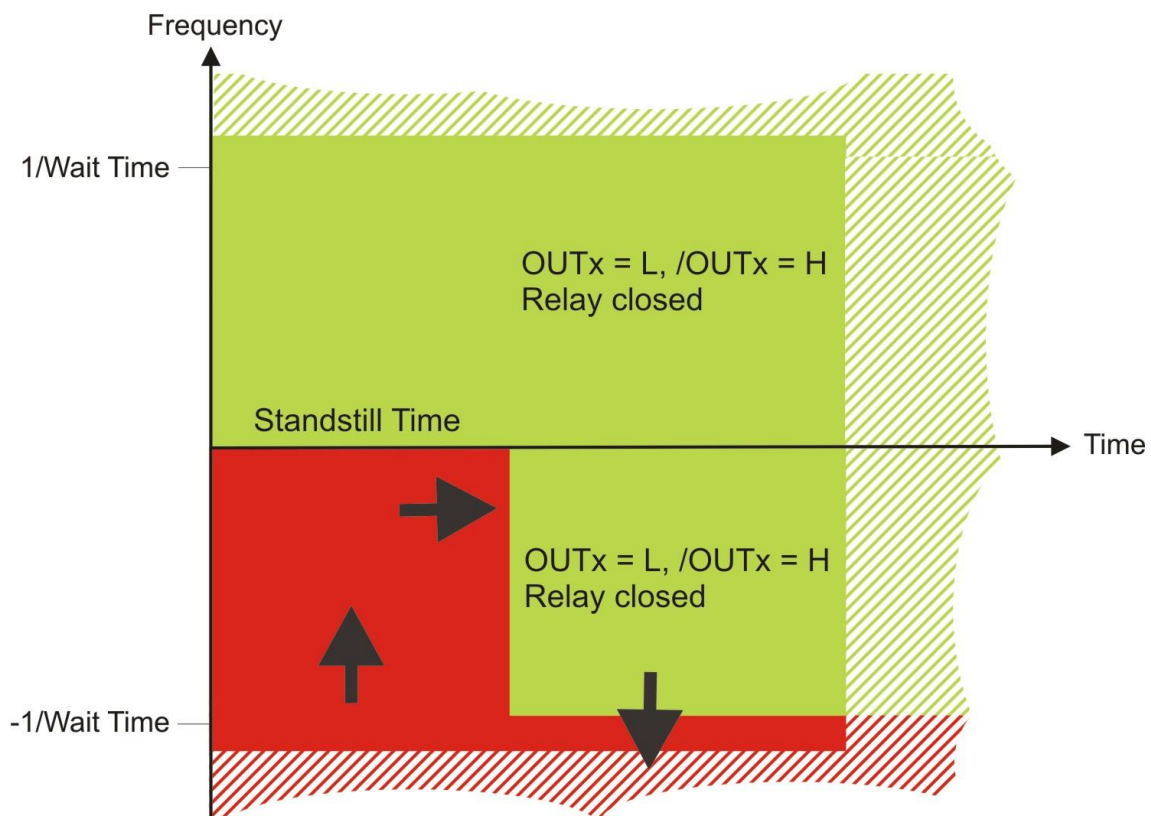


Relevant input functions	Remark
none	none

Example:

The transition from a positive to a negative frequency will cause an immediate change of the output state. Only in case of a transition from a negative frequency to zero, the output will not change before Standstill Time has elapsed.

11.10. Clock Generation for Pulsed Readback (Switch Mode = 9)

With parameter setting “Switch Mode” = 9, the output supplies a clock or an inverted clock with a specific frequency. The Output Mode of the output in use must be set to zero. Clock outputs provide different output frequencies. This function is used to monitor the readback contacts of an external relay (see EDM function).

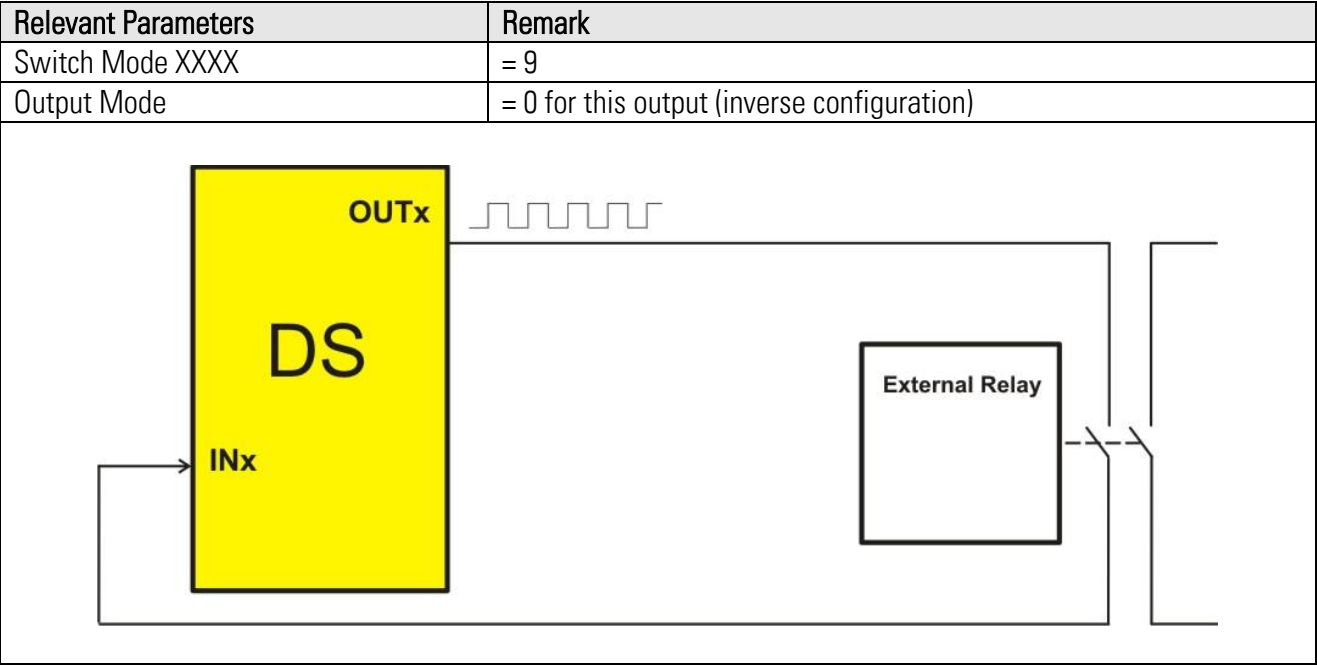


11.11. STO/SBC/SS1 by Input (Switch Mode = 10)

With parameter setting "Switch Mode" = 10, an STO, SBC or SS1 function is assigned to the output. The function requires an enable input signal which is assigned by the Matrix parameter. Parameter "Lock Output" can be used to activate a lock function, which can be acknowledged by a further input. Acknowledgement is only possible with deactivated enable signal. There is no frequency or ramp monitoring.

Relevant Parameters	Remark
Switch Mode XXXX	= 10
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0
MAI-Delay XXXX	= 0
Lock Output	for lock function use only range 0-31
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
IN Function	Input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

STO/SBC Function: Without Selfhold Function and with static high Enable Input

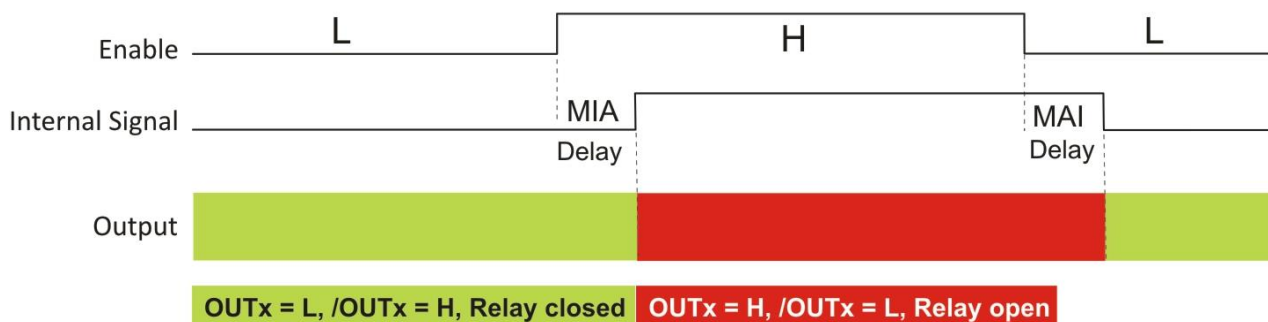

Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	when lock function is active only

Important: A safety function will not be achieved before the DS230 monitor has been combined with a corresponding actuator unit.

11.12. STO/SBC Produced by Situation (Switch Mode = 10)

If an STO should e.g. be triggered by overspeed, a second feedback output, configured as overspeed can be used as enable input (parameter "Matrix XXXX"). One of the two functions requires a lock function.

Relevant Parameters	Remark
Switch Mode XXXX	= 10
Matrix XXXX	feedback output
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Lock Output	for lock function use only range 0-31
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	when lock function is active only

11.13. SS1 Produced by Input (Switch Mode = 10)

An SS1 function can be achieved when the STO function is provided with a MIA Delay. After this safe delay time an STO will be triggered. In this case a lock function must be activated. In case the Enable signal should be reset during the delay period, the output will not trigger. There is no frequency or ramp monitoring.

Relevant Parameters	Remark
Switch Mode XXXX	= 10
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	delay time
MAI-Delay XXXX	= 0 (can also be set according to need)
Lock Output	for lock function use only range 0-31
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	when lock function is active only


11.14. SLS Produced by Input (Switch Mode = 11)

With parameter setting "Switch Mode" = 11, an SLS function is assigned to the output. The function is triggered, independent of the direction of rotation, at overspeed. The function requires an enable input signal which must be assigned by parameter Matrix.

A lock function is already implemented and does not need to be set separately. The lock function can be acknowledged by a further input. Acknowledgement is only possible with frequencies below overspeed, or with the enable signal deactivated. No ramp monitoring is available.

Relevant Parameters	Remark
Switch Mode XXXX	= 11
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SLS Function: with static high Enable Input

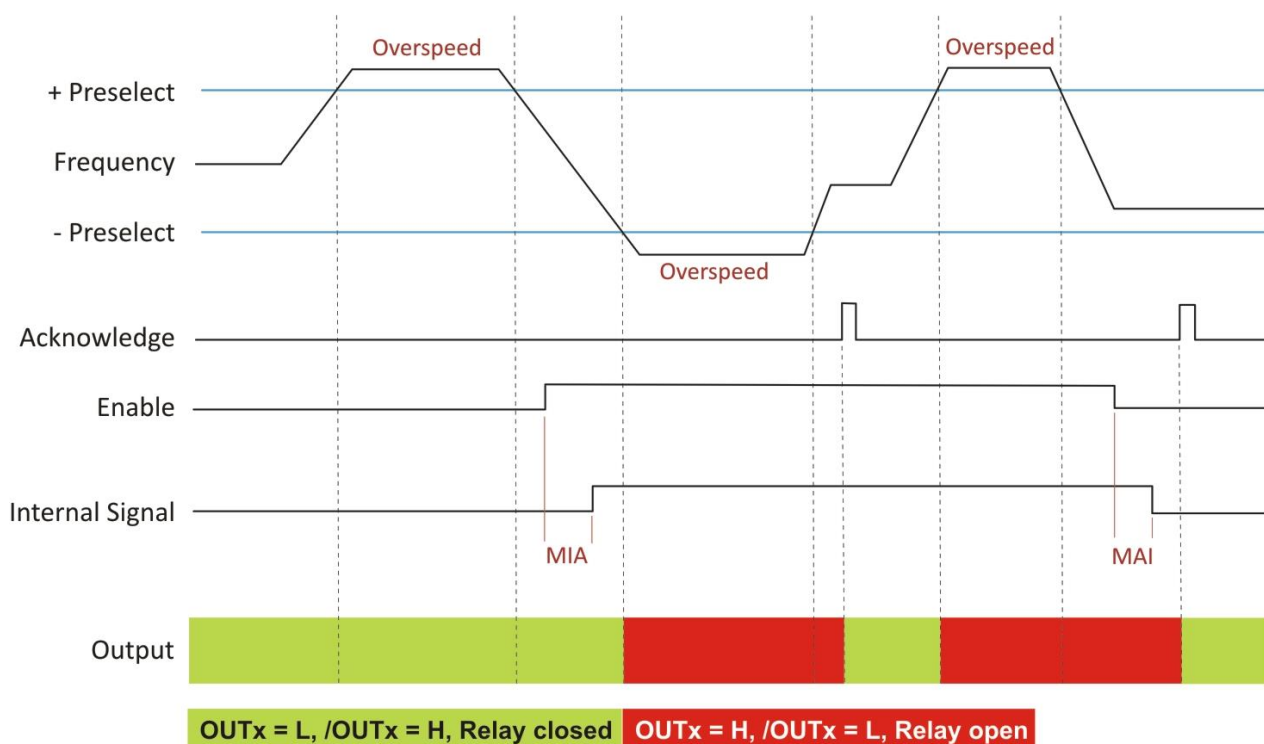

Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	activates the function


11.15. SMS (Switch Mode = 12)

With parameter setting "Switch Mode" = 12, an SMS function is assigned to the output. The function is triggered, independent of the direction of rotation, at overspeed.

A lock function is already implemented and does not need to be set separately. The lock function can be acknowledged by a further input. Acknowledgement is only possible with frequencies below overspeed. No ramp monitoring is available.

Relevant Parameters	Remark
Switch Mode XXXX	= 12
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SMS Function: No Enable Signal

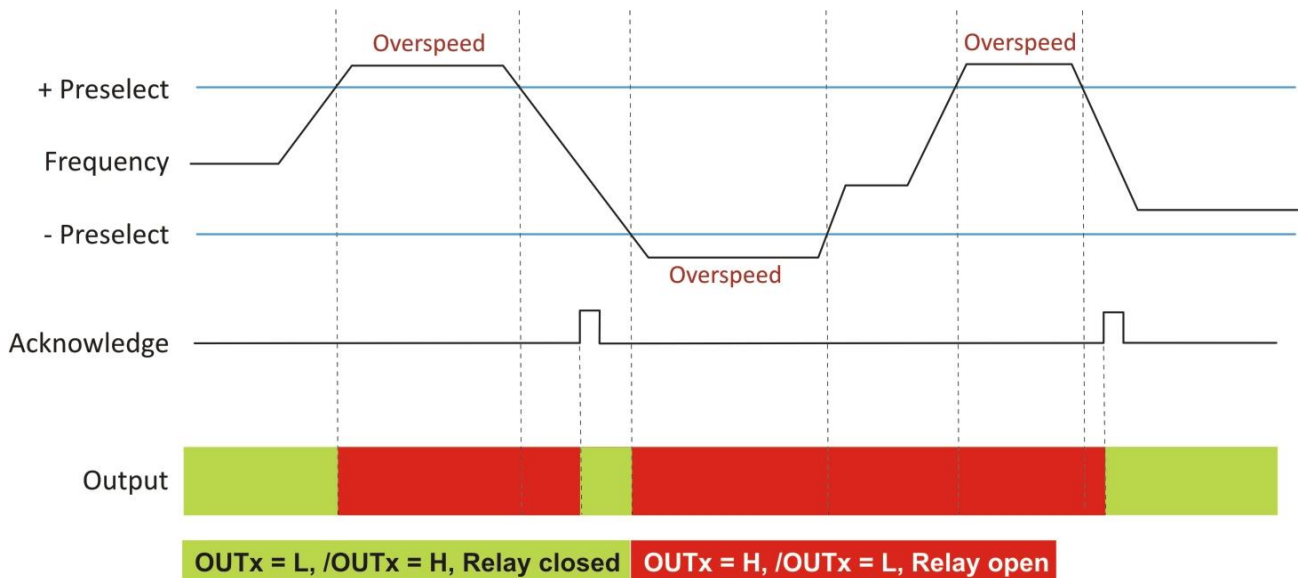


Relevant input functions	Remark
Clear lock function (function: 1-6)	activates the function

11.16. SDI Produced by Input ($f > 0$ Hz), (Switch Mode = 13)

With parameter setting "Switch Mode" = 13, an SDI function is assigned to the output. The function is triggered with positive frequency. A lock function is already implemented and does not need to be set separately. The lock function can be acknowledged by a further input. An Acknowledgement is only possible with frequencies lower than or equal to 0 Hz ($f \leq 0$ Hz) or with the Enable signal deactivated. The SDI function refers to evaluation of frequency, but not of the position.

Relevant Parameters	Remark
Switch Mode XXXX	= 13
Wait Time	reset time
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SDI Function: with static high Enable Input

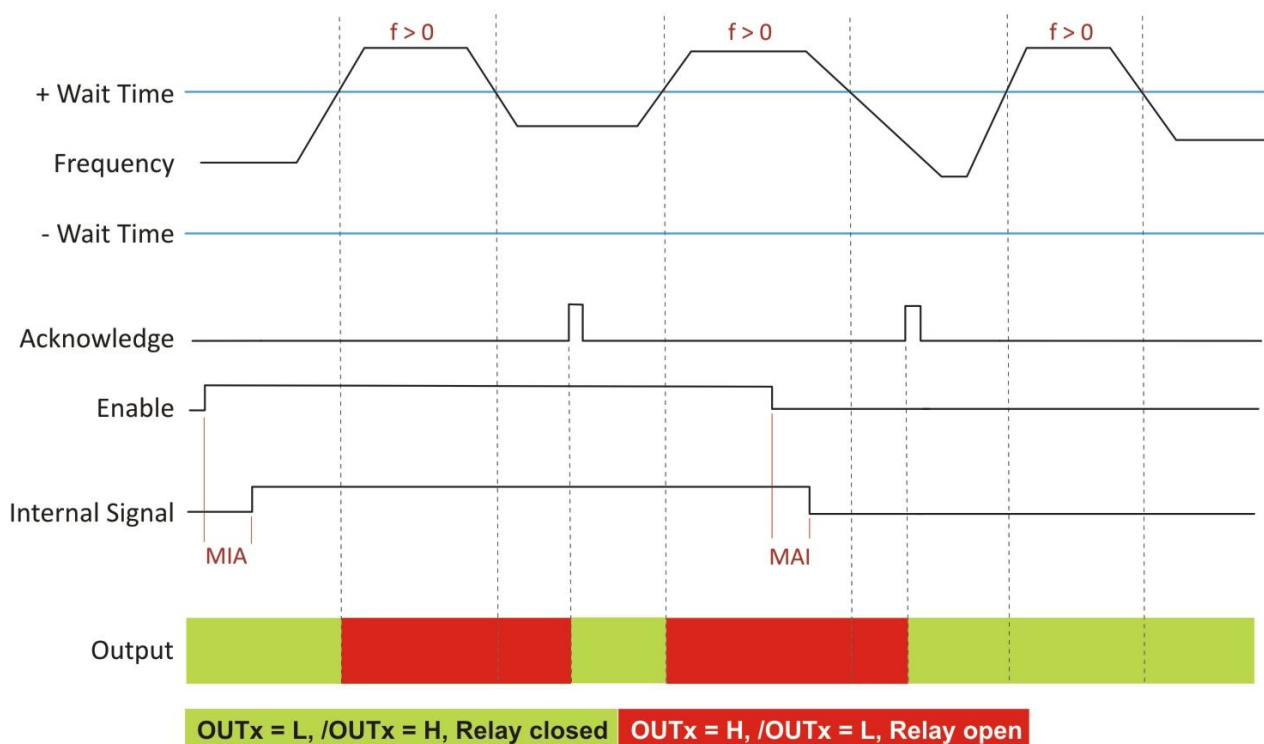


Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	activates the function

11.17. SDI Produced by Input ($f < 0$ Hz) (Switch Mode = 14)

With parameter setting "Switch Mode" = 14, an SDI function is assigned to the output. The function is triggered with negative frequency. A lock function is already implemented and does not need to be set separately. The lock function can be acknowledged by a further input. An Acknowledgement is only possible with frequencies higher than or equal to 0 Hz ($f \geq 0$ Hz), or with the Enable signal deactivated. The SDI function refers to evaluation of frequency, but not of the position.

Relevant Parameters	Remark
Switch Mode XXXX	= 14
Wait Time	reset time
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SDI Function: with static high Enable Input

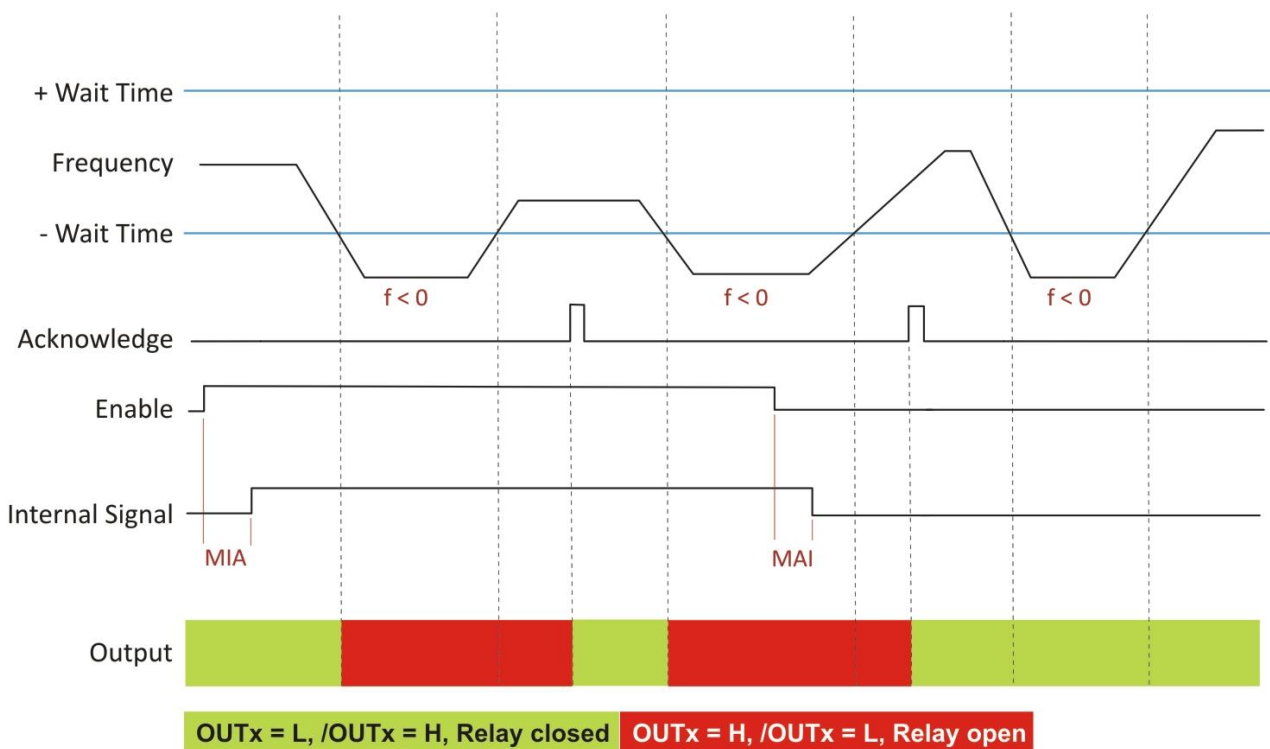

Relevant input functions	Remark
Enable (Function: 21)	activates the function
unlock lock function (function: 1-6)	activates the function

11.18. SSM via Input (Switch Mode = 15)


With parameter setting "Switch Mode" = 15, an SSM function is assigned to the output. The function is triggered by underspeed, independent of the direction of rotation. The function requires an enable input signal which must be assigned by parameter Matrix.

A lock function can be set separately, which can be acknowledged by a further input.

Acknowledgement is only possible with frequencies higher than underspeed, or with the enable signal deactivated.

Relevant Parameters	Remark
Switch Mode XXXX	= 15
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Lock Output	for lock function use only range 0-31
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	switching point
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SSM Function: with static high Enable Input

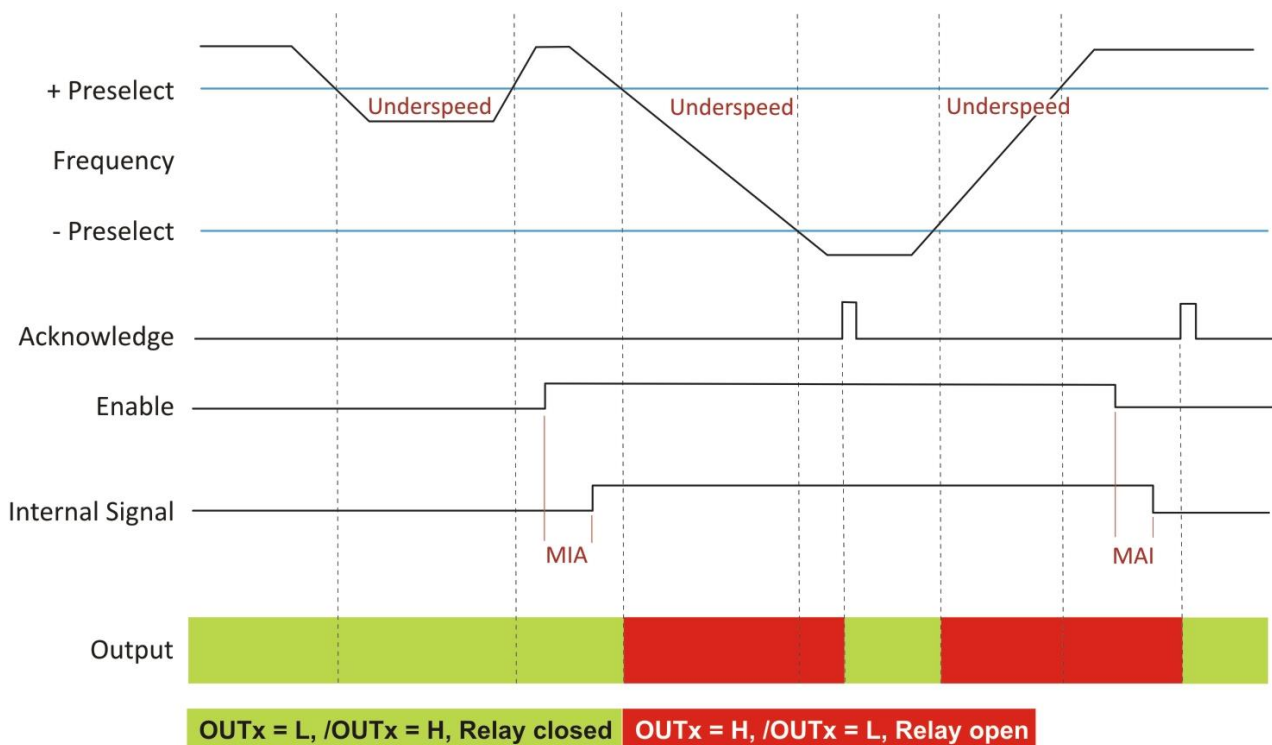


Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	when lock function is active only

11.19. SSM via Input (Switch Mode = 16)

With parameter setting "Switch Mode" = 16, an SSM function is assigned to the output. The function is triggered when the frequency leaves the frequency band, independent of the direction of rotation. The function requires an enable input signal which must be assigned by parameter Matrix. A lock function can be set separately, which can be acknowledged by a further input. Acknowledgement is only possible with frequencies inside the frequency band, or with the enable signal deactivated.

Relevant Parameters	Remark
Switch Mode XXXX	= 16
Hysteresis XXXX	+/- range (center)
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Lock Output	for lock function use only range 0-31
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. L/H	center
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SSM Function: with static high Enable Input

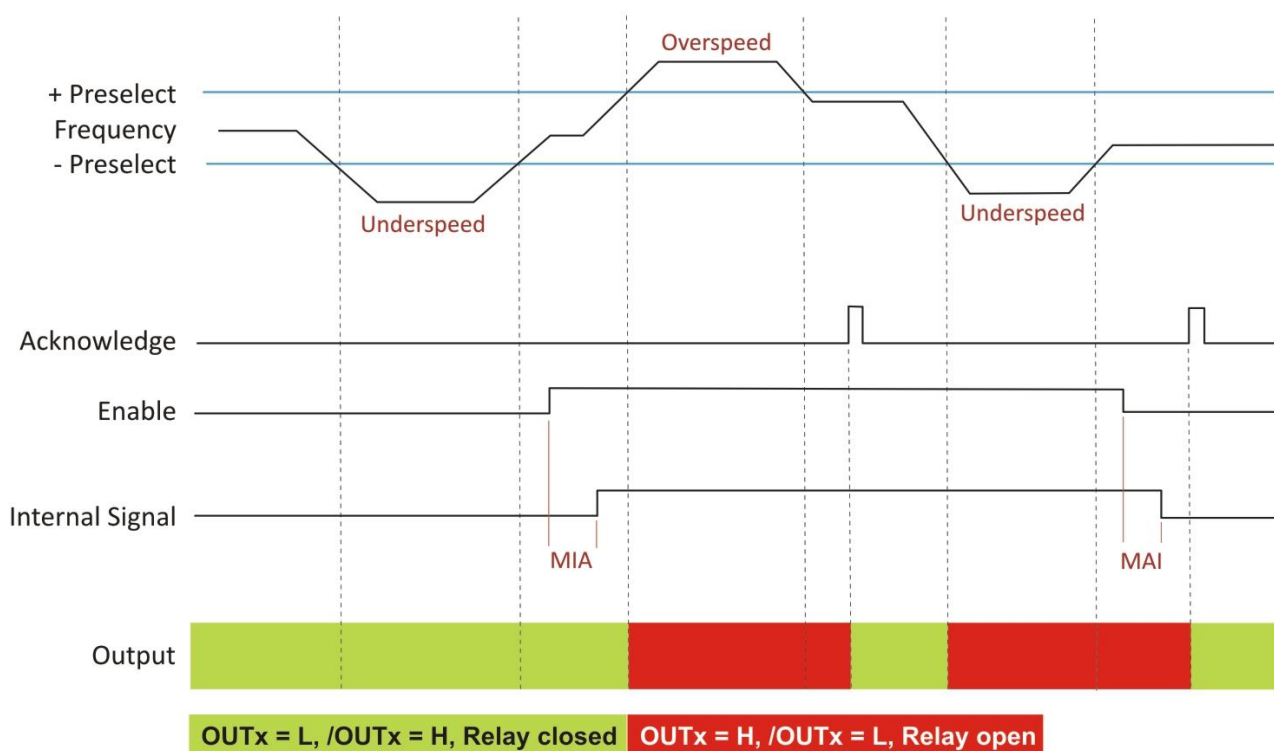


Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	when lock function is active only

11.20. SOS/SLI/SS2 via Input (Switch Mode = 17)

With parameter setting "Switch Mode" = 17, an SOS/SLI/SS2 function is assigned to the output. This function will be triggered by overspeed or by position error, with no regard of the direction of rotation. An enable input signal is required, which can be assigned by the Matrix parameter. A lock function is already implemented and does not need to be set separately. The lock function can be acknowledged by a further input. Acknowledgement is only possible with frequencies lower than overspeed, or with the enable signal deactivated. By switching the enable signal from inactive to active, the current position is adopted for error evaluation. SLI and SOS are different with regard to the level of the switching points only. While SLI corresponds to a monitored Jog operation, SOS provides standstill monitoring. A position error can be acknowledged only by disabling the Enable signal. Any SOS function with MIA Delay unequal to zero will turn to an SS2 function.

Relevant Parameters	Remark
Switch Mode XXXX	= 17
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need, SS2)
MAI-Delay XXXX	= 0 (can also be set according to need)
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. D	switching point for position
Preselect XXX. L/H	switching point for overspeed
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

SOS Function: with static high Enable Input

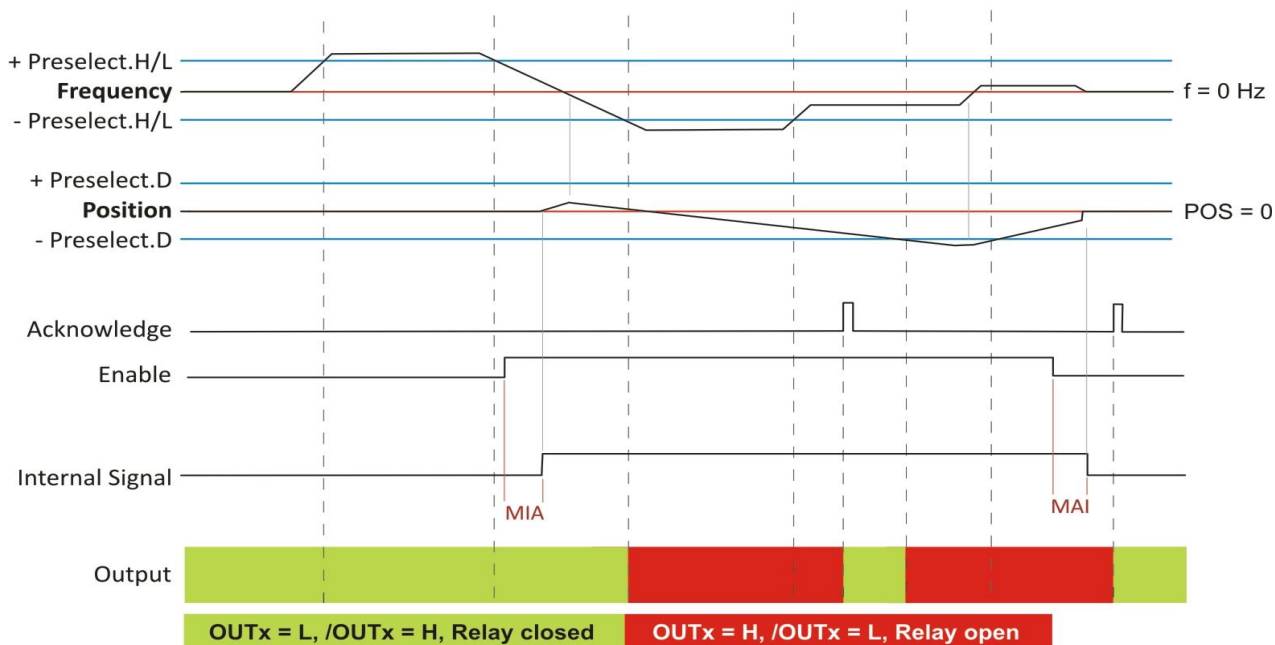


Relevant input functions	Remark
Enable (Function: 21)	activates the function
Clear lock function (function: 1-6)	activates the function

11.21. Standstill via Input (Switch Mode = 18)

With parameter setting "Switch Mode" = 18, a standstill function is assigned to the output. The function is triggered at standstill. The function requires an enable input signal which can be assigned by parameter Matrix. There is no lock function implemented. By switching the enable signal from inactive to active, the current position will be adopted for error evaluation. The output is set after Standstill Time has elapsed. In case of a position error, or with a frequency unequal to zero, the output will reset. Position errors can be cleared only by deactivation of the Enable signal.

Relevant Parameters	Remark
Switch Mode XXXX	= 18
Wait Time	reset time
Matrix XXXX	use only inputs, but no feedback outputs
MIA-Delay XXXX	= 0 (can also be set according to need)
MAI-Delay XXXX	= 0 (can also be set according to need)
Output Mode	homogenous or inverse (affects the Safety Integrity Level SIL)
Preselect XXX. D	switching point for position
Standstill Time	time (sec.)
IN Function	input function
IN Config	switching behavior (dynamically, statically)
Input Mode	input configuration (affects the Safety Integrity Level SIL)

Standstill Monitor: with static high Enable Input

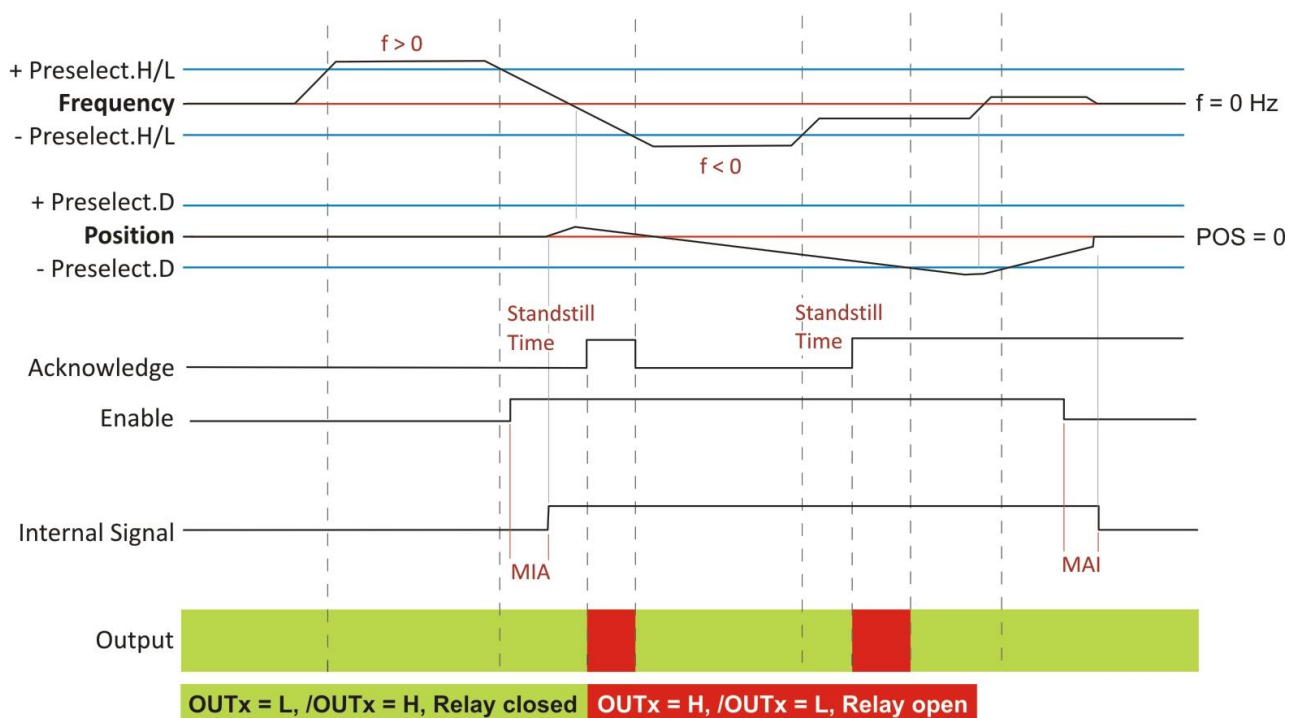

Relevant input functions	Remark
Enable (Function: 21)	activates the function

12. Response times

12.1. Response Time of the Relay Output

Hardware delay of the relay itself: 50 ms (max.)

With normal monitoring of overspeed, underspeed or frequency band: (with frequency band please choose the lower frequency, since this produces more delay)	
$2 \times \text{Sampling Time} + 25 \text{ ms}$	for frequencies $> 1 / \text{Sampling Time}$
e.g. $f = 10 \text{ kHz}$, Sampling Time = 1 ms	$10 \text{ kHz} > 1 \text{ kHz} \rightarrow \text{delay} = 27 \text{ ms}$
$2 \times 1/\text{frequency} + 25 \text{ ms}$	for frequencies $< 1 / \text{Sampling Time}$
e.g. $f = 100 \text{ Hz}$, Sampling Time = 1 ms	$100 \text{ Hz} < 1 \text{ kHz} \rightarrow \text{delay} = 45 \text{ ms}$

With normal monitoring of standstill:	
$2 \times \text{Wait Time} + \text{Standstill Time} + 25 \text{ ms}$	for frequency = 0
e. g. Standstill Time = 0 ms, Wait Time = 100 ms	delay = 225 ms



These response times are based on a step function.
With a system error (critical internal error) the response time will be
 $85 \text{ ms} + 25 \text{ ms} = 110 \text{ ms}$ (valid for versions 3B or higher)

12.2. Response Time of the Analog Output

Hardware delay of the analog output itself: 1 ms

With normal monitoring of overspeed, underspeed or frequency band: (with frequency band please choose the lower frequency, since this produces more delay)	
$2 \times \text{Sampling Time} + 1 \text{ ms}$	for frequencies $> 1 / \text{Sampling Time}$
e.g. $f = 10 \text{ kHz}$, Sampling Time = 1 ms	$10 \text{ kHz} > 1 \text{ kHz} \rightarrow \text{delay} = 3 \text{ ms}$
$2 \times 1/\text{frequency} + 1 \text{ ms}$	for frequencies $< 1 / \text{Sampling Time}$
e.g. $f = 100 \text{ Hz}$, Sampling Time = 1 ms	$100 \text{ Hz} < 1 \text{ kHz} \rightarrow \text{delay} = 21 \text{ ms}$

With normal monitoring of standstill:	
$2 \times \text{Wait Time} + \text{Standstill Time} + 1 \text{ ms}$	for frequency = 0
e.g. Standstill Time = 0, Wait Time = 100 ms	delay = 201 ms



These response times are based on a step function.
With a system error (critical internal error) the response time will be
 $85 \text{ ms} + 1 \text{ ms} = 86 \text{ ms}$ (valid for versions 3B or higher)

12.3. Response Time of the Digital Outputs


Hardware delay of the digital output itself: 1 ms

With normal monitoring of overspeed, underspeed or frequency band: (with frequency band please choose the lower frequency, since this produces more delay)	
$2 \times \text{Sampling Time} + 1 \text{ ms}$	for frequencies $> 1 / \text{Sampling Time}$
e.g. $f = 10 \text{ kHz}$, Sampling Time = 1 ms	$10 \text{ kHz} > 1 \text{ kHz} \rightarrow \text{delay} = 3 \text{ ms}$
$2 \times 1/\text{frequency} + 1 \text{ ms}$	for frequencies $< 1 / \text{Sampling Time}$
e.g. $f = 100 \text{ Hz}$, Sampling Time = 1 ms	$100\text{Hz} < 1 \text{ kHz} \rightarrow \text{delay} = 21 \text{ ms}$

With normal monitoring of standstill:	
$2 \times \text{Wait Time} + \text{Standstill Time} + 1 \text{ ms}$	for frequency = 0
e.g. Standstill Time = 0, Wait Time = 100 ms	delay = 201 ms

12.4. Response Time of the Splitter Output:

Hardware delay of the splitter output itself: 1 ms

	<p>These response times are based on a step function. With a system error (critical internal error) the response time will be $85 \text{ ms} + 1 \text{ ms} = 86 \text{ ms}$ (valid for versions 3B or higher)</p>
---	---

12.5. Response Time of the Frequency Error Evaluation

Response time with a sudden frequency drop:

Time calculations in the subsequent tables assume the following settings:

Sampling Time = 10 ms, Wait Time = 100 ms

Valid for versions 3B or higher:

- Use Sampling Time for the calculation when $f > 1/\text{Sampling Time}$
- Use reciprocal frequency $1/f$ when $f < 1/\text{Sampling Time}$



In addition to the delay times shown in the tables below, please add also the hardware delay time of the corresponding output
(relay = 25 ms, analog output = 1 ms, digital output = 1 ms)

*) Calculated values for response times assume that "Sampling Time" would be greater than the reciprocal frequency $1/f$.

Div. Filter = 10	
With „Div. %-Value“ = 10:	11 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 210 ms*)
With „Div. %-Value“ = 20:	21 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 310 ms*)
With „Div. %-Value“ = 30:	31 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 410 ms*)
With „Div. %-Value“ = 40:	41 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 510 ms*)
Div. Filter = 5	
With „Div. %-Value“ = 10:	5 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 150 ms*)
With „Div. %-Value“ = 20:	10 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 200 ms*)
With „Div. %-Value“ = 30:	15 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 250 ms*)
With „Div. %-Value“ = 40:	21 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay = 310 ms*)
Div. Filter = 3	
With „Div. %-Value“ = 10:	1 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay 110 ms*)
With „Div. %-Value“ = 20:	2 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay 120 ms*)
With „Div. %-Value“ = 30:	3 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay 130 ms*)
With „Div. %-Value“ = 40:	5 x (Sampling Time or $(1/f)$) + 1x Wait Time -> delay 150 ms*)

Filtering effect with a frequency drop of 10 %	
Div. Filter = 3 and Div. %-Value = 10:	tripping after 9 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)

Filtering effect with a frequency drop of 20 %	
Div. Filter = 3 and Div. %-Value = 20:	tripping after 13 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 10:	tripping after 4 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 20:	tripping after 20 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 20:	tripping after 20 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)

Filtering effect with a frequency drop of 30 %	
Div. Filter = 3 and Div. %-Value = 30:	tripping after 16 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 20:	tripping after 7 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 10:	tripping after 3 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 30:	tripping after 30 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 20:	tripping after 20 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 30:	tripping after 30 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 20:	tripping after 20 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)

Filtering effect at a frequency drop of 40 %	
Div. Filter = 3 and Div. %-Value = 40:	tripping after 18 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 30:	tripping after 9 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 20:	tripping after 5 x (Sampling Time or 1/f)
Div. Filter = 3 and Div. %-Value = 10:	tripping after 2 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 40:	tripping after 36 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 30:	tripping after 26 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 20:	tripping after 16 x (Sampling Time or 1/f)
Div. Filter = 5 and Div. %-Value = 10:	tripping after 6 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 40:	tripping after 40 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 30:	tripping after 30 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 20:	tripping after 20 x (Sampling Time or 1/f)
Div. Filter = 10 and Div. %-Value = 10:	tripping after 10 x (Sampling Time or 1/f)

13. Connection of the Inputs

There are different ways to connect the inputs. The DS2xx monitors offer HTL inputs with SIL3 capability, provided that their configuration is set to two-pole-inverse operation. The finally resulting Safety Integration Level (SIL) however also depends on the remote circuit and on the configuration.

Relevant Parameters	Remark
xINx Config	Input characteristics (bipolar, unipolar, clocked)
Input Mode	Configuration of inputs (individual input, signal pair, mixed)
Switch Mode XXXX	=9, when an output is used for clock generation with clocked input
Output Mode	Clock output must be set to "inverse"




- Unipolar, un-clocked inputs provide SIL = 1 only
- Unipolar, clocked inputs can reach SIL = 1 - 2
- Bipolar, un-clocked inputs can reach SIL = 2 - 3

Where you utilize clocked inputs, for the clock generation you should use OUT1, OUT2 and OUT3 first, and lastly OUT4. The clock outputs are different regarding the output frequency, and OUT1 is able to emit the highest frequency.

Both output tracks can be used due to the 180° phase displacement (please observe parameter „Output Mode“)


13.1. Connection of Unipolar, Un-Clocked Inputs

Unipolar, un-clocked inputs are connected as shown below. Alternatively a change-over contact can be used, toggling between GND and +24 V. Unipolar, un-clocked inputs provide Safety Integrity Level (SIL) = 1. Parameter "xINx Config" must be set to a value between 8 and 11. Parameter "Input Mode" must be set to 1 or 2. No errors can be detected, therefore no response time applies.

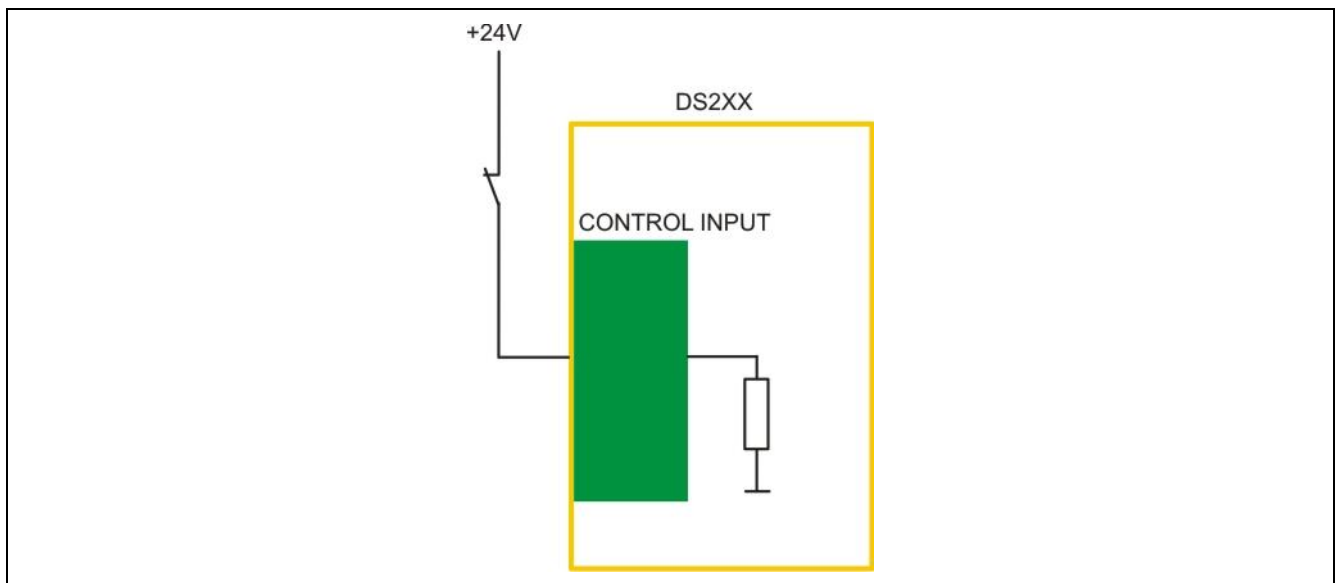

13.2. Connection of Unipolar, Clocked Inputs

Unipolar, clocked inputs are connected as shown below. This type of input reaches a Safety Integrity Level (SIL) = 1 - 2. Parameter "xINx Config" must be set to a value between 20 and 35. Parameter "Input Mode" must be set to 1 or 2. For clock generation, one of the outputs must be available. In case of incorrect or missing clock signal, the tripping function (static high/low) must be chosen in a way that no safety risk can come up (line interruption and switching failure cannot be detected). In case of error, a Runtime Readback Digital Output Error will result and the response time will be approx. 20 ms.

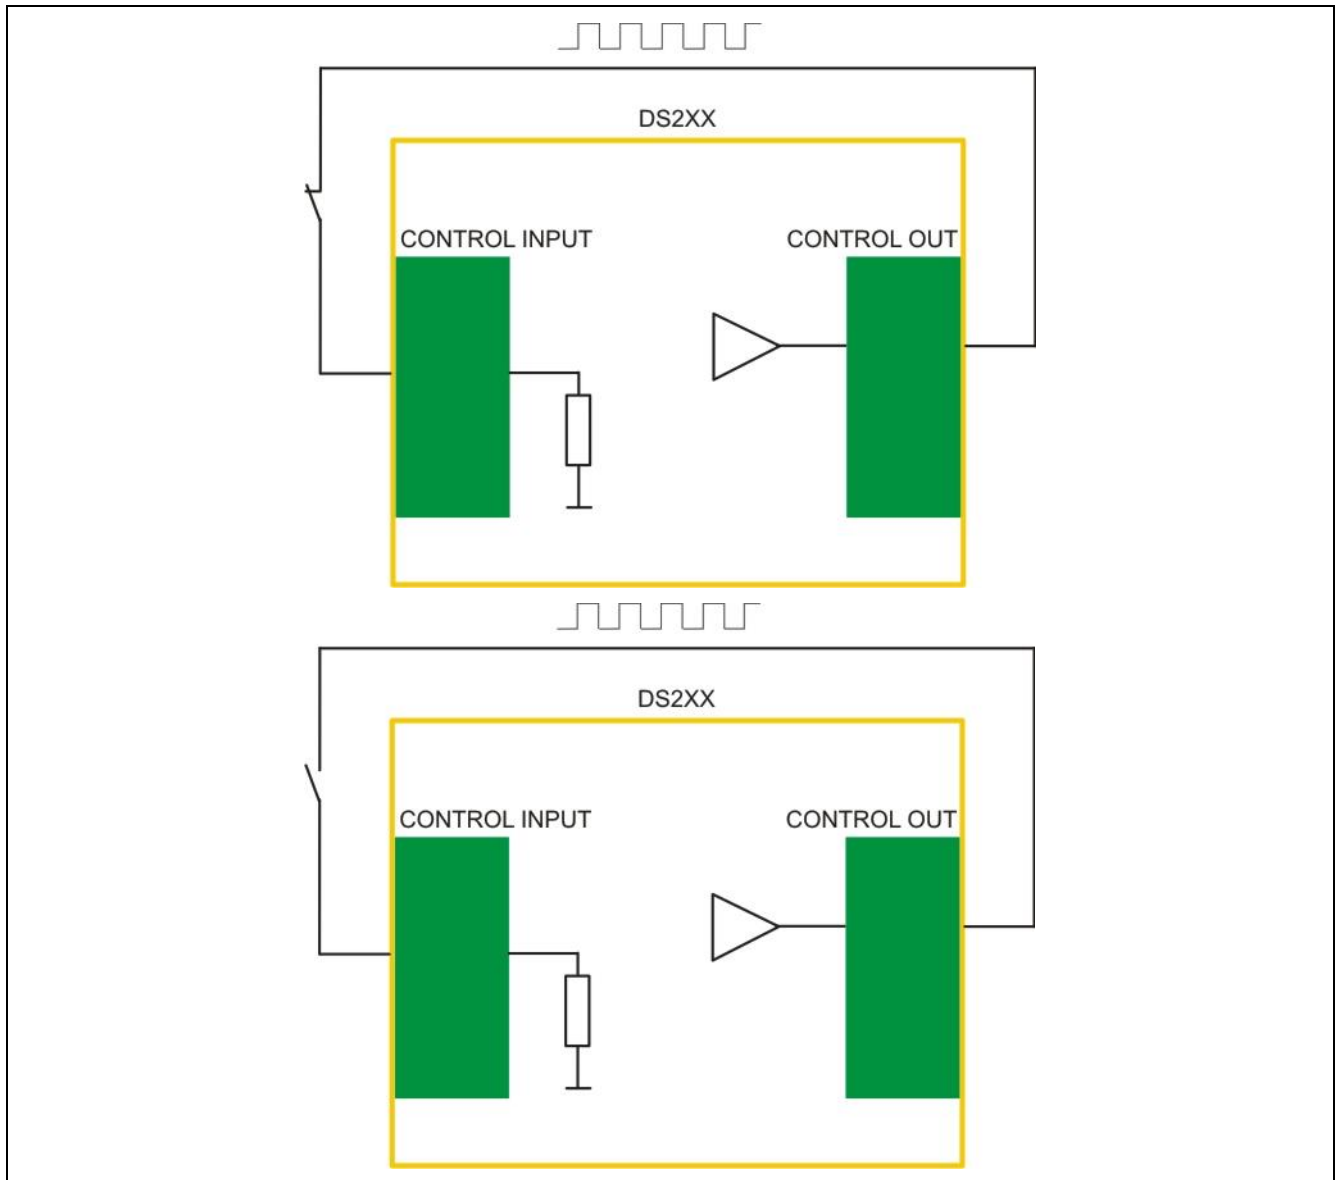


Impacts to the final Safety Integrity Level (SIL):



- Separate areas for cable leads of switch cables
- Forcibly guided and redundant series contacts
- Protected switch terminals to avoid short circuits and shunt faults
- MTTFd specification if the switch

13.3. Connection of Bipolar, Un-Clocked Inputs

Bipolar, un-clocked inputs can be connected as shown below. This type of input reaches a Safety Integrity Level (SIL) = 2 - 3. (homogenous = 2 - 3, inverse = 3). Parameter "xINx Config" must be set to a value between 0 and 7. Parameter "Input Mode" must be set to 0 or 1. In case of error, a Runtime GPI Error will result and the response time will be approx. 20ms.

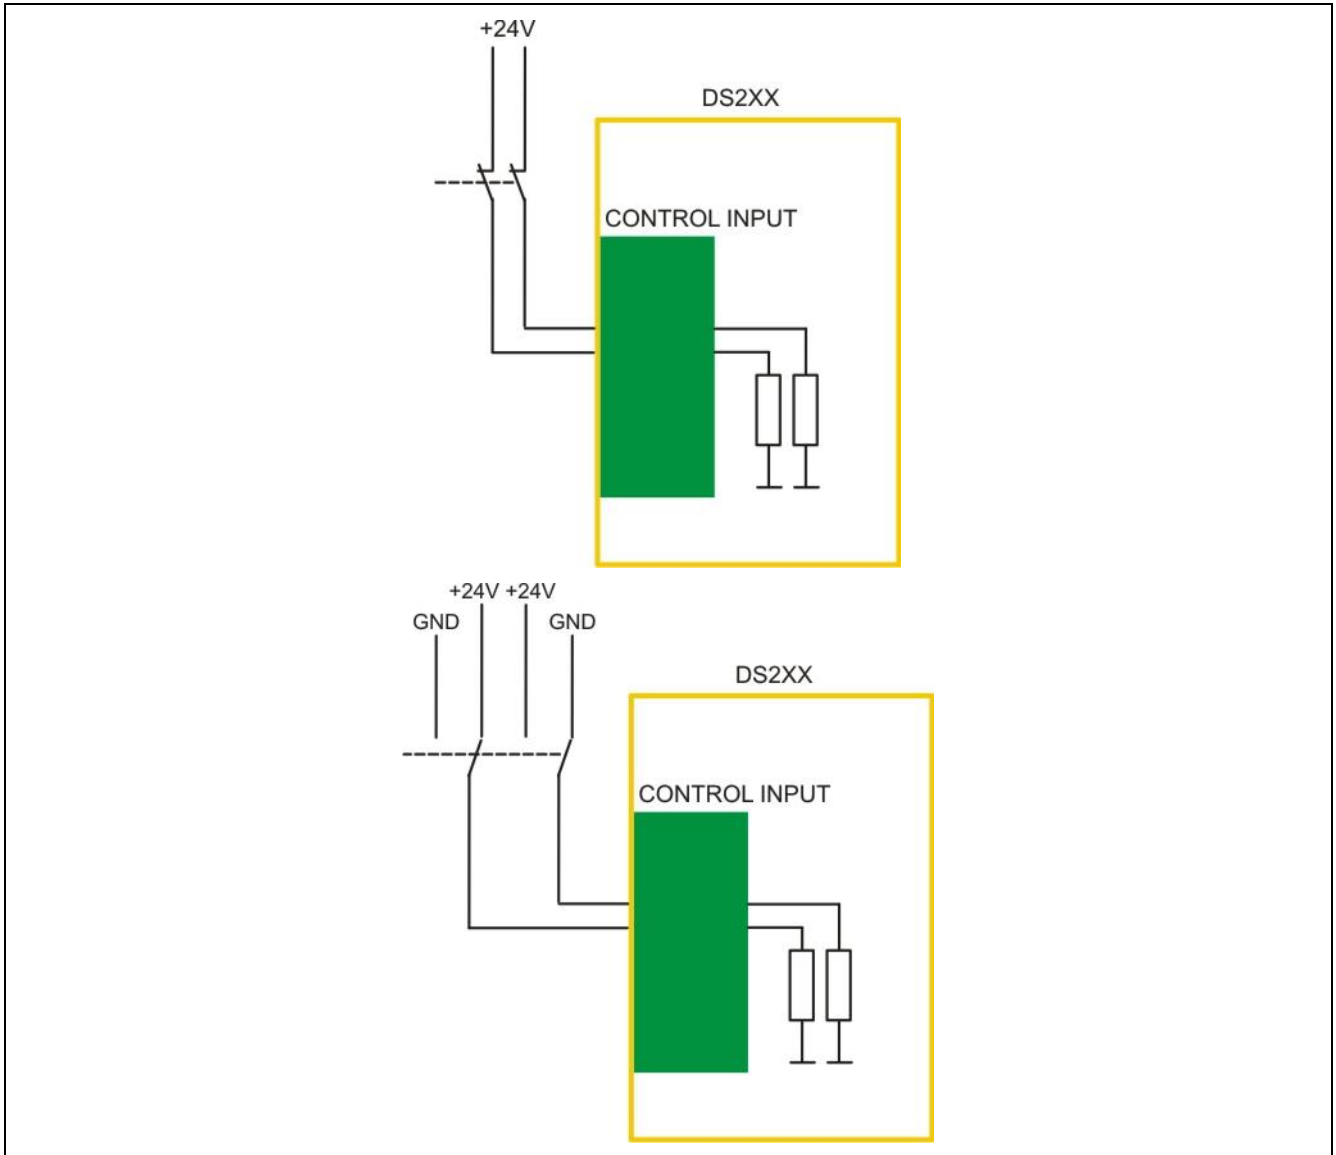

Impacts to the final Safety Integrity Level (SIL):



- Separate areas for cable leads of switch cables
- Forcibly guided and redundant series contacts
- Protected switch terminals to avoid short circuits and shunt faults
- MTTFd specification if the switch

14. Connection of the Outputs

There are different ways to connect the outputs. The DS2xx monitors offers HTL outputs with SIL3 capability, provided that their configuration is set to two-pole-inverse operation. The finally resulting Safety Integration Level (SIL) also depends on the remote circuit and on the configuration.

Relevant Parameters	Remarks
Output Mode	Output configuration (homogenous / inverse)



- Unipolar outputs provide SIL = 1
- Bipolar homogenous outputs can reach SIL = 2 - 3
- Bipolar inverse outputs can reach SIL = 3

15. EDM Function

The EDM function (External Device Monitoring) provides special surveillance of faulty operation of remote relay or contactors by means of a separate feedback circuit. For feedback a clocked output signal is used, which is lead back to an input by a positively driven relay contact. This means that the DS2xx monitor has to allocate one output to drive the relay coil, another output to generate the clock signal, and an input for reading back of the clock signal.

Parameter *IN* Function appoints the output to be used for control of the relay.

Possible settings are from 17 to 20.


Parameter *IN* Config appoints the output to be used for clock generation.

Possible settings are from 12 to 19.

The finally resulting Safety Integration Level (SIL) also depends on the remote circuit and on the configuration. In case of error, a Runtime External RB Error signal will be produced.

Relevant Parameters	Remarks
Read Back OUT	Possible inversion of the relay control
Output Mode	Output to control the relay coil (setting: „inverse“)
Output Mode	Clock output (setting: „inverse“)
IN Function	Specification of the relay feedback
IN Config	Specification of the clock feedback
Input Mode	Configuration of the read-back input (single input for read-back)
Read Back Delay	Delay time to ensure that the relay has quite certainly energized (common parameter valid for all relays in use)

15.1. EDM: 1 Relay, 1 Output, 1 Input (NO)

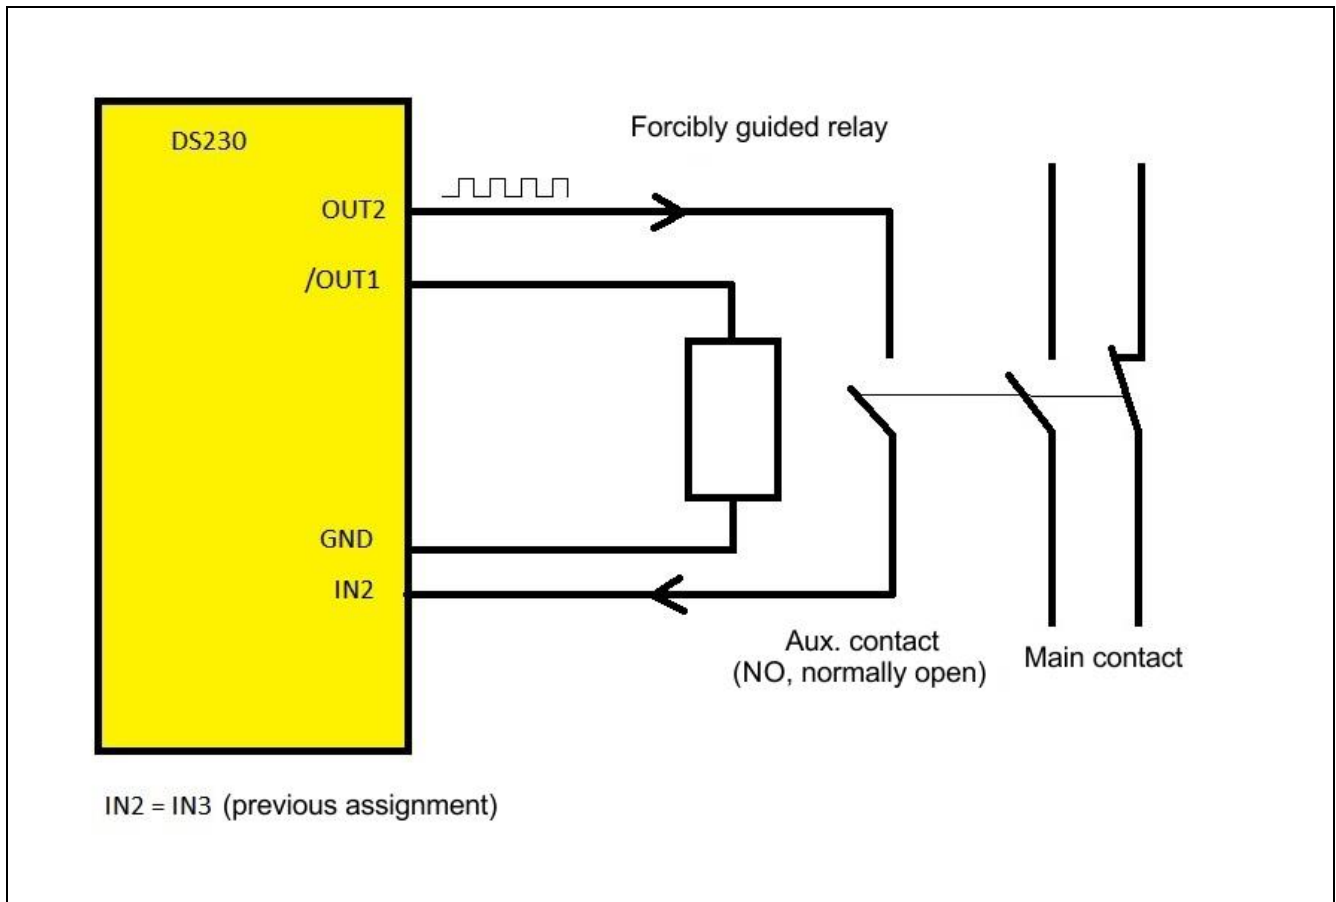

Parameter	Setting	Description
Switch Mode OUT1	0	OUT1 to detect overspeed
Switch Mode OUT2	9	OUT2 to generate clock signal
Read Back OUT	1	Inversion (connection to /OUT1 via NO contact)
IN2 Function	17	Adaption to OUT1 (overspeed)
IN2 Config	14	Adaption to clock output OUT2 [X10/4]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse configuration




Function:

With normal operation speed the inverted output /OUT1 is in HIGH state and the relay is energized. The forcibly guided aux. contact therefore is closed and the clock signal is conducted to the input. Upon overspeed output /OUT1 will descend to LOW and the remote relay will drop.

Errors in the clock circuit can only be detected while the relay is energized. Under error condition the DS2xx monitor will set all digital outputs to LOW, i.e. the remote relay will be de-energized, which will signal "overspeed". With errors occurring under normal operating speed, the unit will take an error state which signals "overspeed" again (Safety Integrity Level = 1).

15.2. EDM: 1 Relay, 1 Output, 1 Input (NC)

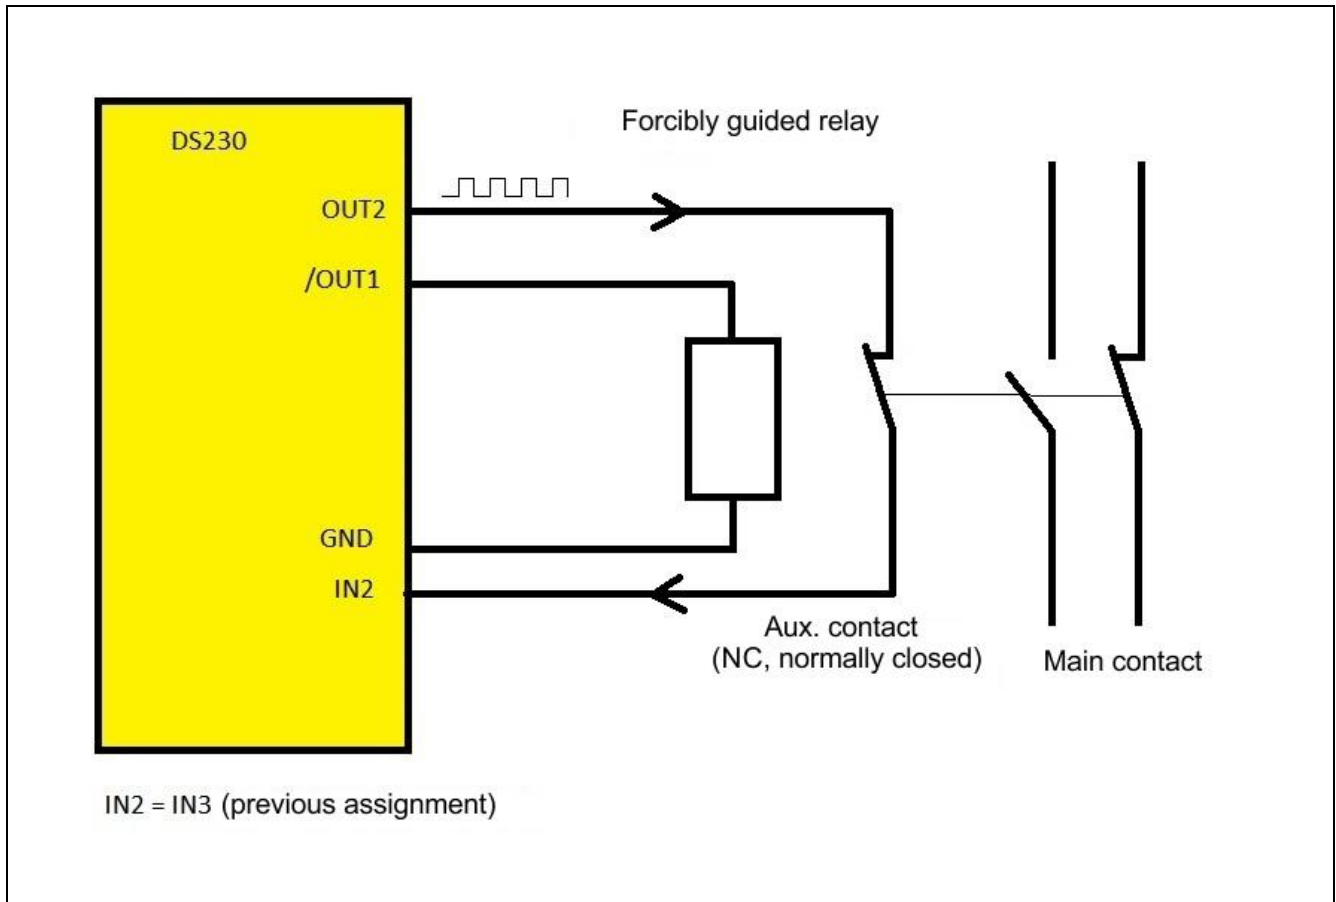

Parameter	Setting	Description
Switch Mode OUT1	0	OUT1 to detect overspeed
Switch Mode OUT2	9	OUT2 to generate clock signal
Read Back OUT	0	No inversion (connection to /OUT1 via NC contact)
IN2 Function	17	Adaption to OUT1 (overspeed)
IN2 Config	14	Adaption to clock output OUT2 [X10/4]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse configuration




Function:

With normal operation speed the inverted output /OUT1 is in HIGH state and the relay is energized. The forcibly guided aux. contact therefore is open and the clock signal is disconnected from to the input. Upon overspeed output /OUT1 will descend to LOW and the remote relay will drop.

Errors in the clock circuit can only be detected while the relay is de-energized. Under error condition the DS2xx monitor will set all digital outputs to LOW, i.e. the remote relay will be de-energized, which will signal "overspeed". With errors occurring under overspeed conditions, the unit will take an error state which signals "overspeed" again (Safety Integrity Level = 1).

15.3. EDM: 2 Relays, 1 Output, 1 Input (NC, NO)

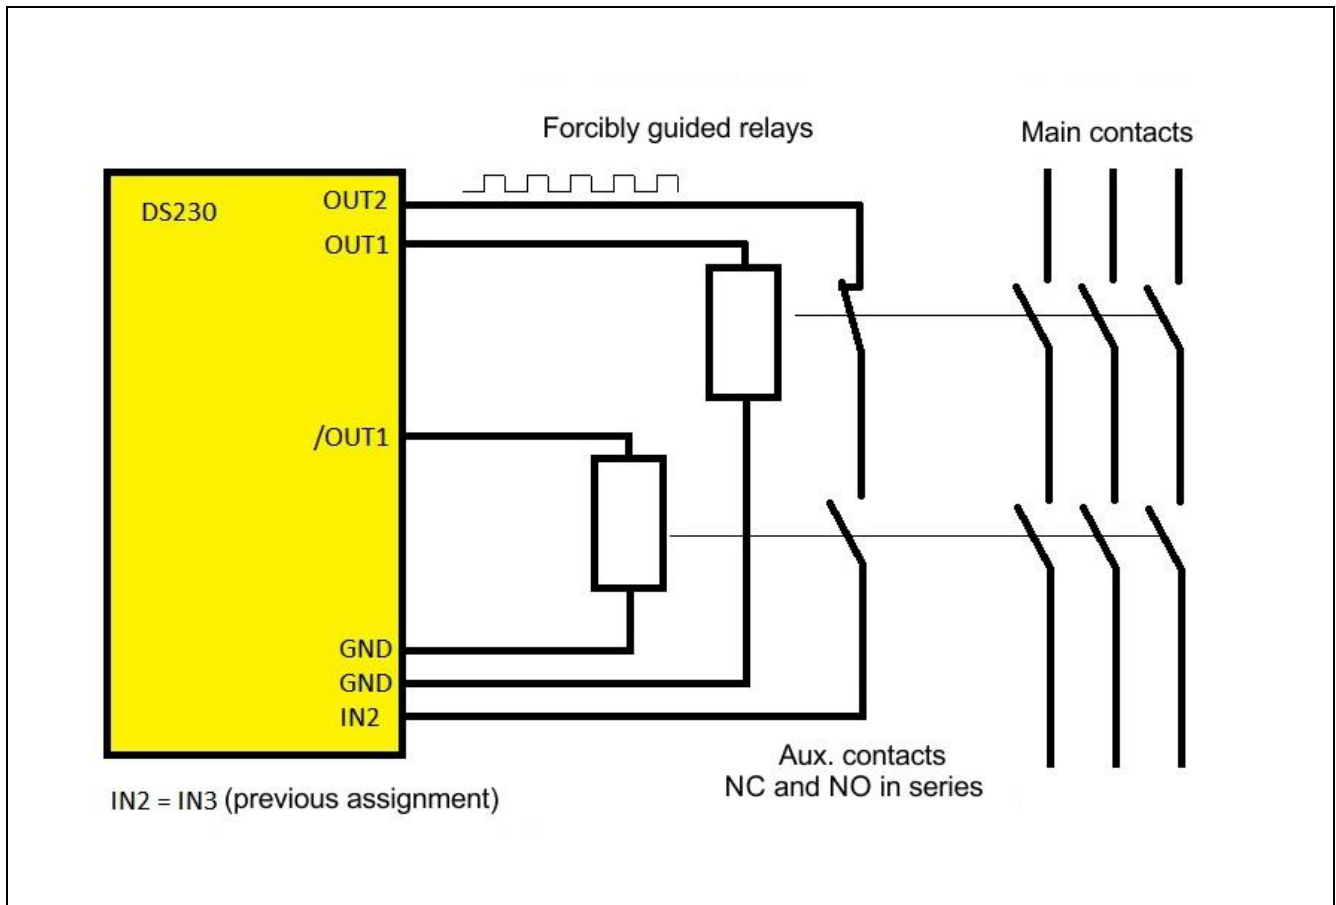

Parameter	Setting	Description
Switch Mode OUT1	0	OUT1 to detect overspeed
Switch Mode OUT2	9	OUT2 to generate clock signal
Read Back OUT	1	Inversion
IN2 Function	17	Adaption to OUT1 (overspeed)
IN2 Config	14	Adaption to clock output OUT2 [X10/4]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse configuration



Function:

With normal operation speed, output /OUT1 is in HIGH state and output OUT1 is in LOW state. With overspeed, output /OUT1 is in LOW state and output OUT1 is in HIGH state. Therefore, at any time one of the relays is energized while the other one is de-energized.


The clock loop is closed with normal speed and interrupted with overspeed.

The GND lines of the two relays must be independent one from each other.

Errors in the clock circuit can only be detected with the clock loop closed. In case of errors the DS2xx monitor will set all digital outputs to LOW, i.e. both relays will drop and overspeed will be indicated. In case of errors in the clock loop during overspeed, an error signal will be produced and overspeed will be indicated.

(Safety Integrity Level = 2)

15.4. EDM: 2 Relays, 2 Outputs, 1 Input (NC, NO)

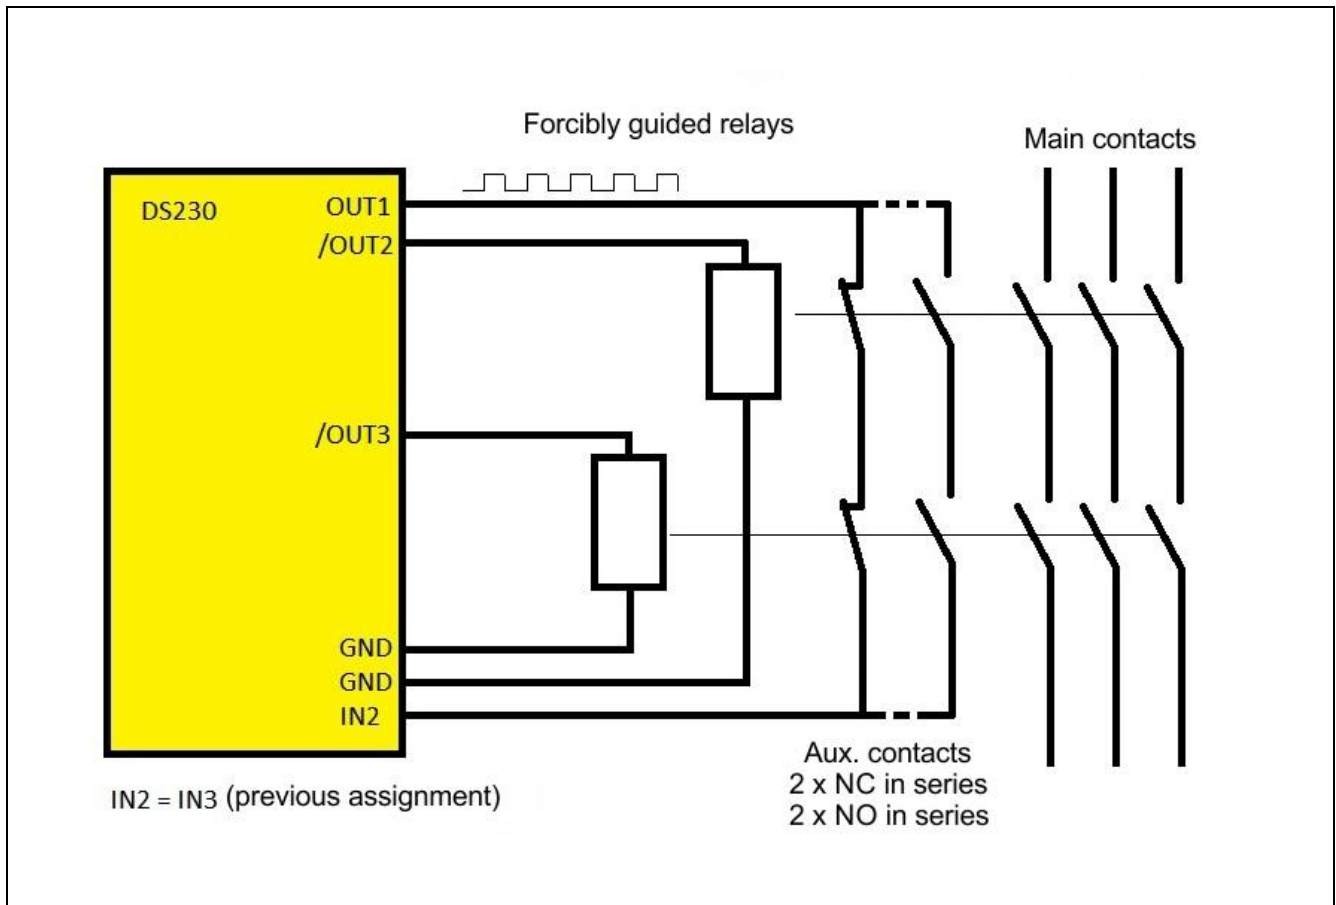


Parameter	Setting	Description
Switch Mode OUT1	9	OUT1 to generate clock signal
Switch Mode OUT2	0	OUT2 to signal overspeed
Switch Mode OUT3	0	OUT3 to detect overspeed
Read Back OUT	0/6	Inversion yes or no, depending on type of aux. contact
IN2 Function	18/19	Adaption to OUT2 or OUT3 (overspeed)
IN2 Config	12	Adaption to clock output OUT1 [X10/4]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse operation



Function:

This application uses two independent outputs /OUT2 and /OUT3 with fully identical configuration concerning their switching characteristics. The basic function is similar to the application with one relay. The auxiliary contacts of both relays are connected in series to conduct the clock signal to an input. Parameter *IN2 Function* can be set to 18 or 19, since the switching behavior of both outputs must be identical. The GND lines of the two relays must be independent one from each other (Safety Integrity Level = 2).

15.5. EDM: 2 Relays, 2 Outputs, 2 Inputs (NC)

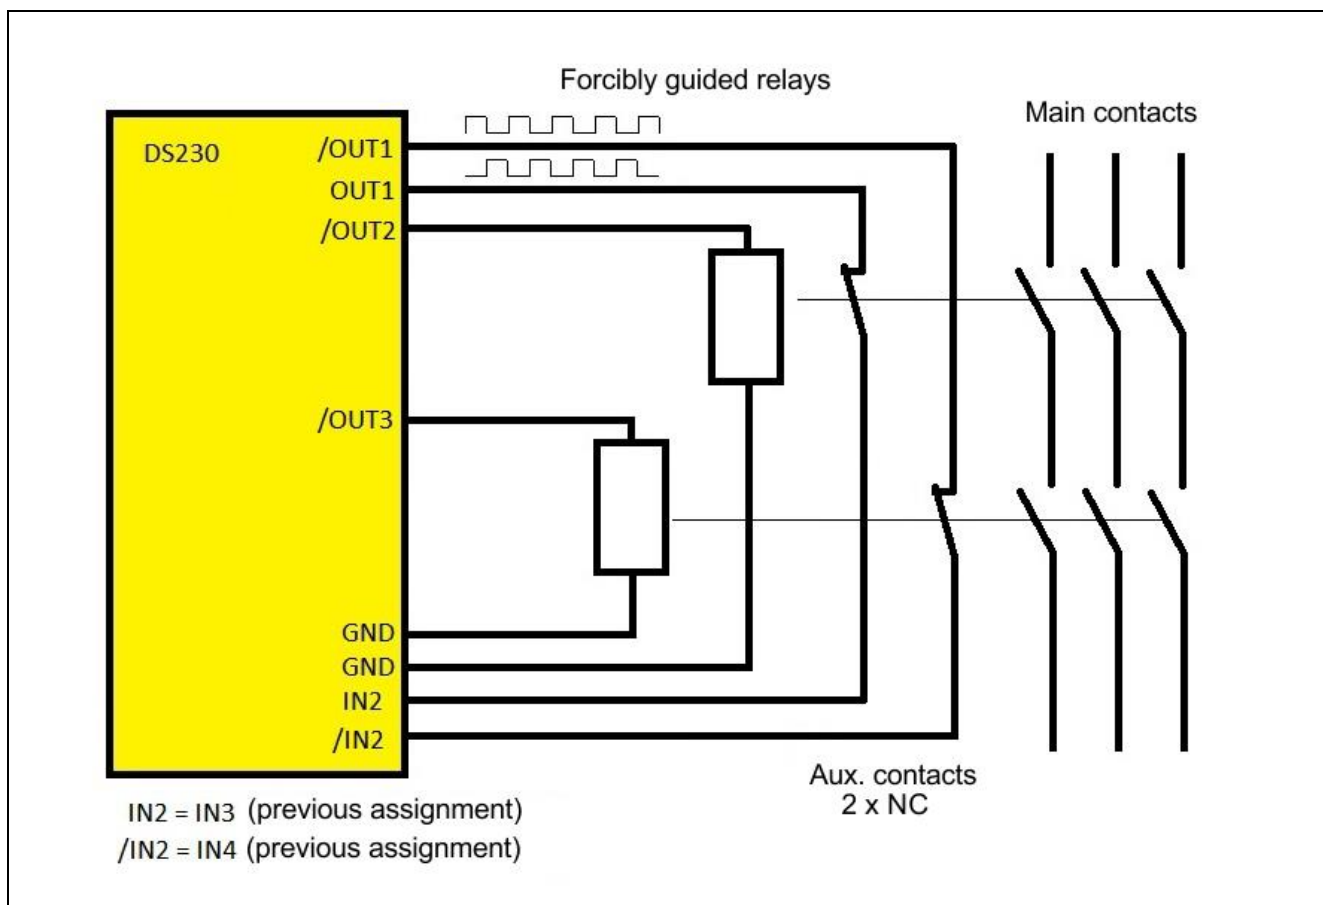


Parameter	Setting	Description
Switch Mode OUT1	9	OUT1 to generate clock signal
Switch Mode OUT2	0	OUT2 to signal overspeed
Switch Mode OUT3	0	OUT3 to detect overspeed
Read Back OUT	0	No inversion (connection via NC contact)
IN2 Function	18	Adaption to OUT2 (overspeed)
IN2 Config	12	Adaption to clock output OUT1 [X10/4]
/IN2 Function	19	Adaption to OUT3 (overspeed)
/IN2 Config	13	Adaption to clock output /OUT1 [X10/5]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse operation



Function:

This application uses two independent outputs /OUT2 and /OUT3 with fully identical configuration concerning their switching characteristics. The basic function is similar to the application with one relay. The auxiliary contacts of both relays are individually connected to a separate input each. The GND lines of the two relays must be independent one from each other (Safety Integrity Level = 3).

15.6. EDM: 2 Relays, 2 Outputs, 2 Inputs (NO)

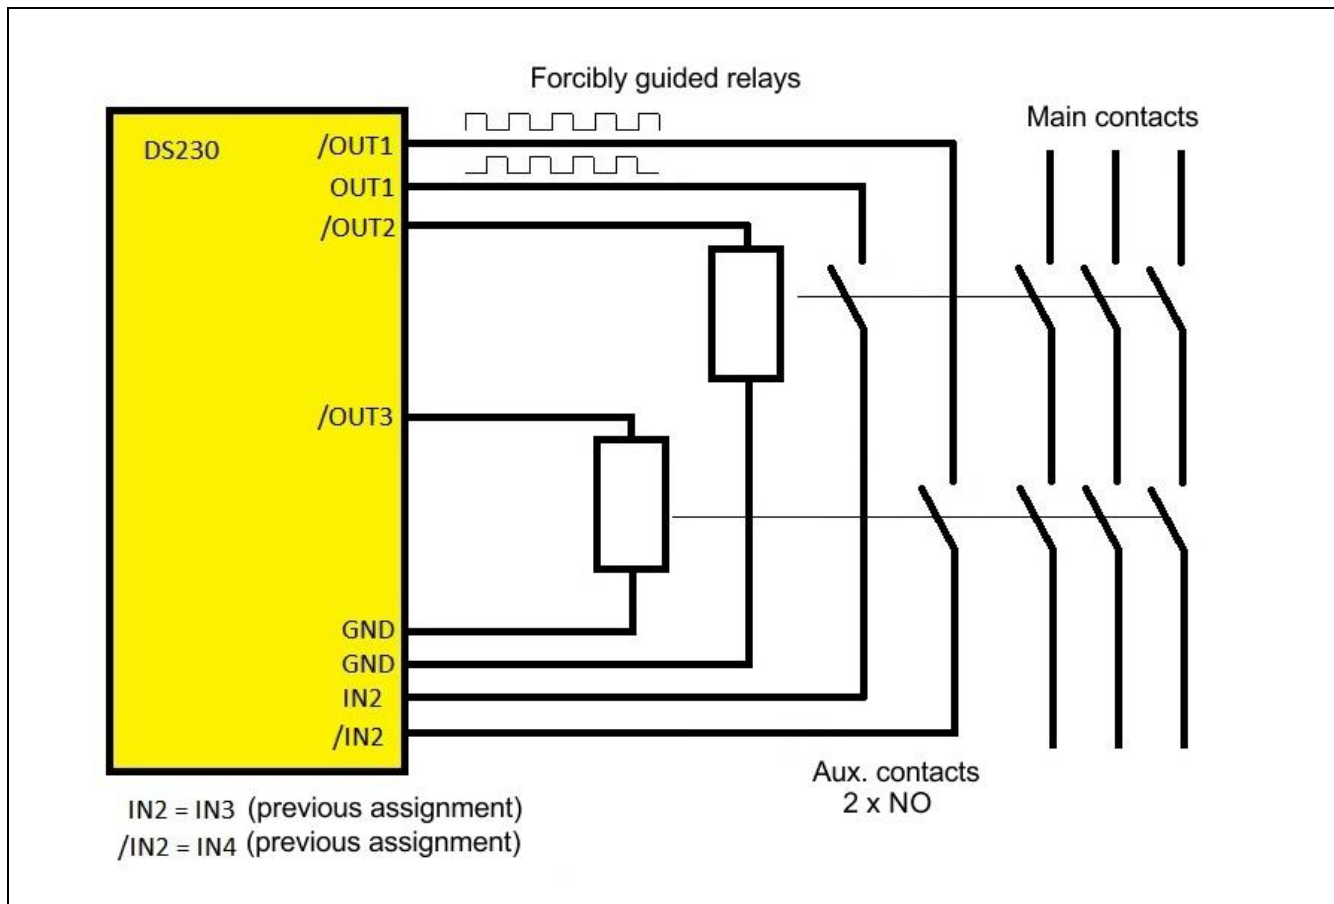


Parameter	Setting	Description
Switch Mode OUT1	9	OUT1 to generate clock signal
Switch Mode OUT2	0	OUT2 to signal overspeed
Switch Mode OUT3	0	OUT3 to detect overspeed
Read Back OUT	6	Inversion (connection via NO contact)
IN2 Function	18	Adaption to OUT2 (overspeed)
IN2 Config	12	Adaption to clock output OUT1 [X10/4]
/IN2 Function	19	Adaption to OUT3 (overspeed)
/IN2 Config	13	Adaption to clock output /OUT1 [X10/5]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse operation



This application uses two independent outputs /OUT2 and /OUT3 with fully identical configuration concerning their switching characteristics. The basic function is similar to the application with one relay. The auxiliary contacts of both relays are individually connected to a separate input each. The GND lines of the two relays must be independent one from each other (Safety Integrity Level = 3).

15.7. EDM: 2 Relays, 2 Outputs, 2 Inputs (NO, NC)

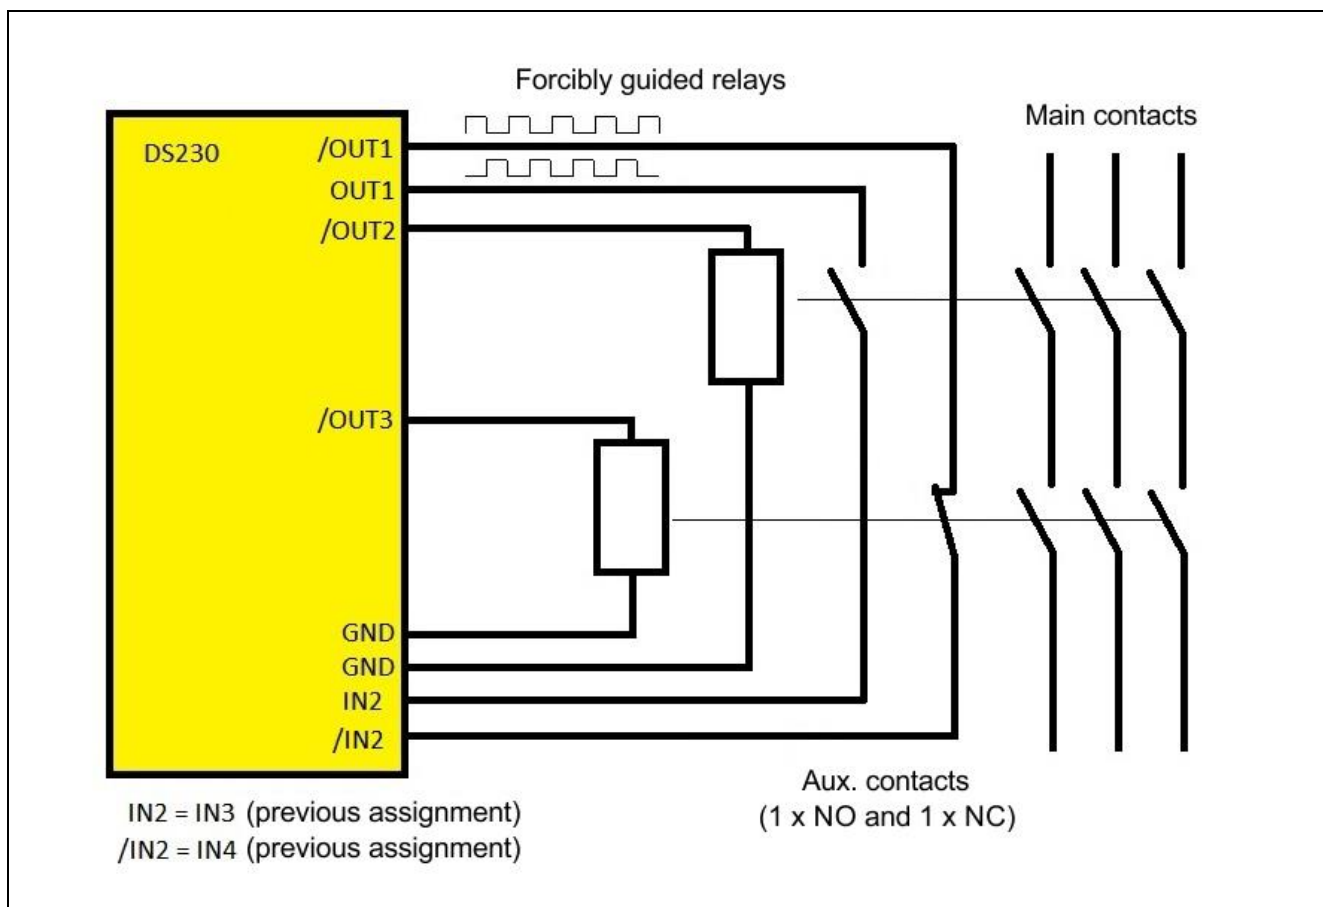

Parameter	Setting	Description
Switch Mode OUT1	9	OUT1 to generate clock signal
Switch Mode OUT2	0	OUT2 to signal overspeed
Switch Mode OUT3	0	OUT3 to detect overspeed
Read Back OUT	2	Inversion (connection via NO, NC contact)
IN2 Function	18	Adaption to OUT2 (overspeed)
IN2 Config	12	Adaption to clock output OUT1 [X10/4]
/IN2 Function	19	Adaption to OUT3 (overspeed)
/IN2 Config	13	Adaption to clock output /OUT1 [X10/5]
Input Mode	2	4 single inputs for free use
Read Back Delay	0,050	Delay 50 ms to obviate contact bouncing
Output Mode	0	Inverse operation



This application uses two independent outputs /OUT2 and /OUT3 with fully identical configuration concerning their switching characteristics. The basic function is similar to the application with one relay. The auxiliary contacts of both relays are individually connected to a separate input each. The GND lines of the two relays must be independent one from each other (Safety Integrity Level = 3).

16. Technical Specifications

Power supply:	Input voltage: Protective circuit: Ripple: Power consumption: Protection: Connections:	18 ... 30 VDC reverse polarity protection max. 10 % at 24 VDC approx. 150 mA (unloaded) external fuse (2.5 A, medium time lag) necessary X3, screw terminal, 2-pin, 1.5 mm ² / AWG 14
Encor supply:	Number: Output voltage: Output current: Protection:	2 approx. 2 VDC lower than input voltage max. 200 mA per encoder short circuit proof
SinCos inputs:	Number of inputs: Signal tracks: Amplitude: DC offset: Frequency: Connections:	2 SIN+, SIN-, COS+, COS- 0.8 ... 1.2 V _{pp} 2.4 ... 2.6 VDC max. 500 kHz (with Lissajous figure monitoring max. 100 kHz) X6 and X7, SUB-D (male), 9-pin
Incremental inputs:	Number of inputs: Format: Frequency: Connections:	2 RS422 standard (differential signal A, /A, B, /B) max. 500 kHz X8 and X9, screw terminal, 7-pin, 1.5 mm ² / AWG14
Control-/ incremental inputs:	Number of inputs: Application: Signal level: Load: Frequency (control): Frequency incremental): Connections:	2 (complementary format) HTL encoder, proximity switch, control command HTL / PNP (10 ... 30 V) max. 15 mA max. 1 kHz max. 250 kHz X10, screw terminal, 5-pin, 1.5 mm ² / AWG 14
SinCos output: (safety related)	Splitter output: Signal tracks: Amplitude: DC offset: Frequency: Connection:	Source: input SinCos 1 SIN+, SIN-, COS+, COS- 0.8 ... 1.2 V _{pp} 2.4 ... 2.6 VDC max. 500 kHz X5, SUB-D (female), 9-pin
Incremental output: (safety related)	Splitter output: Format: Frequency: Connections:	Source: input SinCos 1, SinCos 2, RS422 1, RS422 2 HTL1 or HTL2 RS422 (differential signals A, /A, B, /B) max. 500 kHz X4, screw terminal, 7-pin, 1.5 mm ² / AWG 14
Analog output: (safety related)	Current output: Resolution: Accuracy: Connection:	4 ... 20 mA (load max. 270 Ohm) 14 bit ± 0.1 % X4, screw terminal, 7-pin, 1.5 mm ² / AWG 14
Control outputs: (safety related)	Number of outputs: Output voltage: Output current: Switching characteristic: Protective circuit: Connection:	4 (complementary format) HTL (approx. 2 VDC lower than input voltage) max. 30 mA per output Push-Pull short-circuit-proof X2, screw terminal, 8-pin, 1.5 mm ² / AWG 14
Relay output: (safety related)	Number of relays: Switching capability: Switching capacity: Connection:	two relays in series with forced-guided contacts (NO) 5 ... 36 VDC 5 mA ... 5 A X1, screw terminal, 2-pin, 1.5 mm ² / AWG 14


Continuation „Technical Specifications“:

USB interface:	Version: Connection: Operating System:	USB 1.0 X12, USB-B (female) Software DS2xx from version 4c for WIN7 / 8 / 10 (tested with (1511 build 10586.104), otherwise only for WIN7 / 8
Display:	Green LED: Yellow LED:	„ON“ „ERROR“
Switches:	DIL switch: Marking:	1 x 3-pin S1
Conformity and standards:	MD2006/42EC LV 2006/95/EC: EMC 2004/108/EC: Vibration resistance: Shock resistance: RoHs 2011/65/EU:	EN ISO 13849-1 EN 61508 EN 62061 EN 61010-1 EN 61000-6-2 EN 61000-6-3 EN 61000-6-4 EN 61326-3-2 EN 60068-2-6 (sine, 7 g, 10 – 200 Hz, 20 cycles) EN 60068-2-27 (half sine, 30 g, 11 ms, 3 shocks) EN 60068-2-27 (half sine, 17 g, 6 ms, 4000 shocks) EN 50581
Safety characteristic data:	Classification: Approved Safety function: System structure: System architecture: DC _{avg} : SFF: MTTF _D : PFH: λ_{SD} : λ_{SU} : λ_{DD} : λ_{DU} : Safety functions:	SIL3/PLe (depends on encoders in use) Certification No.: 44 207 14018601 dual-channel Cat. 3 / HFT = 1 97,95 % 98,77 % 38,1 Jahre $3,76 * 10^{-8} h^{-1}$ $1,93 * 10^{-6} h^{-1}$ $4,64 * 10^{-8} h^{-1}$ $2,94 * 10^{-6} h^{-1}$ $6,14 * 10^{-8} h^{-1}$ equivalent to EN 61800-5-2 for SS1, SS2, SOS, SLS, SDI, SSM, SLI, SBC, STO, SMS (depending on the used encoder input signals)
Housing:	Material: Mounting: Dimensions: Protection class: Weight:	Plastic to 35 mm top hat rail (according to EN 60715) 50 x 100 x 165 mm (B x H x T) IP20 approx. 390 g
Ambient temperature:	Operation: Storage:	-20 °C ... +55 °C (without condensation) -25 °C ... +70 °C (without condensation)
Maintenance:	Interval:	Switch on/off for at least 1 times a year (at continuous operation)
Programming module BG230 (optional):	Display: Operation:	OLED-Display Touch screen

16.1. Dimensions


(incl. BG230 on front)

Front:

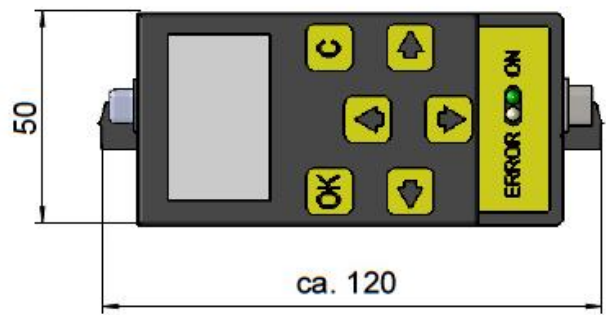

Rear:

DS230

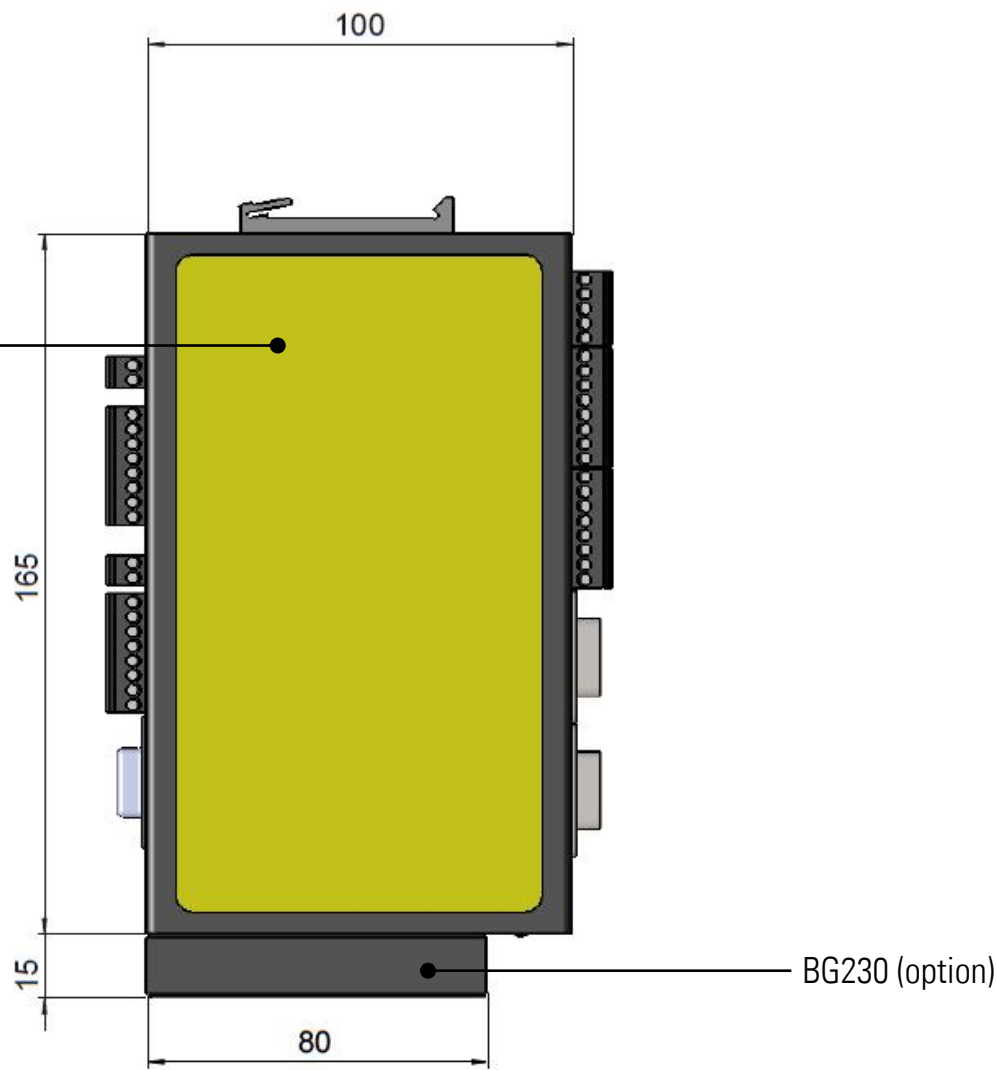

17. Certificate



ZERTIFIKAT CERTIFICATE

Hiermit wird bescheinigt, dass die Firma / This is to certify, that the company

motrona GmbH
Zeppelinstraße 16
78244 Gottmadingen
Deutschland

berechtigt ist, das unten genannte Produkt mit dem abgebildeten Zeichen zu kennzeichnen.
is authorized to provide the product described below with the mark as illustrated.

Geprüft nach
Tested in accordance with

EN ISO 13849 - Kat. 3, PL e
EN 61508 - SIL3
EN 62061 - SIL_{CL} 3

Beschreibung des Produktes
(Details s. Anlage 1)
Description of product
(Details see Annex 1)

DS2xx Wächter Serie zur sicherheitsgerichteten
Überwachung von Drehzahl, Stillstand und Drehrichtung
DS2xx monitor series for safety-related monitoring of speed,
standstill and direction of rotation

Fertigungsstätte
Manufacturing plant

motrona GmbH
Zeppelinstraße 16
78244 Gottmadingen
Deutschland



Registrier-Nr. / Registered No. 44 207 14018601
Prüfbericht Nr. / Test Report No. 3513 5111
Aktenzeichen / File reference 8000429910

Gültigkeit / Validity
von / from 2015-06-11
bis / until 2020-06-10

Zertifizierungsstelle der TÜV NORD CERT GmbH
Certification body of TÜV NORD CERT GmbH

Essen, 2015-06-11

TÜV NORD CERT GmbH Langemarckstraße 20 45141 Essen www.tuev-nord-cert.de machinery@tuev-nord.de

Parameter Description



For the DS230 / DS240 safety units

- Supplement to the DS operating manual
- Describes the DS parameter functions
- incl. Parameter list as short overview
- For setup and commissioning procedure
- Overview of all registers

Version:	Description:
Ds230_04b_pd_d.doc/Jan-16/ag	First separated version as parameter description

Legal notices:
All contents included in this manual are protected by the terms of use and copyrights of motrona GmbH. Any reproduction, modification, usage or publication in other electronic and printed media as well as in the internet requires prior written authorization by motrona GmbH.

General

This parameter description was created as a separate document for an optimum overview. It contains information about the entire DS230 / DS240 registers as well as a parameter list at the end of the document.

Table of Contents

1. Parameter / Menu Overview.....	3
2. Parameter Description	5
2.1. Important notes for DS240 / DS246	5
2.2. Main Menu	6
2.3. Sensor1 Menu.....	10
2.4. Sensor2 Menu.....	11
2.5. Preselect Menu	12
2.6. Switching Menu.....	14
2.7. Control Menu	25
2.8. Serial Menu	29
2.9. Splitter Menu	31
2.10. Analog Menu	32
2.11. OPU Menu	33
3. Parameter List	34

1. Parameter / Menu Overview

This section provides an overview of the menus and their assignments to the different unit functions. The menu names are printed bold and associated Parameters are arrayed directly under the menu names.

No.	Menu / Parameter
Main Menu	
000	Operational Mode
001	Sampling Time
002	Wait Time
003	F1-F2 Selection
004	Div. Switch %-f
005	Div. %-Value
006	Div. f-Value
007	Div. Calculation
008	Div. Filter
009	Error Simulation
010	Power-up Delay
011	<i>Reserved</i>
012	<i>Reserved</i>
Sensor1 Menu	
013	Direction1
014	Multiplier1
015	Divisor1
016	Position Drift1
017	Phase Err Count1
018	Set Frequency1
019	<i>Reserved</i>
Sensor2 Menu	
020	Direction2
021	Multiplier2
022	Divisor2
023	Position Drift2
024	Phase Err Count2
025	Set Frequency2
026	<i>Reserved</i>

Nr.	Menu / Parameter
Preselect Menu	
027	Preselect OUT1.H
028	Preselect OUT1.L
029	Preselect OUT1.D
030	Preselect OUT2.H
031	Preselect OUT2.L
032	Preselect OUT2.D
033	Preselect OUT3.H
034	Preselect OUT3.L
035	Preselect OUT3.D
036	Preselect REL4.H
037	Preselect REL4.L
038	Preselect REL4.D
039	Preselect REL1.H
040	Preselect REL1.L
041	Preselect REL1.D
042	<i>Reserved</i>

Continuation "Parameter / Menu Overview":

No.	Menu / Parameter
Switching Menu	
043	Switch Mode OUT1
044	Switch Mode OUT2
045	Switch Mode OUT3
046	Switch Mode OUT4
047	Switch Mode REL1
048	Pulse Time OUT1
049	Pulse Time OUT2
050	Pulse Time OUT3
051	Pulse Time OUT4
052	Pulse Time REL1
053	Hysteresis OUT1
054	Hysteresis OUT2
055	Hysteresis OUT3
056	Hysteresis OUT4
057	Hysteresis REL1
058	Matrix OUT1
059	Matrix OUT2
060	Matrix OUT3
061	Matrix OUT4
062	Matrix REL1
063	MIA-Delay OUT1
064	MIA-Delay OUT2
065	MIA-Delay OUT3
066	MIA-Delay OUT4
067	MIA-Delay REL1
068	MAI-Delay OUT1
069	MAI-Delay OUT2
070	MAI-Delay OUT3
071	MAI-Delay OUT4
072	MAI-Delay REL1
073	Startup Mode
074	Startup Output
075	Standstill Time
076	Lock Output
077	Action Output
078	Action Polarity
079	Read Back OUT
080	Output Mode

Nr.	Menu / Parameter
Control Menu	
081	IN1 Function
082	IN1 Config
083	/IN1 Function
084	/IN1 Config
085	IN2 Function
086	IN2 Config
087	/IN2 Function
088	/IN2 Config
089	Input Mode
090	Read Back Delay
091	<i>Reserved</i>
Serial Menu	
092	Serial Unit Nr.
093	Serial Baud Rate
094	Serial Format
095	Serial Page
096	Serial Init
097	<i>Reserved</i>
Splitter Menu	
098	RS Selector
099	<i>Reserved</i>
100	<i>Reserved</i>
101	<i>Reserved</i>
Analog Menu	
102	Analog Start
103	Analog End
104	Analog Gain
105	Analog Offset
106	<i>Reserved</i>
OPU Menu	
107	X Factor 1
108	/ Factor 1
109	+/- Value 1
110	Units 1
111	Decimal Point 1
112	X Factor 2
113	/ Factor 2
114	+/- Value 2
115	Units 2
116	Decimal Point 2
117-119	<i>Reserved</i>

2. Parameter Description

2.1. Important notes for DS240 / DS246





When using a DS240 resp.DS246 variant, the following hints must be noted:

Nr.	Parameter	Hints for DS240 /. DS246
000	Operational Mode	Exclusively „Mode = 0“ may be used
003	F1-F2 Selection	Both settings have the same effect
013	Direction1	Direction1 and Direction2 must be equal
014	Multiplier1	The setting must be „1“
015	Divisor1	The setting must be „1“
016	Position Drift1	Position Drift1 and Position Drift2 must be equal
017	Phase Err Count1	Phase Err Count1 and Phase Err Count2 must be equal
020	Direction2	Direction1 and Direction2 must be equal
021	Multiplier2	The setting must be „1“
022	Divisor2	The setting must be „1“
023	Position Drift2	Position Drift1 and Position Drift2 must be equal
024	Phase Err Count2	Phase Err Count1 and Phase Err Count2 must be equal
081 - 088	*IN* Function	To clear drift errors, Clear Drift 1&2 must be used
098	RS Selector	Both settings have the same effect

2.2. Main Menu

No.	Parameter	Range	Default																																																							
000	<u>Operational Mode:</u> This parameter determines which frequency input is assigned to Sensor1 and Sensor2. Depending on the assignment, up to 4 control inputs for external commands are available. Notes and examples for wiring the encoders, control inputs etc. can be found in the operating manual of the DS unit.	0 - 9	0																																																							
	<u>Operational Mode of DS23x:</u> To ensure the safety function, two independent sensors / encoders are required.																																																									
	<table><tr><th>Mode</th><th>Sensor1</th><th>Sensor2</th><th>[X10: 2 and 3]</th><th>[X10: 4 and 5]</th></tr><tr><td>0</td><td>SinCos encoder to [X6 SINCOS IN 1]</td><td>SinCos encoder to [X7 SINCOS IN 2]</td><td>Available for control signals</td><td>Available for control signals</td></tr><tr><td>1</td><td>SinCos encoder to [X6 SINCOS IN 1]</td><td>HTL encoder (A, B, 90°) to [X10 CONTROL IN]</td><td>Available for control signals</td><td><u>Not</u> available for control signals!</td></tr><tr><td>2</td><td>SinCos encoder to [X6 SINCOS IN 1]</td><td>HTL encoder (A) to [X10 CONTROL IN]</td><td>Available for control signals</td><td><u>Not</u> available for control signals!</td></tr><tr><td>3</td><td>HTL encoder (A, B, 90°) to [X10 CONTROL IN]</td><td>HTL encoder (A, B, 90°) to [X10 CONTROL IN]</td><td><u>Not</u> available for control signals!</td><td><u>Not</u> available for control signals!</td></tr><tr><td>4</td><td>HTL encoder (A, B, 90°) to [X10 CONTROL IN]</td><td>HTL encoder (A) to [X10 CONTROL IN]</td><td><u>Not</u> available for control signals!</td><td><u>Not</u> available for control signals!</td></tr><tr><td>5</td><td>HTL encoder (A) to [X10 CONTROL IN]</td><td>HTL encoder (A) to [X10 CONTROL IN]</td><td><u>Not</u> available for control signals!</td><td><u>Not</u> available for control signals!</td></tr><tr><td>6</td><td>SinCos encoder to [X6 SINCOS IN 1]</td><td>RS422 encoder to [X9 RS422 IN 2]</td><td>Available for control signals</td><td>Available for control signals</td></tr><tr><td>7</td><td>RS422 encoder to [X8 RS422 IN 1]</td><td>RS422 encoder to [X9 RS422 IN 2]</td><td>Available for control signals</td><td>Available for control signals</td></tr><tr><td>8</td><td>RS422 encoder to [X8 RS422 IN 1]</td><td>HTL encoder (A, B, 90°) to [X10 CONTROL IN]</td><td>Available for control signals</td><td><u>Not</u> available for control signals!</td></tr><tr><td>9</td><td>RS422 encoder to [X8 RS422 IN 1]</td><td>HTL encoder (A) to [X10 CONTROL IN]</td><td>Available for control signals</td><td><u>Not</u> available for control signals!</td></tr></table>			Mode	Sensor1	Sensor2	[X10: 2 and 3]	[X10: 4 and 5]	0	SinCos encoder to [X6 SINCOS IN 1]	SinCos encoder to [X7 SINCOS IN 2]	Available for control signals	Available for control signals	1	SinCos encoder to [X6 SINCOS IN 1]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!	2	SinCos encoder to [X6 SINCOS IN 1]	HTL encoder (A) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!	3	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!	4	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	HTL encoder (A) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!	5	HTL encoder (A) to [X10 CONTROL IN]	HTL encoder (A) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!	6	SinCos encoder to [X6 SINCOS IN 1]	RS422 encoder to [X9 RS422 IN 2]	Available for control signals	Available for control signals	7	RS422 encoder to [X8 RS422 IN 1]	RS422 encoder to [X9 RS422 IN 2]	Available for control signals	Available for control signals	8	RS422 encoder to [X8 RS422 IN 1]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!	9	RS422 encoder to [X8 RS422 IN 1]	HTL encoder (A) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!
	Mode			Sensor1	Sensor2	[X10: 2 and 3]	[X10: 4 and 5]																																																			
	0			SinCos encoder to [X6 SINCOS IN 1]	SinCos encoder to [X7 SINCOS IN 2]	Available for control signals	Available for control signals																																																			
	1			SinCos encoder to [X6 SINCOS IN 1]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!																																																			
	2			SinCos encoder to [X6 SINCOS IN 1]	HTL encoder (A) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!																																																			
	3			HTL encoder (A, B, 90°) to [X10 CONTROL IN]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!																																																			
	4			HTL encoder (A, B, 90°) to [X10 CONTROL IN]	HTL encoder (A) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!																																																			
	5			HTL encoder (A) to [X10 CONTROL IN]	HTL encoder (A) to [X10 CONTROL IN]	<u>Not</u> available for control signals!	<u>Not</u> available for control signals!																																																			
6	SinCos encoder to [X6 SINCOS IN 1]	RS422 encoder to [X9 RS422 IN 2]	Available for control signals	Available for control signals																																																						
7	RS422 encoder to [X8 RS422 IN 1]	RS422 encoder to [X9 RS422 IN 2]	Available for control signals	Available for control signals																																																						
8	RS422 encoder to [X8 RS422 IN 1]	HTL encoder (A, B, 90°) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!																																																						
9	RS422 encoder to [X8 RS422 IN 1]	HTL encoder (A) to [X10 CONTROL IN]	Available for control signals	<u>Not</u> available for control signals!																																																						
<u>Operational Mode of DS24x:</u> To ensure the safety function, a SIL3/PLe certified SinCos sensor resp. encoder is required.																																																										
<table><tr><th>Mode</th><th>Sensor1</th><th>Sensor2</th><th>[X10: 2 and 3]</th><th>[X10: 4 and 5]</th></tr><tr><td>0</td><td>SIL3/PLe SinCos encoder to [X6 SINCOS IN 1]</td><td>Sensor1 and Sensor2 are internally bridged</td><td>available for control signals</td><td>available for control signals</td></tr></table>	Mode	Sensor1	Sensor2	[X10: 2 and 3]	[X10: 4 and 5]	0	SIL3/PLe SinCos encoder to [X6 SINCOS IN 1]	Sensor1 and Sensor2 are internally bridged	available for control signals	available for control signals																																																
Mode	Sensor1	Sensor2	[X10: 2 and 3]	[X10: 4 and 5]																																																						
0	SIL3/PLe SinCos encoder to [X6 SINCOS IN 1]	Sensor1 and Sensor2 are internally bridged	available for control signals	available for control signals																																																						

Continuation "Main Menu":

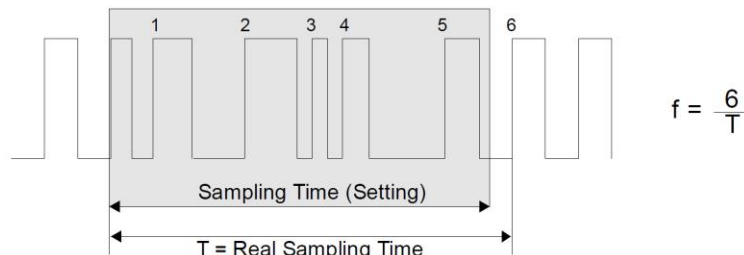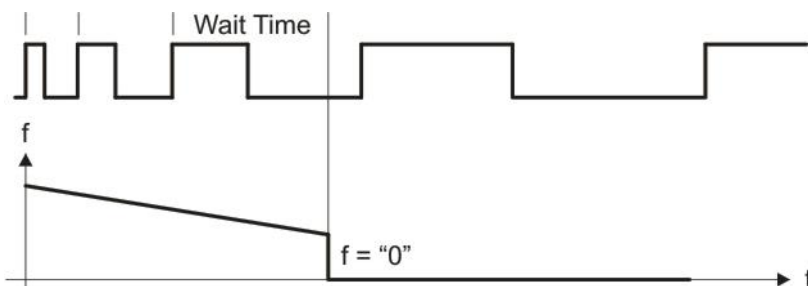No.	Parameter	Range	Default						
001	<p><u>Sampling Time:</u></p> <p>The configured value corresponds to the minimum measurement time. The Parameter is used as a filter in case of irregular frequencies. This parameter directly affects the response time of the unit. The setting is valid for both inputs channels.</p> 	0.001 - 9.999 (sec.)	0.001						
002	<p><u>Wait Time (Zeroing):</u></p> <p>Defines the period time of the lowest frequency resp. the waiting time between 2 rising edges, which is detected as frequency = 0 Hz by the unit.</p>  <p>All frequencies with a period longer than the Wait Time value will be interpreted as frequency = 0 Hz.</p> <table><tr><td>0.010</td><td>Frequency = 0 Hz with frequencies smaller than 100 Hz</td></tr><tr><td>...</td><td></td></tr><tr><td>9.999</td><td>Frequency = 0 Hz with frequencies smaller than 0.1 Hz</td></tr></table> <p>The setting is valid for both inputs channels.</p>	0.010	Frequency = 0 Hz with frequencies smaller than 100 Hz	...		9.999	Frequency = 0 Hz with frequencies smaller than 0.1 Hz	0.010 - 9.999 (sec.)	1,000
0.010	Frequency = 0 Hz with frequencies smaller than 100 Hz								
...									
9.999	Frequency = 0 Hz with frequencies smaller than 0.1 Hz								
003	<p><u>F1-F2 Selection (Basic Frequency Selection):</u></p> <p>This Parameter determines, which of both input frequencies of Sensor1 or Sensor2 (parameter „Operational Mode“) will be monitored and processed as basic frequency.</p> <p>The basic frequency selection affects the following outputs:</p> <ul style="list-style-type: none">- Analog output- Control outputs- Relay outputs <table><tr><td>0</td><td>Frequency of Sensor1 serves as basic frequency</td></tr><tr><td>1</td><td>Frequency of Sensor2 serves as basic frequency</td></tr></table>	0	Frequency of Sensor1 serves as basic frequency	1	Frequency of Sensor2 serves as basic frequency	0 - 1	0		
0	Frequency of Sensor1 serves as basic frequency								
1	Frequency of Sensor2 serves as basic frequency								

Continuation "Main Menu":

No.	Parameter	Range	Default				
004	<p><u>Div. Switch %-f</u> (Divergence switching point %-Hz):</p> <p>The DS unit constantly compares the frequencies of Sensor1 and Sensor2 to the adjusted maximum allowed divergence.</p> <p>Application-specific a percentage comparison can be problematic with lower frequencies, so that a direct monitoring of the difference frequency in Hz can deliver better results.</p> <p>This Parameter allows to define a limit. When undershooting the adjusted value the comparison will proceed no more percentages, but absolute in Hz.</p>	0 - 999.99 (Hz)	100.00				
005	<p><u>Div. %-Value</u> (maximum Divergence %):</p> <p>Defines the maximum allowed percentage divergence between the frequencies of Sensor1 and Sensor2. If this value is exceeded, the unit switches to an error state. The calculation is specified by parameter "Div. Calculation ".</p>	0 - 100 (%)	10				
006	<p><u>Div. f-Value</u> (maximum Divergence Hz):</p> <p>Defines the maximum allowed absolute divergence in Hz between the frequencies of Sensor1 and Sensor2. If the adjusted value is exceeded, the unit switches to an error status.</p>	0 - 99.99 (Hz)	30.00				
007	<p><u>Div. Calculation</u> (Divergence Calculation Mode):</p> <p>This parameter will calculate the percentage divergence.</p> <table><tr><td>0</td><td>Reference value is the frequency of Sensor1: $\Delta(\%) = (\text{Sensor1} - \text{Sensor2}) : \text{Sensor1} \times 100 \%$</td></tr><tr><td>1</td><td>Reference value is the frequency of Sensor2: $\Delta(\%) = (\text{Sensor2} - \text{Sensor1}) : \text{Sensor2} \times 100 \%$</td></tr></table>	0	Reference value is the frequency of Sensor1: $\Delta(\%) = (\text{Sensor1} - \text{Sensor2}) : \text{Sensor1} \times 100 \%$	1	Reference value is the frequency of Sensor2: $\Delta(\%) = (\text{Sensor2} - \text{Sensor1}) : \text{Sensor2} \times 100 \%$	0 - 1	0
0	Reference value is the frequency of Sensor1: $\Delta(\%) = (\text{Sensor1} - \text{Sensor2}) : \text{Sensor1} \times 100 \%$						
1	Reference value is the frequency of Sensor2: $\Delta(\%) = (\text{Sensor2} - \text{Sensor1}) : \text{Sensor2} \times 100 \%$						

Continuation "Main Menu":

No.	Parameter	Range	Default
008	<div><div><div><div><div>0</div><div>The filter is not active: The unit reacts immediately to each frequency deviation</div></div><div><div>5</div><div>Medium filter effect: The unit tolerates temporary deviations and fluctuations, e. g. caused from torsion or mechanical vibrations and reacts delayed to deviations between both input frequencies</div></div><div><div>10</div><div>Higher filter effect: The unit tolerates temporary deviations and fluctuations, e. g. caused from torsion or mechanical vibrations and reacts with a very long delay to prolonged deviations between both input frequencies</div></div></div></div></div> <div>This digital filter parameter evaluates the divergence between Sensor1 and Sensor2.</div>	0 - 20	1
009	<div><div><div><div><div>0</div><div>Error state: Sets the unit into error status. By using this parameter it is possible to check, if the entire follow-up system reacts correctly in case of errors.</div></div><div><div>1</div><div>Normal state: Before exiting the Programming Mode, this parameter always must be set to 1.</div></div><div><div>2</div><div>Error clearing: All errors reported by the unit will be reset.</div></div></div></div></div> <div><div>Error Simulation:</div><div>This Parameter is only allowed in Programming Mode and serves exclusively for test purposes during the commissioning procedure. It allows to simulate and suppress error messages as follows:</div><div>A direct changeover between 0 and 2 should be avoided.</div><div>After the test, this parameter must be reset to default (=1).</div></div>	0 - 2	1
010	<div><div><div><div><div>Power-up Delay:</div><div>A delay time setting is recommended to ensure a safely power up and enough time for stabilization after switching the encoder supply for all connected encoders. The evaluation of the encoder signals will start after the selected delay time has been elapsed.</div></div></div></div></div>	0.001 - 1.000 (sec.)	0.100
011	Reserved		
012	Reserved		

2.3. Sensor1 Menu

No.	Parameter	Range	Default				
013	<p><u>Direction1:</u></p> <p>With DS240 / DS246 versions: Direction1 = Direction2</p> <p>Parameter to assign the direction of Sensor1</p> <table><tr><td>0</td><td>No changes</td></tr><tr><td>1</td><td>Changes the sign of the direction</td></tr></table> <p>This allows to reverse the direction of Sensor1 in order to adapt Sensor1 to the direction of Sensor2.</p>	0	No changes	1	Changes the sign of the direction	0 - 1	0
0	No changes						
1	Changes the sign of the direction						
014	<p><u>Multiplier1</u> (proportional pulse scaling factor):</p> <p>With DS240 / DS246 versions: Multiplier1 = 1, Multiplier2 = 1</p> <p>Is used to modulate the frequencies of Sensor 1 and Sensor2. This scaling affects only the calculation of the divergence.</p>	1 - 10 000	1				
015	<p><u>Divisor1</u> (reciprocal pulse scaling factor):</p> <p>With DS240 / DS246 versions: Divisor1 = 1, Divisor = 1</p> <p>To adjust the frequencies of Sensor1 and Sensor2. This scaling affects only the calculation of the divergence.</p>	1 - 10 000	1				
016	<p><u>Position Drift1</u> (drift monitoring at standstill):</p> <p>With DS240 / DS246 versions: PositionDrift1 = PositionDrift2</p> <p>This parameter handles drift movements at standstill. If the period time of the input frequency exceeds the adjusted „Wait-Time“ parameter, the sensor is assigned to frequency = 0 Hz, even if a slow drift movement is present.</p> <p>In case of an illegal drift, this parameter allows to preset an error threshold (symmetrical position window +/- xxx pulses). An error status is triggered if the adjusted value is exceeded.</p> <p>The monitoring is only performed at standstill and begins at position 0, immediately when frequency = 0 Hz is detected.</p> <table><tr><td>0</td><td>Drift monitoring is not active</td></tr><tr><td>xxx</td><td>An error message appears, if the position is drifting out of the adjusted window of +/- xxx pulses (single edge evaluation).</td></tr></table>	0	Drift monitoring is not active	xxx	An error message appears, if the position is drifting out of the adjusted window of +/- xxx pulses (single edge evaluation).	0 - 100 000	0
0	Drift monitoring is not active						
xxx	An error message appears, if the position is drifting out of the adjusted window of +/- xxx pulses (single edge evaluation).						



When using two encoders with differing pulse rates or in case of a mechanical reduction between both encoders, the higher frequency must be converted to the lower frequency by using the scaling factors.

Continuation "Sensor1 Menu":

No.	Parameter	Range	Default
017	<u>Phase Err Count1</u> (faulty pulse counting limit): <p>The DS unit is able to detect incorrect pulse sequences as well as faulty phase positions.</p> <p>Normally, the parameter should remain set to 10. A different setting is useful only in special cases.</p> <p>The error status will be released if the adjusted number of faulty pulses is exceeded.</p> <p>Incorrect pulses can be caused by faulty wirings, EMC-problems, incorrect mode settings, when turn up the encoder supply or when reverse the direction Parameter.</p>	1 - 1 000	10
018	<u>Set Frequency1</u> (simulation of a fixed encoder frequency): <p>This Parameter is used for test purposes and allows to substitute the real encoder frequency by a fixed frequency.</p> <p>The parameter is only effective, while the unit is in the Programming Mode and if the input is assigned to this function.</p>	-500 000.0 - 500 000.0 (Hz)	0
019	<i>Reserved</i>		

2.4. Sensor2 Menu

No.	Parameter	Range	Default
019	<u>Direction2:</u>	0 - 1	0
020	<u>Multiplier2:</u>	1- 10 000	1
021	<u>Divisor2:</u>	1 - 10 000	1
022	<u>Position Drift2:</u>	0 - 100 000	0
023	<u>Phase Err Count2:</u>	1 - 1 000	10
024	<u>Set Frequency2:</u>	-500 000.0 - 500 000.0 (Hz)	0
025-026	<i>Reserved</i>		



When using 2 encoders with differing pulse rates or in case of a mechanical reduction between both encoders, the higher frequency must be converted to the lower frequency by using the scaling factors.

2.5. Preselect Menu

This menu is used to set the switching points of the following outputs:

- 1 x relay output [X1 | RELAY OUT]
- 4 x control output [X2 | CONTROL OUT]

All limit values are related to the selected basic frequency (parameter "F1-F2 Selection"). The pulse-scaling does not influence the switching points.

Two separate switching points for each output are available, which allows e. g. to define the limit values for the setup mode and production mode. For this purpose, the function "Preselection Change" must be assigned to an unused control input (parameter "*IN* Function").

A switchover between the switching points HIGH and LOW can only be released by an external command via control input at terminal [X10 | CONTROL IN]. The change will affect all outputs.

A switchover is only possible, if the control input is available by setting the parameter „Operational Mode“.

- Index .H means HIGH and requires to define the higher limit value.
- Index .L means LOW and requires to define the lower limit value.

„Preselect Menu“

No.	Parameter	Range	Default
027	Preselect OUT1.H: Upper switching point of output OUT1 [X2:1-2]	-500 000.0	20 000
028	Preselect OUT1.L: Lower switching point of output OUT1 [X2:1-2]	-	10 000
029	Preselect OUT1.D: Maximum drift if parameter Switch Mode OUT1 = 17 or 18	500 000.0 (Hz)	0
030	Preselect OUT2.H: Upper switching point of output OUT2 [X2:3-4]	(defined by the „F1-F2 Selection“ parameter)	40 000
031	Preselect OUT2.L: Lower switching point of output OUT2 [X2:3-4]		30 000
032	Preselect OUT2.D: Maximum drift if parameter Switch Mode OUT2 = 17 or 18		0
033	Preselect OUT3.H: Upper switching point of output OUT3 [X2:5-6]		60 000
034	Preselect OUT3.L: Lower switching point of output OUT3 [X2:5-6]		50 000
035	Preselect OUT3.D: Maximum drift if parameter Switch Mode OUT3 = 17 or 18		0
036	Preselect OUT4.H: Upper switching point of output OUT4 [X2:7-8]		80 000
037	Preselect OUT4.L: Lower switching point of output OUT4 [X2:7-8]		70 000
038	Preselect OUT4.D: Maximum drift if parameter Switch Mode OUT4 = 17 or 18		0
039	Preselect REL1.H: Upper switching point of the relay output [X1:1-2]		2 000
040	Preselect REL1.L: Lower switching point of the relay output [X1:1-2]		1 000
041	Preselect REL1.D: Maximum drift if parameter Switch Mode REL1 = 17 or 18		0
042	<i>Reserved</i>		



- The upper switching points (index .H) are only active, if no error can be detected and if the function Preselection Change is assigned to the control input.
- The operator has to assign the values to the switch-points correctly.
The HIGH value must always be higher than the LOW value.
- The drift depends on the parameter "F1-F2 Selection" and thus refers to the selected encoder channel. Depending on the setting a drift error can set the output, but does not produce an error state.

2.6. Switching Menu

This menu is used to set the switching conditions of the following outputs:

- 1 x relay output [X1 | RELAY OUT]
- 4 x control output [X2 | CONTROL OUT]

The following form of writing is used:

|f| = absolute value of the basic frequency

|Preselection| = absolute value of the switching point

f = direction dependent, direction signed basic frequency

Preselection = direction dependent, direction signed switching point

Additional output features:

{S} = self-locking function

{H} = switching hysteresis

{A} = start up delay



- With an active self-locking function no hysteresis setting is necessary, because no bouncing is possible.
- With an inactive self-locking function a hysteresis setting is always useful.
- When using Switch Mode 7 or 8, the specified standstill-time must be higher than the adjusted wipe period. This is helpful to prevent a breakdown of the wipe signal before the wipe period has been elapsed.
- With Switch Mode 2, 6 and 16, the parameter "Hysteresis" is used for determining the frequency band.

„Switching Menu“:

No.	Parameter	Range	Default	
043	Switch Mode OUT1 (Schaltbedingung für OUT1):		0 - 18	0
	0	 f >= Preselection Output switches in event of overspeed.	{S, H}	
	1	 f <= Preselection Output switches in event of underspeed.	{S, H, A}	
	2	 f = Preselection Output switches in event of leaving the frequency band (Preselection +/- Hysteresis).	{S, A}	
	3	Standstill Output switches in event of standstill.		
	4	f >= Preselection Output switches in event of overspeed. May only be used with positive preselection values!	{S, H}	
	5	f <= Preselection Output switches in event of underspeed. May only be used with positive preselection values!	{S, H, A}	
	6	f = Preselection Output switches in event of leaving the frequency band (Preselection +/- Hysteresis). Only used with positive preselection values!	{S, A}	
	7	f > 0 Output switches, if a positive frequency (e.g. clockwise direction) is detected. The directional information will be deleted immediately when „Standstill“ is detected.		
	8	f < 0 Output switches, if a negative frequency (e.g. anticlockwise direction) is detected. The directional information will be deleted immediately when „Standstill“ is detected.		
	9	Clock generation for pulsed readback EDM and pulse monitored inputs		
	10	STO/SBC Enable + external self-locking, without ramp monitoring	{S}	
	11	SLS f >= Preselection Overspeed + enable + self-locking, without ramp monitoring		
12	SMS f >= Preselection Overspeed without enable + self-locking			


Continuation „Switching Menu“:


No.	Parameter			Range	Default
043	13	SDI1 f > 0 Enable + self-locking, frequency monitoring, no position monitoring		0 - 18	0
	14	SDI2 f < 0 Enable + self-locking, frequency monitoring, no position monitoring			
	15	SSM1 f <= Preselection Underspeed + enable + external self-locking	{S}		
	16	SSM2 f within Preselection +/- Hysteresis Underspeed + overspeed + enable + external self-locking	{S}		
	17	SOS/SLI f > Preselection or Position Error Overspeed + position + enable + self-locking			
	18	Standstill (at Standstill and no Position Error) Standstill + position + enable + self-locking			
044	Switch Mode OUT2 (switching condition for OUT2): Settings are analogous to parameter „Switch Mode OUT1“			0 - 18	0
045	Switch Mode OUT3 (switching condition for OUT3): Settings are analogous to parameter „Switch Mode OUT1“			0 - 18	0
046	Switch Mode OUT4 (switching condition for OUT4): Settings are analogous to parameter „Switch Mode OUT1“			0 - 18	0
047	Switch Mode REL1 (switching condition for the relay output): Settings are analogous to parameter „Switch Mode OUT1“			0 - 18	0



- With an active self-locking function no hysteresis setting is necessary, because no bouncing is possible.
- With an inactive self-locking function a hysteresis setting is always useful.
- When using Switch Mode 7 or 8, the specified standstill-time must be higher than the adjusted wipe period. This is helpful to prevent a breakdown of the wipe signal before the wipe period has been elapsed.
- With Switch Mode 2, 6 and 16, the parameter "Hysteresis" is used for determining the frequency band.

Continuation "Switching Menu":

No.	Parameter	Range	Default
048	<u>Pulse Time OUT1</u> (Wipe Signal Period of OUT1): 0: static wipe signal ≠0: wipe signal period in seconds	0 - 9.999 (sec.)	0
049	<u>Pulse Time OUT2</u> (Wipe Signal Period of OUT2): Settings are analogous to parameter „Pulse Time OUT1“		
050	<u>Pulse Time OUT3</u> (Wipe Signal Period of OUT3): Settings are analogous to parameter „Pulse Time OUT1“		
051	<u>Pulse Time OUT4</u> (Wipe Signal Period of OUT4): Settings are analogous to parameter „Pulse Time OUT1“		
052	<u>Pulse Time REL1</u> (Wipe Signal Period of the relay): Settings are analogous to parameter „Pulse Time OUT1“(min. 25 ms)		
<div><ul style="list-style-type: none">• The minimum wipe period of the control outputs is 1 msec. The minimum wipe period of the relay is 25 msec.• If a wipe signal is adjusted, no self-locking function can be assigned to the corresponding output.</div>			
053	<u>Hysteresis OUT1:</u> Percental hysteresis of the adjusted switching point of parameter „Preselect OUT1“	0- 100.0 (%)	0
054	<u>Hysteresis OUT2:</u> Percental hysteresis of the adjusted switching point of parameter „Preselect OUT2“		
055	<u>Hysteresis OUT3:</u> Percental hysteresis of the adjusted switching point of parameter „Preselect OUT3“		
056	<u>Hysteresis OUT4:</u> Percental hysteresis of the adjusted switching point of parameter „Preselect OUT4“		
057	<u>Hysteresis REL1:</u> Percental hysteresis of the adjusted switching point of parameter „Preselect REL1“		

 <ul style="list-style-type: none"> Due to the variance of the frequency measurement an output-bouncing around the limit value can occur. This behavior can be prevented by setting a hysteresis. A reasonable hysteresis value is approximately 1%. The setting of a hysteresis is only possible when the parameter "Switch Mode" is set to 0, 6 or 16.

Continuation "Switching Menu":


No.	Parameter	Range	Default																		
058	<p>Matrix OUT1 (enable matrix for output OUT1):</p> <p>Defines the enable signal (for Switch Mode 10 ... 18) of output OUT1 by input selection at terminal X10 as well as the remaining feedback outputs (see table below). An input as well as a feedback output can be used as enable signal (OR operation in case of several signals).</p> <table><tr><td>Bit 0</td><td>Input 1 [X10: 2]</td></tr><tr><td>Bit 1</td><td>Input 2 [X10: 3]</td></tr><tr><td>Bit 2</td><td>Input 3 [X10: 4]</td></tr><tr><td>Bit 3</td><td>Input 4 [X10: 5]</td></tr><tr><td>Bit 4</td><td>Output OUT1, not available here</td></tr><tr><td>Bit 5</td><td>Output OUT2</td></tr><tr><td>Bit 6</td><td>Output OUT3</td></tr><tr><td>Bit 7</td><td>Output OUT4</td></tr><tr><td>Bit 8</td><td>Output REL1</td></tr></table>	Bit 0	Input 1 [X10: 2]	Bit 1	Input 2 [X10: 3]	Bit 2	Input 3 [X10: 4]	Bit 3	Input 4 [X10: 5]	Bit 4	Output OUT1, not available here	Bit 5	Output OUT2	Bit 6	Output OUT3	Bit 7	Output OUT4	Bit 8	Output REL1	0 - 511	0
Bit 0	Input 1 [X10: 2]																				
Bit 1	Input 2 [X10: 3]																				
Bit 2	Input 3 [X10: 4]																				
Bit 3	Input 4 [X10: 5]																				
Bit 4	Output OUT1, not available here																				
Bit 5	Output OUT2																				
Bit 6	Output OUT3																				
Bit 7	Output OUT4																				
Bit 8	Output REL1																				
059	<p>Matrix OUT2 (enable matrix for output OUT2):</p> <table><tr><td>Bit 0</td><td>Input 1 [X10: 2]</td></tr><tr><td>Bit 1</td><td>Input 2 [X10: 3]</td></tr><tr><td>Bit 2</td><td>Input 3 [X10: 4]</td></tr><tr><td>Bit 3</td><td>Input 4 [X10: 5]</td></tr><tr><td>Bit 4</td><td>Output OUT1</td></tr><tr><td>Bit 5</td><td>Output OUT2, not available here</td></tr><tr><td>Bit 6</td><td>Output OUT3</td></tr><tr><td>Bit 7</td><td>Output OUT4</td></tr><tr><td>Bit 8</td><td>Output REL1</td></tr></table>	Bit 0	Input 1 [X10: 2]	Bit 1	Input 2 [X10: 3]	Bit 2	Input 3 [X10: 4]	Bit 3	Input 4 [X10: 5]	Bit 4	Output OUT1	Bit 5	Output OUT2, not available here	Bit 6	Output OUT3	Bit 7	Output OUT4	Bit 8	Output REL1	0 - 511	0
Bit 0	Input 1 [X10: 2]																				
Bit 1	Input 2 [X10: 3]																				
Bit 2	Input 3 [X10: 4]																				
Bit 3	Input 4 [X10: 5]																				
Bit 4	Output OUT1																				
Bit 5	Output OUT2, not available here																				
Bit 6	Output OUT3																				
Bit 7	Output OUT4																				
Bit 8	Output REL1																				
060	<p>Matrix OUT3 (enable matrix for output OUT3):</p> <table><tr><td>Bit 0</td><td>Input 1 [X10: 2]</td></tr><tr><td>Bit 1</td><td>Input 2 [X10: 3]</td></tr><tr><td>Bit 2</td><td>Input 3 [X10: 4]</td></tr><tr><td>Bit 3</td><td>Input 4 [X10: 5]</td></tr><tr><td>Bit 4</td><td>Output OUT1</td></tr><tr><td>Bit 5</td><td>Output OUT2</td></tr><tr><td>Bit 6</td><td>Output OUT3, not available here</td></tr><tr><td>Bit 7</td><td>Output OUT4</td></tr><tr><td>Bit 8</td><td>Output REL1</td></tr></table>	Bit 0	Input 1 [X10: 2]	Bit 1	Input 2 [X10: 3]	Bit 2	Input 3 [X10: 4]	Bit 3	Input 4 [X10: 5]	Bit 4	Output OUT1	Bit 5	Output OUT2	Bit 6	Output OUT3, not available here	Bit 7	Output OUT4	Bit 8	Output REL1	0 - 511	0
Bit 0	Input 1 [X10: 2]																				
Bit 1	Input 2 [X10: 3]																				
Bit 2	Input 3 [X10: 4]																				
Bit 3	Input 4 [X10: 5]																				
Bit 4	Output OUT1																				
Bit 5	Output OUT2																				
Bit 6	Output OUT3, not available here																				
Bit 7	Output OUT4																				
Bit 8	Output REL1																				

Fortsetzung „Switching Menu“:

No.	Parameter	Range	Default	
061	Matrix OUT4 (enable matrix for output OUT4):	0 - 511	0	
	Bit 0			Input 1 [X10: 2]
	Bit 1			Input 2 [X10: 3]
	Bit 2			Input 3 [X10: 4]
	Bit 3			Input 4 [X10: 5]
	Bit 4			Output OUT1
	Bit 5			Output OUT2
	Bit 6			Output OUT3
	Bit 7			Output OUT4, not available here
	Bit 8			Output REL1
062	Matrix REL1 (enable matrix for output REL1):	0 - 511	0	
	Bit 0			Input 1 [X10: 2]
	Bit 1			Input 2 [X10: 3]
	Bit 2			Input 3 [X10: 4]
	Bit 3			Input 4 [X10: 5]
	Bit 4			Output OUT1
	Bit 5			Output OUT2
	Bit 6			Output OUT3
	Bit 7			Output OUT4
	Bit 8			Output REL1, not available here
063	MIA-Delay OUT1 (delay for transition inactive to active): Matrix delay inactive to active for output OUT1 (in seconds). This setting will delay the enable function, if the enable input or the feedback output changes from inactive to active.	0 - 99.999	0	
064	MIA-Delay OUT2 (delay for transition inactive to active):	0 - 99.999	0	
065	MIA-Delay OUT3 (delay for transition inactive to active):	0 - 99.999	0	
066	MIA-Delay OUT4 (delay for transition inactive to active):	0 - 99.999	0	
067	MIA-Delay REL1 (delay for transition inactive to active):	0 - 99.999	0	
068	MAI-Delay OUT1: (delay for transition active to inactive): Matrix delay active to inactive for output OUT1 (in seconds). This setting will delay the enable function, if the enable input or the feedback output changes from active to inactive.	0 - 99.999	0	
069	MAI-Delay OUT2 (delay for transition active to inactive):	0 - 99.999	0	
070	MAI-Delay OUT3 (delay for transition active to inactive):	0 - 99.999	0	
071	MAI-Delay OUT4 (delay for transition active to inactive):	0 - 99.999	0	
072	MAI-Delay REL1 (delay for transition active to inactive):	0 - 99.999	0	

No.	Parameter	Range	Default																								
073	<p>Start-up Mode (start-up delay time window):</p> <p>Window for delay time until the monitoring function is activated. Only useful in combination with parameter setting „Switch Mode“ = 1, 2, 5 oder 6.</p> <p>To use the start-up delay, it must be assigned to an output.</p> <p>The start-up delay will be activated:</p> <ul style="list-style-type: none">- with next power-up- always when after standstill a frequency is detected again <table><tr><td>0</td><td>no start-up delay</td></tr><tr><td>1</td><td>start-up delay 1 second</td></tr><tr><td>2</td><td>start-up delay 2 seconds</td></tr><tr><td>3</td><td>start-up delay 4 seconds</td></tr><tr><td>4</td><td>start-up delay 8 seconds</td></tr><tr><td>5</td><td>start-up delay 16 seconds</td></tr><tr><td>6</td><td>start-up delay 32 seconds</td></tr><tr><td>7</td><td>start-up delay 64 seconds</td></tr><tr><td>8</td><td>start-up delay 128 seconds</td></tr><tr><td>9</td><td>automatically, until the value has been exceeded for the first time</td></tr></table> <p>The defined delay time window is valid for all outputs.</p>	0	no start-up delay	1	start-up delay 1 second	2	start-up delay 2 seconds	3	start-up delay 4 seconds	4	start-up delay 8 seconds	5	start-up delay 16 seconds	6	start-up delay 32 seconds	7	start-up delay 64 seconds	8	start-up delay 128 seconds	9	automatically, until the value has been exceeded for the first time	0 - 9	0				
0	no start-up delay																										
1	start-up delay 1 second																										
2	start-up delay 2 seconds																										
3	start-up delay 4 seconds																										
4	start-up delay 8 seconds																										
5	start-up delay 16 seconds																										
6	start-up delay 32 seconds																										
7	start-up delay 64 seconds																										
8	start-up delay 128 seconds																										
9	automatically, until the value has been exceeded for the first time																										
074	<p>Startup Output (assignment of a start-up delay to outputs):</p> <p>By using a 5 bit binary code the start-up delay function can be assigned to an output. Settings see below:</p> <table><tr><td>Output:</td><td>RELAY</td><td>OUT4</td><td>OUT3</td><td>OUT2</td><td>OUT1</td></tr><tr><td>Bit:</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>Binary:</td><td>10000</td><td>01000</td><td>00100</td><td>00010</td><td>00001</td></tr><tr><td>Value:</td><td>16</td><td>8</td><td>4</td><td>2</td><td>1</td></tr></table> <p>Example: A setting of Startup Output = 17 (binary 10001) means that a start-up delay is assigned to OUT1 and to the RELAY output.</p>	Output:	RELAY	OUT4	OUT3	OUT2	OUT1	Bit:	5	4	3	2	1	Binary:	10000	01000	00100	00010	00001	Value:	16	8	4	2	1	0 - 31	0
Output:	RELAY	OUT4	OUT3	OUT2	OUT1																						
Bit:	5	4	3	2	1																						
Binary:	10000	01000	00100	00010	00001																						
Value:	16	8	4	2	1																						

Continuation "Switching Menu":

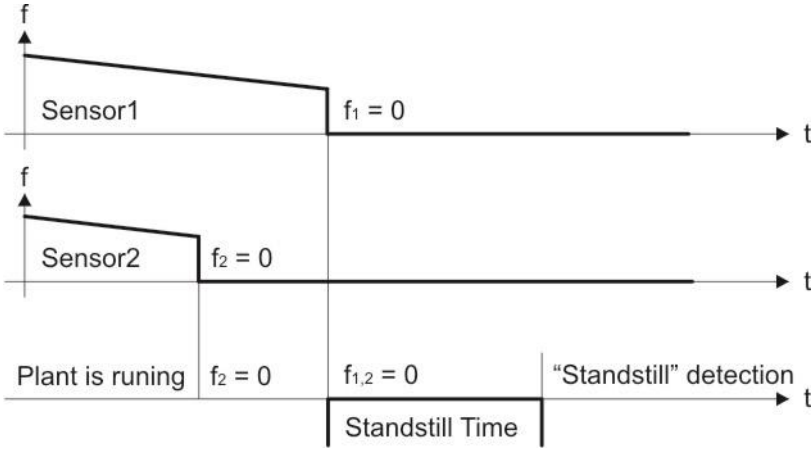No.	Parameter	Range	Default																												
075	<p>Standstill Time (delay time for standstill detection):</p> <p>This parameter defines the delay time until the unit detects a standstill after detecting frequency = 0 Hz.</p>  <p>Prior condition is that both input frequencies are detected as „Zero“ ($f_{1,2} = 0$ Hz). From that moment, the standstill period runs off and indicates a standstill when elapsed.</p>	0 - 9.999 (sec.)	0																												
076	<p>Lock Output (assignment of a lock-function to an output):</p> <p>The assignment of a self-locking-function to an output can be adjusted by using a 6 bit binary code as follows:</p> <table border="1"><thead><tr><th>Output:</th><th>*</th><th>RELAY</th><th>OUT4</th><th>OUT3</th><th>OUT2</th><th>OUT1</th></tr></thead><tbody><tr><td>Bit</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>Binary:</td><td>100000</td><td>010000</td><td>001000</td><td>000100</td><td>000010</td><td>000001</td></tr><tr><td>Value:</td><td>32</td><td>16</td><td>8</td><td>4</td><td>2</td><td>1</td></tr></tbody></table> <p>Bits 1 to 5 are used to assign the lock function to the respective outputs.</p> <p>*) The highest valued bit 6 determines if a locked output can be released exclusively by an external input signal via parameter “*IN* Function” (bit 6 = 0) or additionally by an automatic reset when standstill is indicated (bit 6 = 1).</p> <p>Example:</p> <p>An adjustment of Lock Output = 17 (binary 10001) means that a lock is assigned to output OUT1 and to the relay, which can be deactivated exclusively by an external input signal.</p> <p>Further the adjustment Lock Output = 49 (binary 110001) means that the lock-functions of OUT1 and the relay are deleted additionally when standstill is detected.</p> <p>Please note: With an active wipe time setting, no self-locking function can be assigned to the corresponding output.</p>	Output:	*	RELAY	OUT4	OUT3	OUT2	OUT1	Bit	6	5	4	3	2	1	Binary:	100000	010000	001000	000100	000010	000001	Value:	32	16	8	4	2	1	0 - 63	0
Output:	*	RELAY	OUT4	OUT3	OUT2	OUT1																									
Bit	6	5	4	3	2	1																									
Binary:	100000	010000	001000	000100	000010	000001																									
Value:	32	16	8	4	2	1																									

Continuation "Switching Menu":

No.	Parameter	Range	Default																																							
077	<p>Action Output (output selection for overwriting):</p> <p>The function to set fixed output conditions for OUT1 to OUT4 is only effective in the Programming Mode. It is used for test purposes and allows to force each output to a defined switching condition.</p> <p>The „Action Output“ parameter selects the outputs to be tested. The next Parameter „Action Polarity“ is used to assign the desired switching conditions to the selected outputs.</p> <p>The outputs are selectable by using a 5 bit binary code:</p> <table><tr><td>Output:</td><td>RELAY</td><td>OUT4</td><td>OUT3</td><td>OUT2</td><td>OUT1</td></tr><tr><td>Bit</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>Binary:</td><td>10000</td><td>01000</td><td>00100</td><td>00010</td><td>00001</td></tr><tr><td>Value:</td><td>16</td><td>8</td><td>4</td><td>2</td><td>1</td></tr></table> <p>Example: A setting of Action Output = 14 (binary 01110) means that the outputs OUT2, OUT3 and OUT4 are selected for overwriting.</p> <table><tr><td>REL</td><td>0</td><td>No overwriting</td></tr><tr><td>OUT4</td><td>1</td><td>Status see parameter “Action Polarity”</td></tr><tr><td>OUT3</td><td>1</td><td>Status see parameter “Action Polarity”</td></tr><tr><td>OUT2</td><td>1</td><td>Status see parameter “Action Polarity”</td></tr><tr><td>OUT1</td><td>0</td><td>No overwriting</td></tr></table> <p>After the test this parameter must be reset to default (= 0).</p>	Output:	RELAY	OUT4	OUT3	OUT2	OUT1	Bit	5	4	3	2	1	Binary:	10000	01000	00100	00010	00001	Value:	16	8	4	2	1	REL	0	No overwriting	OUT4	1	Status see parameter “Action Polarity”	OUT3	1	Status see parameter “Action Polarity”	OUT2	1	Status see parameter “Action Polarity”	OUT1	0	No overwriting	0 - 31	0
Output:	RELAY	OUT4	OUT3	OUT2	OUT1																																					
Bit	5	4	3	2	1																																					
Binary:	10000	01000	00100	00010	00001																																					
Value:	16	8	4	2	1																																					
REL	0	No overwriting																																								
OUT4	1	Status see parameter “Action Polarity”																																								
OUT3	1	Status see parameter “Action Polarity”																																								
OUT2	1	Status see parameter “Action Polarity”																																								
OUT1	0	No overwriting																																								

Continuation "Switching Menu":

No.	Parameter	Range	Default																																																																			
078	<p>Action Polarity (setting the output conditions):</p> <p>This setting-function is only effective in the Programming Mode and requires a selection of the corresponding outputs by the parameter "Action Output".</p> <p>The output-conditions are assignable by a 9 bit binary code:</p> <table><tr><td>OUT:</td><td>REL</td><td>4</td><td>/4</td><td>3</td><td>/3</td><td>2</td><td>/2</td><td>1</td><td>/1</td></tr><tr><td>Bit:</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>Binary:</td><td>1 0000 0000</td><td>0 1000 0000</td><td>0 0100 0000</td><td>0 0010 0000</td><td>0 0001 0000</td><td>0 0000 1000</td><td>0 0000 0100</td><td>0 0000 0010</td><td>0 0000 0001</td></tr><tr><td>Value:</td><td>256</td><td>128</td><td>64</td><td>32</td><td>16</td><td>8</td><td>4</td><td>2</td><td>1</td></tr></table> <p>Example: A setting of Action Output = 275 (binary 1 0001 0011) causes the following output conditions:</p> <table><tr><td>REL</td><td>1</td><td>Contact closed</td></tr><tr><td>OUT4</td><td>0</td><td>LOW</td></tr><tr><td>/OUT4</td><td>0</td><td>LOW</td></tr><tr><td>OUT3</td><td>0</td><td>LOW</td></tr><tr><td>/OUT3</td><td>1</td><td>HIGH</td></tr><tr><td>OUT2</td><td>0</td><td>LOW</td></tr><tr><td>/OUT2</td><td>0</td><td>LOW</td></tr><tr><td>OUT1</td><td>1</td><td>HIGH</td></tr><tr><td>/OUT1</td><td>1</td><td>HIGH</td></tr></table> <p>After the test, this parameter must be reset to default (= 0).</p>	OUT:	REL	4	/4	3	/3	2	/2	1	/1	Bit:	9	8	7	6	5	4	3	2	1	Binary:	1 0000 0000	0 1000 0000	0 0100 0000	0 0010 0000	0 0001 0000	0 0000 1000	0 0000 0100	0 0000 0010	0 0000 0001	Value:	256	128	64	32	16	8	4	2	1	REL	1	Contact closed	OUT4	0	LOW	/OUT4	0	LOW	OUT3	0	LOW	/OUT3	1	HIGH	OUT2	0	LOW	/OUT2	0	LOW	OUT1	1	HIGH	/OUT1	1	HIGH	0 - 511	0
OUT:	REL	4	/4	3	/3	2	/2	1	/1																																																													
Bit:	9	8	7	6	5	4	3	2	1																																																													
Binary:	1 0000 0000	0 1000 0000	0 0100 0000	0 0010 0000	0 0001 0000	0 0000 1000	0 0000 0100	0 0000 0010	0 0000 0001																																																													
Value:	256	128	64	32	16	8	4	2	1																																																													
REL	1	Contact closed																																																																				
OUT4	0	LOW																																																																				
/OUT4	0	LOW																																																																				
OUT3	0	LOW																																																																				
/OUT3	1	HIGH																																																																				
OUT2	0	LOW																																																																				
/OUT2	0	LOW																																																																				
OUT1	1	HIGH																																																																				
/OUT1	1	HIGH																																																																				
079	<p>Read Back OUT (output for the EDM function):</p> <p>Defines the read back output for the EDM function - with respect to inverting or non-inverting.</p> <table><tr><td>Bit 0</td><td>= 0 EDM function of OUT1 = 1 EDM function of /OUT1</td></tr><tr><td>Bit 1</td><td>= 0 EDM function of OUT2 = 1 EDM function of /OUT2</td></tr><tr><td>Bit 2</td><td>= 0 EDM function of OUT3 = 1 EDM function of /OUT3</td></tr><tr><td>Bit 3</td><td>= 0 EDM function of OUT4 = 1 EDM function of /OUT4</td></tr></table>	Bit 0	= 0 EDM function of OUT1 = 1 EDM function of /OUT1	Bit 1	= 0 EDM function of OUT2 = 1 EDM function of /OUT2	Bit 2	= 0 EDM function of OUT3 = 1 EDM function of /OUT3	Bit 3	= 0 EDM function of OUT4 = 1 EDM function of /OUT4	0 - 15	0																																																											
Bit 0	= 0 EDM function of OUT1 = 1 EDM function of /OUT1																																																																					
Bit 1	= 0 EDM function of OUT2 = 1 EDM function of /OUT2																																																																					
Bit 2	= 0 EDM function of OUT3 = 1 EDM function of /OUT3																																																																					
Bit 3	= 0 EDM function of OUT4 = 1 EDM function of /OUT4																																																																					

Continuation „Switching Menu“:

No.	Parameter	Range	Default								
080	Output Mode (output configuration): Defines the configuration of the outputs: <table><tr><td>Bit 0</td><td>= 0 OUT1 and /OUT1 are inverse = 1 OUT1 and /OUT1 are homogeneously</td></tr><tr><td>Bit 1</td><td>= 0 OUT2 and /OUT2 are inverse = 1 OUT2 and /OUT2 are homogeneously</td></tr><tr><td>Bit 2</td><td>= 0 OUT3 and /OUT3 are inverse = 1 OUT3 and /OUT3 are homogeneously</td></tr><tr><td>Bit 3</td><td>= 0 OUT3 and /OUT4 are inverse = 1 OUT3 and /OUT4 are homogeneously</td></tr></table>	Bit 0	= 0 OUT1 and /OUT1 are inverse = 1 OUT1 and /OUT1 are homogeneously	Bit 1	= 0 OUT2 and /OUT2 are inverse = 1 OUT2 and /OUT2 are homogeneously	Bit 2	= 0 OUT3 and /OUT3 are inverse = 1 OUT3 and /OUT3 are homogeneously	Bit 3	= 0 OUT3 and /OUT4 are inverse = 1 OUT3 and /OUT4 are homogeneously	0 - 15	0
Bit 0	= 0 OUT1 and /OUT1 are inverse = 1 OUT1 and /OUT1 are homogeneously										
Bit 1	= 0 OUT2 and /OUT2 are inverse = 1 OUT2 and /OUT2 are homogeneously										
Bit 2	= 0 OUT3 and /OUT3 are inverse = 1 OUT3 and /OUT3 are homogeneously										
Bit 3	= 0 OUT3 and /OUT4 are inverse = 1 OUT3 and /OUT4 are homogeneously										



- With homogeneous outputs, all inputs will be pulled down to GND in case of power or hardware failure. Thereby an error state cannot be clearly transmitted to another device by these outputs.
- Using homogeneous outputs will reduce the SIL level.

2.7. Control Menu

This chapter describes the features and configuration options of the control inputs. Depending on the mode (parameter "Operational Mode") two up to four HTL/PNP control inputs are available at the terminal [X10 | CONTROL IN].

Three different input configurations can be set by the parameter „Input Mode“:

- **Two 2-pole inputs (IN1, /IN1 + IN2, /IN2)**

The control inputs are either homogeneous or inversely. In this case each input requires a dual signal.

Input 1	[X10: 2] LOW	[X10: 3] LOW	Error if inverse	Configuration by parameter „IN1 Function“ and „IN1 Config“
	[X10: 2] LOW	[X10: 3] HIGH	Error if homogeneously	
	[X10: 2] HIGH	[X10: 3] LOW	Error if homogeneously	
	[X10: 2] HIGH	[X10: 3] HIGH	Error if inverse	
Input 2	[X10: 4] LOW	[X10: 5] LOW	Error if inverse	Configuration by parameter „IN2 Function“ and „IN2 Config“
	[X10: 4] LOW	[X10: 5] HIGH	Error if homogeneously	
	[X10: 4] HIGH	[X10: 5] LOW	Error if homogeneously	
	[X10: 4] HIGH	[X10: 5] HIGH	Error if inverse	

- **One 2-pole input (IN1, /IN1) and two 1-pole inputs (IN2 + /IN2)**

The 2-pole input is either homogeneous or inversely. The 2-pole control input requires a dual signal, while the 1-pole inputs only require a single signal. Thus three independent inputs are available.

Input 1	[X10: 2] LOW	[X10: 3] LOW	Error if inverse	Configuration by parameter „IN1 Function“ and „IN1 Config“
	[X10: 2] LOW	[X10: 3] HIGH	Error if homogeneously	
	[X10: 2] HIGH	[X10: 3] LOW	Error if homogeneously	
	[X10: 2] HIGH	[X10: 3] HIGH	Error if inverse	
Input 2	[X10: 4] LOW		Configuration by parameter „IN2 Function“ and „IN2 Config“	
	[X10: 4] HIGH			
Input 3	[X10: 5] LOW		Configuration by parameter „/IN2 Function“ and „/IN2 Config“	
	[X10: 5] HIGH			


- **Four 1-pole inputs (IN1 + /IN1 + IN2 + /IN2)**

The 1-pole inputs require only a single signal. Thus four independent inputs are available.

Input 1	[X10: 2] LOW	Configuration by parameter „IN1 Function“ and „IN1 Config“
	[X10: 2] HIGH	
Input 2	[X10: 3] LOW	Configuration by parameter „/IN1 Function“ and „/IN1 Config“
	[X10: 3] HIGH	
Input 3	[X10: 4] LOW	Configuration by parameter „IN2 Function“ and „IN2 Config“
	[X10: 4] HIGH	
Input 4	[X10: 5] LOW	Configuration by parameter „/IN2 Function“ and „/IN2 Config“
	[X10: 5] HIGH	

„Control Menu“

No.	Parameter	Range	Default																																																																		
081	<p>IN1 Function (assigns a function to input [X10 : 2]):</p> <p>This parameter defines the input function. The respective switching behavior can be specified by using the "IN1 Config" parameter.</p> <table><tr><td>0</td><td>No function assigned</td><td></td></tr><tr><td>1</td><td>Release lock of output OUT1</td><td>[dyn]</td></tr><tr><td>2</td><td>Release lock of output OUT2</td><td>[dyn]</td></tr><tr><td>3</td><td>Release lock of output OUT3</td><td>[dyn]</td></tr><tr><td>4</td><td>Release lock of output OUT4</td><td>[dyn]</td></tr><tr><td>5</td><td>Release lock of output REL1</td><td>[dyn]</td></tr><tr><td>6</td><td>Release all output locks together</td><td>[dyn]</td></tr><tr><td>7</td><td>Set Frequency1 Frequency simulation of Sensor1</td><td>[stat] [PRG]</td></tr><tr><td>8</td><td>Set Frequency2 Frequency simulation of Sensor2</td><td>[stat] [PRG]</td></tr><tr><td>9</td><td>Set Frequency12 Frequency simulation of Sensor1 und Sensor2</td><td>[stat] [PRG]</td></tr><tr><td>10</td><td>Freeze Frequency1 Freezes the actual encoder frequency of Sensor1</td><td>[stat] [PRG]</td></tr><tr><td>11</td><td>Freeze Frequency2 Freezes the actual encoder frequency of Sensor2</td><td>[stat] [PRG]</td></tr><tr><td>12</td><td>Freeze Frequency12 Freezes the encoder frequency of Sensor1 and Sensor2</td><td>[stat] [PRG]</td></tr><tr><td>13</td><td>Preselection Change Switchover between the upper and lower switching point. The changeover takes effect to all outputs.</td><td>[stat]</td></tr><tr><td>14</td><td>Clear Drift1 Clears the counter of position drift 1.</td><td>[dyn]</td></tr><tr><td>15</td><td>Clear Drift2 Clears the counter of position drift 2</td><td>[dyn]</td></tr><tr><td>16</td><td>Clear Drift12 Clears both counters (position drift 1 and 2)</td><td>[dyn]</td></tr><tr><td>17</td><td>EDM function of OUT1 or /OUT1</td><td></td></tr><tr><td>18</td><td>EDM function of OUT2 or /OUT2</td><td></td></tr><tr><td>19</td><td>EDM function of OUT3 or /OUT3</td><td></td></tr><tr><td>20</td><td>EDM function of OUT4 or /OUT4</td><td></td></tr><tr><td>21</td><td>Enable input for the output function of parameter „Switch Mode“ = 10 - 18</td><td>[stat]</td></tr></table> <p>[dyn] = dynamic function if a rising edge appears at the input [stat] = static permanent function [PRG] = function only in the "Programming Mode" active</p>	0	No function assigned		1	Release lock of output OUT1	[dyn]	2	Release lock of output OUT2	[dyn]	3	Release lock of output OUT3	[dyn]	4	Release lock of output OUT4	[dyn]	5	Release lock of output REL1	[dyn]	6	Release all output locks together	[dyn]	7	Set Frequency1 Frequency simulation of Sensor1	[stat] [PRG]	8	Set Frequency2 Frequency simulation of Sensor2	[stat] [PRG]	9	Set Frequency12 Frequency simulation of Sensor1 und Sensor2	[stat] [PRG]	10	Freeze Frequency1 Freezes the actual encoder frequency of Sensor1	[stat] [PRG]	11	Freeze Frequency2 Freezes the actual encoder frequency of Sensor2	[stat] [PRG]	12	Freeze Frequency12 Freezes the encoder frequency of Sensor1 and Sensor2	[stat] [PRG]	13	Preselection Change Switchover between the upper and lower switching point. The changeover takes effect to all outputs.	[stat]	14	Clear Drift1 Clears the counter of position drift 1.	[dyn]	15	Clear Drift2 Clears the counter of position drift 2	[dyn]	16	Clear Drift12 Clears both counters (position drift 1 and 2)	[dyn]	17	EDM function of OUT1 or /OUT1		18	EDM function of OUT2 or /OUT2		19	EDM function of OUT3 or /OUT3		20	EDM function of OUT4 or /OUT4		21	Enable input for the output function of parameter „Switch Mode“ = 10 - 18	[stat]	0 - 21	0
0	No function assigned																																																																				
1	Release lock of output OUT1	[dyn]																																																																			
2	Release lock of output OUT2	[dyn]																																																																			
3	Release lock of output OUT3	[dyn]																																																																			
4	Release lock of output OUT4	[dyn]																																																																			
5	Release lock of output REL1	[dyn]																																																																			
6	Release all output locks together	[dyn]																																																																			
7	Set Frequency1 Frequency simulation of Sensor1	[stat] [PRG]																																																																			
8	Set Frequency2 Frequency simulation of Sensor2	[stat] [PRG]																																																																			
9	Set Frequency12 Frequency simulation of Sensor1 und Sensor2	[stat] [PRG]																																																																			
10	Freeze Frequency1 Freezes the actual encoder frequency of Sensor1	[stat] [PRG]																																																																			
11	Freeze Frequency2 Freezes the actual encoder frequency of Sensor2	[stat] [PRG]																																																																			
12	Freeze Frequency12 Freezes the encoder frequency of Sensor1 and Sensor2	[stat] [PRG]																																																																			
13	Preselection Change Switchover between the upper and lower switching point. The changeover takes effect to all outputs.	[stat]																																																																			
14	Clear Drift1 Clears the counter of position drift 1.	[dyn]																																																																			
15	Clear Drift2 Clears the counter of position drift 2	[dyn]																																																																			
16	Clear Drift12 Clears both counters (position drift 1 and 2)	[dyn]																																																																			
17	EDM function of OUT1 or /OUT1																																																																				
18	EDM function of OUT2 or /OUT2																																																																				
19	EDM function of OUT3 or /OUT3																																																																				
20	EDM function of OUT4 or /OUT4																																																																				
21	Enable input for the output function of parameter „Switch Mode“ = 10 - 18	[stat]																																																																			



In case of simultaneous commands "Set Frequency" and "Frequency freeze" via both control inputs, the function "Set Frequency" has priority.

Continuation „Control Menu“

No.	Parameter	Range	Default																																																																								
082	<p>IN1 Config (switching behavior of input [X10 : 2]):</p> <p>This parameter defines the switching behavior of the input. The respective function assignment can be specified by using the "IN1 Function" parameter.</p> <table><tr><td>0</td><td>Inverse dual channel input (statically, LOW)</td></tr><tr><td>1</td><td>Inverse dual channel input (statically, HIGH)</td></tr><tr><td>2</td><td>Inverse dual channel input (dynamically, LOW)</td></tr><tr><td>3</td><td>Inverse dual channel input (dynamically, HIGH)</td></tr><tr><td>4</td><td>Homogeneous dual channel input (statically, LOW)</td></tr><tr><td>5</td><td>Homogeneous dual channel input (statically, HIGH)</td></tr><tr><td>6</td><td>Homogeneous dual channel input (dynamically, LOW)</td></tr><tr><td>7</td><td>Homogeneous dual channel input (dynamically, HIGH)</td></tr><tr><td>8</td><td>Single channel input (statically, LOW)</td></tr><tr><td>9</td><td>Single channel input (statically, HIGH)</td></tr><tr><td>10</td><td>Single channel input (dynamically, LOW)</td></tr><tr><td>11</td><td>Single channel input (dynamically, HIGH)</td></tr><tr><td>12</td><td>Single channel input EDM clock of OUT1</td></tr><tr><td>13</td><td>Single channel input EDM clock of /OUT1</td></tr><tr><td>14</td><td>Single channel input EDM clock of OUT2</td></tr><tr><td>15</td><td>Single channel input EDM clock of /OUT2</td></tr><tr><td>16</td><td>Single channel input EDM clock of OUT3</td></tr><tr><td>17</td><td>Single channel input EDM clock of /OUT3</td></tr><tr><td>18</td><td>Single channel input EDM clock of OUT4</td></tr><tr><td>19</td><td>Single channel input EDM clock of /OUT4</td></tr><tr><td>20</td><td>Pulsed single channel input of OUT1 (statically, HIGH)</td></tr><tr><td>21</td><td>Pulsed single channel input of /OUT1 (statically, HIGH)</td></tr><tr><td>22</td><td>Pulsed single channel input of OUT2 (statically, HIGH)</td></tr><tr><td>23</td><td>Pulsed single channel input of /OUT2 (statically, HIGH)</td></tr><tr><td>24</td><td>Pulsed single channel input of OUT3 (statically, HIGH)</td></tr><tr><td>25</td><td>Pulsed single channel input of /OUT3 (statically, HIGH)</td></tr><tr><td>26</td><td>Pulsed single channel input of OUT4 (statically, HIGH)</td></tr><tr><td>27</td><td>Pulsed single channel input of /OUT4 (statically, HIGH)</td></tr><tr><td>28</td><td>Pulsed single channel input of OUT1 (statically, LOW)</td></tr><tr><td>29</td><td>Pulsed single channel input of /OUT1 (statically, LOW))</td></tr><tr><td>30</td><td>Pulsed single channel input of OUT2 (statically, LOW)</td></tr><tr><td>31</td><td>Pulsed single channel input of /OUT2 (statically, LOW)</td></tr><tr><td>32</td><td>Pulsed single channel input of OUT3 (statically, LOW)</td></tr><tr><td>33</td><td>Pulsed single channel input of /OUT3 (statically, LOW)</td></tr><tr><td>34</td><td>Pulsed single channel input of OUT4 (statically, LOW)</td></tr><tr><td>35</td><td>Pulsed single channel input of /OUT4 (statically, LOW)</td></tr></table>	0	Inverse dual channel input (statically, LOW)	1	Inverse dual channel input (statically, HIGH)	2	Inverse dual channel input (dynamically, LOW)	3	Inverse dual channel input (dynamically, HIGH)	4	Homogeneous dual channel input (statically, LOW)	5	Homogeneous dual channel input (statically, HIGH)	6	Homogeneous dual channel input (dynamically, LOW)	7	Homogeneous dual channel input (dynamically, HIGH)	8	Single channel input (statically, LOW)	9	Single channel input (statically, HIGH)	10	Single channel input (dynamically, LOW)	11	Single channel input (dynamically, HIGH)	12	Single channel input EDM clock of OUT1	13	Single channel input EDM clock of /OUT1	14	Single channel input EDM clock of OUT2	15	Single channel input EDM clock of /OUT2	16	Single channel input EDM clock of OUT3	17	Single channel input EDM clock of /OUT3	18	Single channel input EDM clock of OUT4	19	Single channel input EDM clock of /OUT4	20	Pulsed single channel input of OUT1 (statically, HIGH)	21	Pulsed single channel input of /OUT1 (statically, HIGH)	22	Pulsed single channel input of OUT2 (statically, HIGH)	23	Pulsed single channel input of /OUT2 (statically, HIGH)	24	Pulsed single channel input of OUT3 (statically, HIGH)	25	Pulsed single channel input of /OUT3 (statically, HIGH)	26	Pulsed single channel input of OUT4 (statically, HIGH)	27	Pulsed single channel input of /OUT4 (statically, HIGH)	28	Pulsed single channel input of OUT1 (statically, LOW)	29	Pulsed single channel input of /OUT1 (statically, LOW))	30	Pulsed single channel input of OUT2 (statically, LOW)	31	Pulsed single channel input of /OUT2 (statically, LOW)	32	Pulsed single channel input of OUT3 (statically, LOW)	33	Pulsed single channel input of /OUT3 (statically, LOW)	34	Pulsed single channel input of OUT4 (statically, LOW)	35	Pulsed single channel input of /OUT4 (statically, LOW)	0 - 35	0
0	Inverse dual channel input (statically, LOW)																																																																										
1	Inverse dual channel input (statically, HIGH)																																																																										
2	Inverse dual channel input (dynamically, LOW)																																																																										
3	Inverse dual channel input (dynamically, HIGH)																																																																										
4	Homogeneous dual channel input (statically, LOW)																																																																										
5	Homogeneous dual channel input (statically, HIGH)																																																																										
6	Homogeneous dual channel input (dynamically, LOW)																																																																										
7	Homogeneous dual channel input (dynamically, HIGH)																																																																										
8	Single channel input (statically, LOW)																																																																										
9	Single channel input (statically, HIGH)																																																																										
10	Single channel input (dynamically, LOW)																																																																										
11	Single channel input (dynamically, HIGH)																																																																										
12	Single channel input EDM clock of OUT1																																																																										
13	Single channel input EDM clock of /OUT1																																																																										
14	Single channel input EDM clock of OUT2																																																																										
15	Single channel input EDM clock of /OUT2																																																																										
16	Single channel input EDM clock of OUT3																																																																										
17	Single channel input EDM clock of /OUT3																																																																										
18	Single channel input EDM clock of OUT4																																																																										
19	Single channel input EDM clock of /OUT4																																																																										
20	Pulsed single channel input of OUT1 (statically, HIGH)																																																																										
21	Pulsed single channel input of /OUT1 (statically, HIGH)																																																																										
22	Pulsed single channel input of OUT2 (statically, HIGH)																																																																										
23	Pulsed single channel input of /OUT2 (statically, HIGH)																																																																										
24	Pulsed single channel input of OUT3 (statically, HIGH)																																																																										
25	Pulsed single channel input of /OUT3 (statically, HIGH)																																																																										
26	Pulsed single channel input of OUT4 (statically, HIGH)																																																																										
27	Pulsed single channel input of /OUT4 (statically, HIGH)																																																																										
28	Pulsed single channel input of OUT1 (statically, LOW)																																																																										
29	Pulsed single channel input of /OUT1 (statically, LOW))																																																																										
30	Pulsed single channel input of OUT2 (statically, LOW)																																																																										
31	Pulsed single channel input of /OUT2 (statically, LOW)																																																																										
32	Pulsed single channel input of OUT3 (statically, LOW)																																																																										
33	Pulsed single channel input of /OUT3 (statically, LOW)																																																																										
34	Pulsed single channel input of OUT4 (statically, LOW)																																																																										
35	Pulsed single channel input of /OUT4 (statically, LOW)																																																																										

Continuation „Control Menu“

No.	Parameter	Range	Default						
083	<u>/IN1 Config</u> (switching behavior of input [X10 : 3]): The functions are identical to the parameter "IN1 Function"	0 - 21	0						
084	<u>/IN1 Config</u> (switching behavior of input [X10 : 3]): The functions are identical to the parameter "IN1 Config"	0 - 35	0						
085	<u>IN2 Config</u> (switching behavior of input [X10 : 4]): The functions are identical to the parameter "IN1 Function"	0 - 21	0						
086	<u>IN2 Config</u> (switching behavior of input [X10 : 4]): The functions are identical to the parameter "IN1 Config"	0 - 35	0						
087	<u>/IN2 Config</u> (switching behavior of input [X10 : 5]): The functions are identical to the parameter "IN1 Function"	0 - 21	0						
088	<u>/IN2 Config</u> (switching behavior of input [X10 : 5]): The functions are identical to the parameter "IN1 Config"	0 - 35	0						
089	<u>Input Mode</u> (input configuration): Defines the input types: <table border="1"><tr><td>0</td><td>Two dual-channel input pairs</td></tr><tr><td>1</td><td>One dual-channel input pair and two single inputs</td></tr><tr><td>2</td><td>Four single-ended inputs</td></tr></table>	0	Two dual-channel input pairs	1	One dual-channel input pair and two single inputs	2	Four single-ended inputs	0 - 2	0
0	Two dual-channel input pairs								
1	One dual-channel input pair and two single inputs								
2	Four single-ended inputs								
090	<u>Read Back Delay</u> (time until the read back is active again): Bounce time delay for an external relay of the EDM function	0000 - 1000 (sec)	0						
091	<i>Reserved</i>								

2.8. Serial Menu

No.	Parameter	Range	Default																						
092	Serial Unit No. (assigns a serial unit number): The devices can be assigned by unit numbers between 11 and 99 (default = 11). Please note: Unit numbers must not contain a 0 because these numbers are reserved for group- or bulk-addressing.	11 - 99	11																						
093	Serial Baud Rate (serial transmission speed): <table><tr><td>0</td><td>9 600 Baud</td></tr><tr><td>1</td><td>4 800 Baud</td></tr><tr><td>2</td><td>2 400 Baud</td></tr><tr><td>3</td><td>1 200 Baud</td></tr><tr><td>4</td><td>600 Baud</td></tr><tr><td>5</td><td>19 200 Baud</td></tr><tr><td>6</td><td>38 400 Baud</td></tr><tr><td>7</td><td>56 000 Baud</td></tr><tr><td>8</td><td>57 200 Baud</td></tr><tr><td>9</td><td>76 800 Baud</td></tr><tr><td>10</td><td>115 200 Baud</td></tr></table>	0	9 600 Baud	1	4 800 Baud	2	2 400 Baud	3	1 200 Baud	4	600 Baud	5	19 200 Baud	6	38 400 Baud	7	56 000 Baud	8	57 200 Baud	9	76 800 Baud	10	115 200 Baud	0 - 10	0
0	9 600 Baud																								
1	4 800 Baud																								
2	2 400 Baud																								
3	1 200 Baud																								
4	600 Baud																								
5	19 200 Baud																								
6	38 400 Baud																								
7	56 000 Baud																								
8	57 200 Baud																								
9	76 800 Baud																								
10	115 200 Baud																								
094	Serial Format (format of the serial data): <table><tr><td>0:</td><td>7 data bits, parity even, 1 stop bit</td></tr><tr><td>1:</td><td>7 data bits, parity even, 2 stop bits</td></tr><tr><td>2:</td><td>7 data bits, parity odd, 1 stop bit</td></tr><tr><td>3:</td><td>7 data bits, parity odd, 2 stop bits</td></tr><tr><td>4:</td><td>7 data bits, no parity*, 1 stop bit</td></tr><tr><td>5:</td><td>7 data bits, no parity*, 2 stop bits</td></tr><tr><td>6:</td><td>8 data bits, parity even, 1 stop bit</td></tr><tr><td>7:</td><td>8 data bits, parity odd, 1 stop bit</td></tr><tr><td>8:</td><td>8 data bits, no parity*, 1 stop bit</td></tr><tr><td>9:</td><td>8 data bits, no parity*, 2 stop bits</td></tr></table>	0:	7 data bits, parity even, 1 stop bit	1:	7 data bits, parity even, 2 stop bits	2:	7 data bits, parity odd, 1 stop bit	3:	7 data bits, parity odd, 2 stop bits	4:	7 data bits, no parity*, 1 stop bit	5:	7 data bits, no parity*, 2 stop bits	6:	8 data bits, parity even, 1 stop bit	7:	8 data bits, parity odd, 1 stop bit	8:	8 data bits, no parity*, 1 stop bit	9:	8 data bits, no parity*, 2 stop bits	0 - 9	0		
0:	7 data bits, parity even, 1 stop bit																								
1:	7 data bits, parity even, 2 stop bits																								
2:	7 data bits, parity odd, 1 stop bit																								
3:	7 data bits, parity odd, 2 stop bits																								
4:	7 data bits, no parity*, 1 stop bit																								
5:	7 data bits, no parity*, 2 stop bits																								
6:	8 data bits, parity even, 1 stop bit																								
7:	8 data bits, parity odd, 1 stop bit																								
8:	8 data bits, no parity*, 1 stop bit																								
9:	8 data bits, no parity*, 2 stop bits																								



*) With setting „no parity“ no secure data transmission guaranteed.
For a secure data transmission „Parity even“ or „Parity odd“ must be selected.

Continuation „Serial Menu“:

No.	Parameter	Range	Default				
095	<u>Serial Page</u> (serial page number of a variable): The Parameter serves only for diagnosis purposes by the manufacturer.	0 - 14	0				
096	<u>Serial Init:</u> This parameter determines the baud rate for the transmission of the initialization values to the operator surface OS6.0 respectively to the BG230 programming and display unit. <table><tr><td>0</td><td>The initialization values will be transmitted with 9600 baud. After that, the unit returns back to the baud rate set by the user.</td></tr><tr><td>1</td><td>The initialization values will be transmitted with the user setting. After that, the unit continues with this baud rate.</td></tr></table> With settings higher than 9600 baud the duration of the initialization can be shortened.	0	The initialization values will be transmitted with 9600 baud. After that, the unit returns back to the baud rate set by the user.	1	The initialization values will be transmitted with the user setting. After that, the unit continues with this baud rate.	0 - 1	0
0	The initialization values will be transmitted with 9600 baud. After that, the unit returns back to the baud rate set by the user.						
1	The initialization values will be transmitted with the user setting. After that, the unit continues with this baud rate.						
097	<i>Reserved</i>						

2.9. Splitter Menu

(Looping of Sensor Signals for further Target Units)


The Splitter function is only integrated in DS230 and DS240.

No.	Parameter	Range	Default				
098	<p>RS Selector (determination of the RS422 output source):</p> <p>This parameter defines which input frequency (Sensor1 or Sensor2) is exported at terminal [X4 RS422 OUT].</p> <p>The assignment of channels for sensor1 and sensor 2 is specified by the parameter „Operational Mode“.</p> <table><tr><td>0</td><td>Sensor1 A copy of the Sensor1 frequency appears at terminal [X4 RS422 OUT]</td></tr><tr><td>1</td><td>Sensor2 A copy of the Sensor2 frequency appears at terminal [X4 RS422 OUT]</td></tr></table> <p>Independent from the input signal, always incremental RS422 square-wave pulses are generated.</p> <p>SinCos signals are converted to incremental signals with 1 pulse / period (without an interpolation).</p>	0	Sensor1 A copy of the Sensor1 frequency appears at terminal [X4 RS422 OUT]	1	Sensor2 A copy of the Sensor2 frequency appears at terminal [X4 RS422 OUT]	0 - 1	0
0	Sensor1 A copy of the Sensor1 frequency appears at terminal [X4 RS422 OUT]						
1	Sensor2 A copy of the Sensor2 frequency appears at terminal [X4 RS422 OUT]						
099	<i>Reserved</i>						
100	<i>Reserved</i>						
101	<i>Reserved</i>						

2.10. Analog Menu

(Analog Output Configuration)

The setting of parameter "F1-F2-Selection" determines whether the frequency of Sensor1 or Sensor2 is used to generate the analog output signal.

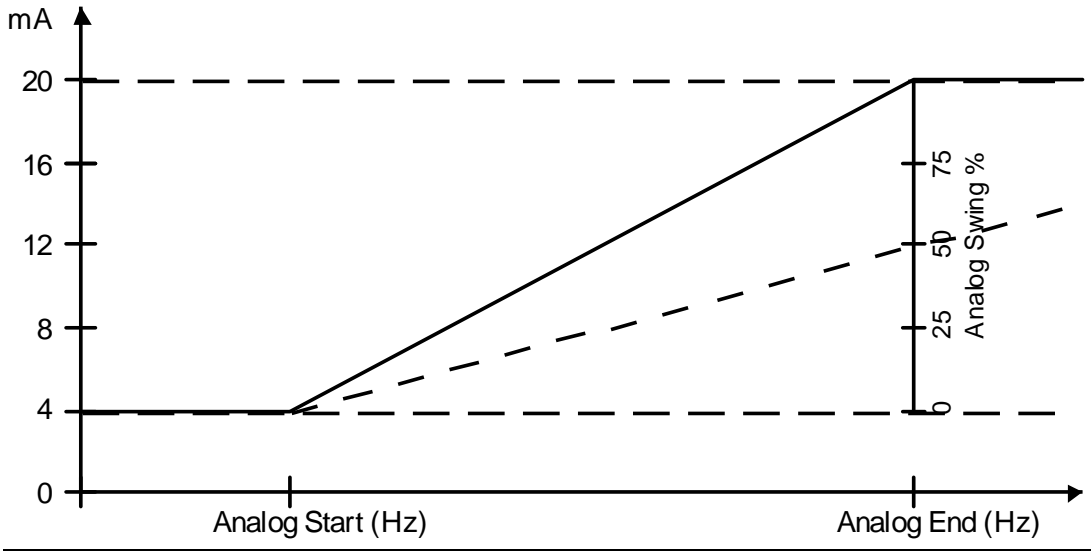No.	Parameter	Range	Default
102	Analog Start (initial value of the conversion range in Hz): Defines the initial frequency, at which the analog output should set its initial value of 4 mA.	-500 000.0 - 500 000.0 (Hz)	0
103	Analog End (final value of the conversion range in Hz): Defines the final frequency, at which the analog output should set its final value of 20 mA.		100 000
104	Analog Gain (gain of the D/A converter): With a setting of 100, the frequency curve between the parameters „Analog Start“ and „Analog End“ corresponds to the whole stroke of 16 mA (20 mA – 4 mA). With a setting of e. g. 50 the stroke would be only 8 mA and the analog output supplies a value of $4 + 8 = 12$ mA when reaching the end frequency of parameter „Analog End“.	1 - 1 000	100
			
105	Analog Offset (fine adjustment of the zero point in μ A): Accurate adjustment of the analog offset within a fine range.	-25 ... +25 (μ A)	0
106	<i>Reserved</i>		

2.11. OPU Menu

(Operational Unit Menu in case of a connected BG230)

No	Parameter	Range	Default
107	<u>X Factor 1</u> (no function for DS, internal BG parameter)	1 - 999 999	1
108	<u>/ Factor 1</u> (no function for DS, internal BG parameter)	1 - 999 999	1
109	<u>+/- Value 1</u> (no function for DS, internal BG parameter)	-999 999 - 999 999	0
110	<u>Units 1</u> (no function for DS, internal BG parameter)	0 - 12	0
111	<u>Decimal Point 1</u> (no function for DS, internal BG parameter)	0 - 5	0
112	<u>X Factor 2</u> (no function for DS, internal BG parameter)	1 - 999 999	1
113	<u>/ Factor 2</u> (no function for DS, internal BG parameter)	1 - 999 999	1
114	<u>+/- Value 2</u> (no function for DS, internal BG parameter)	-999 999 - 999 999	0
115	<u>Units 2</u> (no function for DS, internal BG parameter)	0 - 12	0
116	<u>Decimal Point 2</u> (no function for DS, internal BG parameter)	0 - 5	0
117	<i>Reserved</i>		
118	<i>Reserved</i>		
119	<i>Reserved</i>		

Hint: The actual BG230 operating manual describes further details about these parameters.

3. Parameter List

No.	Parameter	Min. Value	Max. Value	Default	Characters	Decimal Places	Serial Code
000	Operational Mode	0	9	0	1	0	A0
001	Sampling Time	1	9999	1	4	3	A1
002	Wait Time	10	9999	1000	4	3	A2
003	F1-F2 Selection	0	1	0	1	0	A3
004	Div. Switch %-f	0	99999	10000	5	2	A4
005	Div. %-Value	1	100	10	3	0	A5
006	Div. f-Value	0	9999	3000	4	2	A6
007	Div. Calculation	0	1	0	1	0	A7
008	Div. Filter	0	20	1	2	0	A8
009	Error Simulation	0	2	1	1	0	A9
010	Power-up Delay	1	1000	100	4	3	B0
011	<i>Reserved</i>	0	10000	1000	5	0	B1
012	<i>Reserved</i>	0	10000	1000	5	0	B2
013	Direction1	0	1	0	1	0	B3
014	Multiplier1	1	10000	1	5	0	B4
015	Divisor1	1	10000	1	5	0	B5
016	Position Drift1	0	100000	0	6	0	B6
017	Phase Err Count1	1	1000	10	4	0	B7
018	Set Frequency1	-5000000	5000000	0	87	1	B8
019	<i>Reserved</i>	0	10000	1000	5	0	B9
020	Direction2	0	1	0	1	0	C0
021	Multiplier2	1	10000	1	5	0	C1
022	Divisor2	1	10000	1	5	0	C2
023	Position Drift2	0	100000	0	6	0	C3
024	Phase Err Count2	1	1000	10	4	0	C4
025	Set Frequency2	-5000000	5000000	0	87	1	C5
026	<i>Reserved</i>	0	10000	1000	5	0	C6
027	Preselect OUT1.H	-5000000	5000000	10000	87	1	C7
028	Preselect OUT1.L	-5000000	5000000	20000	87	1	C8
029	Preselect OUT1.D	0	9999999	0	07	0	M0
030	Preselect OUT2.H	-5000000	5000000	30000	87	1	C9
031	Preselect OUT2.L	-5000000	5000000	40000	87	1	D0
032	Preselect OUT2.D	0	9999999	0	07	0	M1
033	Preselect OUT3.H	-5000000	5000000	50000	87	1	D1
034	Preselect OUT3.L	-5000000	5000000	60000	87	1	D2
035	Preselect OUT3.D	0	9999999	0	07	0	M2
036	Preselect OUT4.H	-5000000	5000000	70000	87	1	D3
037	Preselect OUT4.L	-5000000	5000000	80000	87	1	D4
038	Preselect OUT4.D	0	9999999	0	07	0	M3
039	Preselect REL1.H	-5000000	5000000	1000	87	1	D5
040	Preselect REL1.L	-5000000	5000000	2000	87	1	D6
041	Preselect REL1.D	0	9999999	0	07	0	M4
042	<i>Reserved</i>	0	10000	1000	5	0	D8

Continuation „Parameter List“:

No.	Parameter	Min. Value	Max. Value	Default	Characters	Decimal Places	Serial Code
043	Switch Mode OUT1	0	10	0	1	0	D9
044	Switch Mode OUT2	0	10	0	1	0	E0
045	Switch Mode OUT3	0	10	0	1	0	E1
046	Switch Mode OUT4	0	10	0	1	0	E2
047	Switch Mode REL1	0	10	0	1	0	E3
048	Pulse Time OUT1	0	9999	0	4	3	E4
049	Pulse Time OUT2	0	9999	0	4	3	E5
050	Pulse Time OUT3	0	9999	0	4	3	E6
051	Pulse Time OUT4	0	9999	0	4	3	E7
052	Pulse Time REL1	0	9999	0	4	3	E8
053	Hysteresis OUT1	0	1000	0	4	1	E9
054	Hysteresis OUT2	0	1000	0	4	1	F0
055	Hysteresis OUT3	0	1000	0	4	1	F1
056	Hysteresis OUT4	0	1000	0	4	1	F2
057	Hysteresis REL1	0	1000	0	4	1	F3
058	Matrix OUT 1	0	511	0	3	0	K0
059	Matrix OUT 2	0	511	0	3	0	K1
060	Matrix OUT 3	0	511	0	3	0	K2
061	Matrix OUT 4	0	511	0	3	0	K3
062	Matrix REL1	0	511	0	3	0	K4
063	MIA-Delay OUT1	0	99999	0	5	0	K5
064	MIA-Delay OUT 2	0	99999	0	5	0	K6
065	MIA-Delay OUT 3	0	99999	0	5	0	K7
066	MIA-Delay OUT 4	0	99999	0	5	0	K8
067	MIA-Delay REL1	0	99999	0	5	0	K9
068	MAI-Delay OUT 1	0	99999	0	5	0	L0
069	MAI-Delay OUT 2	0	99999	0	5	0	L1
070	MAI-Delay OUT 3	0	99999	0	5	0	L2
071	MAI-Delay OUT 4	0	99999	0	5	0	L3
072	MAI-Delay REL1	0	99999	0	5	0	L4
073	Startup Mode	0	10	0	1	0	F4
074	Startup Output	0	31	0	2	0	F5
075	Standstill Time	0	9999	0	4	3	F6
076	Lock Output	0	31	0	2	0	F7
077	Action Output	0	31	0	2	0	F8
078	Action Polarity	0	511	0	3	0	F9
079	Read Back OUT	0	15	0	2	0	60
080	Output Mode	0	15	0	2	0	61

Continuation „Parameter List“:

No.	Parameter	Min. Value	Max. Value	Default	Characters	Decimal Places	Serial Code
081	IN1 Function	0	21	0	2	0	G2
082	IN1 Config	0	35	0	2	0	G3
083	/IN1 Function	0	21	0	2	0	I0
084	/IN1 Config	0	35	0	2	0	I1
085	IN2 Function	0	21	0	2	0	G4
086	IN2 Config	0	35	0	2	0	G5
087	/IN2 Function	0	21	0	2	0	I2
088	/IN2 Config	0	35	0	2	0	I3
089	Input Mode	0	2	0	1	0	I4
090	Read Back Delay	0	1000	0	4	3	G6
091	<i>Reserved</i>	0	10000	1000	5	0	G7
092	Serial Unit Nr.	11	99	11	2	0	90
093	Serial Baud Rate	0	10	0	2	0	91
094	Serial Format	0	9	0	1	0	92
095	Serial Page	0	14	0	2	0	~0
096	Serial Init	0	1	0	1	0	9~
097	<i>Reserved</i>	0	10000	1000	5	0	H0
098	RS Selector	0	1	0	1	0	H1
099	<i>Reserved</i>	0	10000	1000	5	0	H2
100	<i>Reserved</i>	0	10000	1000	5	0	H3
101	<i>Reserved</i>	0	10000	1000	5	0	H4
102	Analog Start	-5000000	5000000	0	87	1	H5
103	Analog End	-5000000	5000000	100000	87	1	H6
104	Analog Gain	1	1000	100	4	0	H7
105	Analog Offset	-100	100	0	83	0	H8
106	<i>Reserved</i>	0	10000	1000	5	0	H9
107	X Factor 1	1	999999	1	6	0	z0
108	/ Factor 1	1	999999	1	6	0	z1
109	+/- Value 1	-999999	999999	0	86	0	z2
110	Units 1	0	12	0	2	0	z3
111	Decimal Point 1	0	5	0	1	0	z4
112	X Factor 2	1	999999	1	6	0	z5
113	/ Factor 2	1	999999	1	6	0	z6
114	+/- Value 2	-999999	999999	0	86	0	z7
115	Units 2	0	12	0	2	0	z8
116	Decimal Point 2	0	5	0	1	0	z9
117	<i>Reserved</i>	0	10000	1000	5	0	J0
118	<i>Reserved</i>	0	10000	1000	5	0	J1
119	<i>Reserved</i>	0	10000	1000	5	0	00